


FLOOREQUIPMENTPARTS.COM

Parts List

Model C1415---

www.hoover.com

ASSEMBLY SCHEMATIC

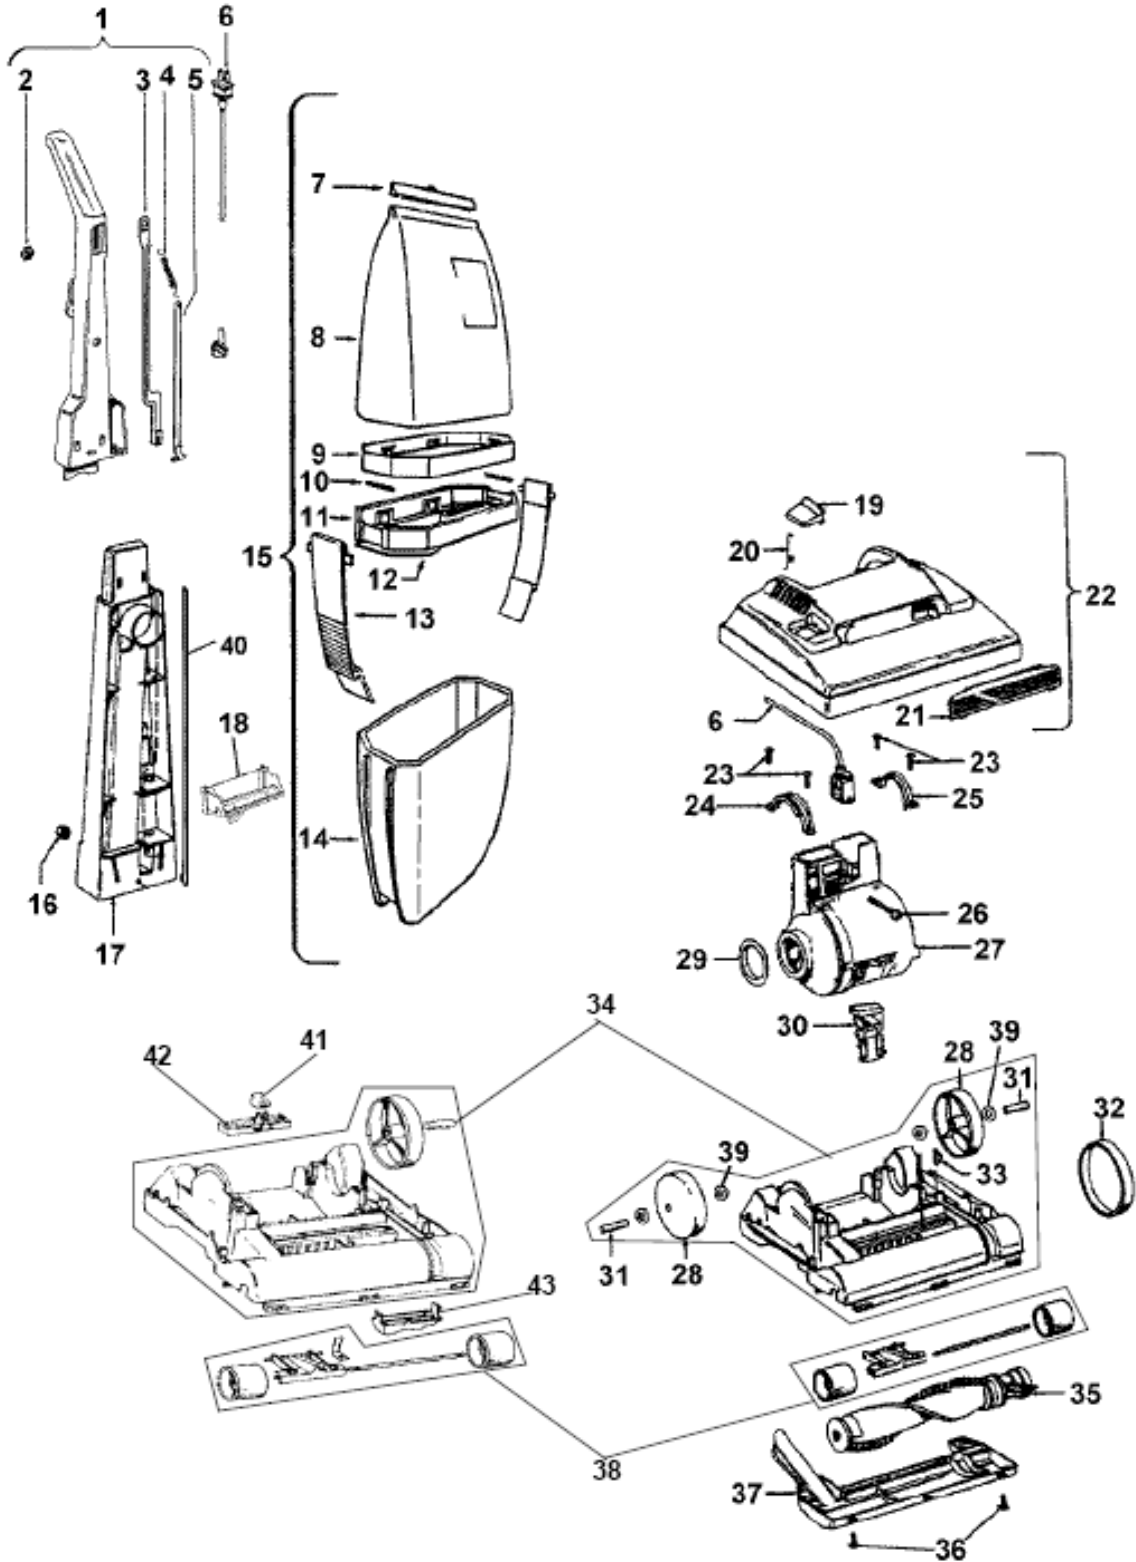

Model C1415---


ITEM	PART NUMBER	MODELS TO FIT	PART DESCRIPTION
1	48663179	C1415	HANDLE
2	38421015	C1415	SWITCH BUTTON
3	38458011	C1415	UPPER SWITCH ROD
4	38335020	C1415	BAG STRAP SPRING
5	36425071	C1415	BAG STRAP
6	46368005	C1415	POWER CORD - 35' BLACK
7	36425067	C1415	BAG HOLDER
8	43681010	C1415	BAG ASSEMBLY COMPLETE
9	35173001	C1415	BAG EXPANDER
10	34122009	C1415	SEAL
11	36426045	C1415	DIRT CUP SUPPORT
12	34123020	C1415	GASKET
13	36155011	C1415	LATCH
14	38775064	C1415	DIRT CUP
15	43681015	C1415	BAG ASSEMBLY COMPLETE WITH DIRT CUP
16	40201085	C1415	NUT AND BOLT ASSEMBLY
17	48669017	C1415	LOWER HANDLE ASSEMBLY
18	36426050	C1415	DIRT CUP SUPPORT - LOWER
19	37257257	C1415	DOOR - PRIOR TO 4/4/08
	37257143	C1415	DOOR - AFTER 4/4/08
20	38351013	C1415	SPRING
21	37246130	C1415	NOZZLE COVER PANEL
22	42252A94	C1415	HOOD / NOZZLE COVER - PRIOR TO 4/4/08
	42252B43	C1415	HOOD / NOZZLE COVER - AFTER 4/4/08
23	21447217	C1415	SCREW - SELF TAPPING
24	36131057	C1415	MOTOR RETAINER CAP
25	36131090	C1415	MOTOR REATINER
26	40201085	C1415	NUT AND BOLT ASSEMBLY
27	43576201	C1415	MOTOR
28	38522011	C1415	REAR WHEEL
29	38784016	C1415	SEAL
30	38458022	C1415	HANDLE RELEASE LEVER
31	31531008	C1415	WHEEL SHAFT
32	38528040	C1415	BELT
33	013261AY	C1415	RIB SHOE

Model C1415---

ITEM	PART NUMBER	MODELS TO FIT	PART DESCRIPTION
34	42242280	C1415	MAIN BODY / NOZZLE BASE ASSEMBLY - PRIOR TO 4/4/08
	42242281	C1415	MAIN BODY / NOZZLE BASE ASSEMBLY - AFTER 4/8/08
35	48414081	C1415	AGITATOR / BRUSH ROLL ASSEMBLY
36	21447121	C1415	SCREW
37	37245017	C1415	BOTTOM PLATE / NOZZLE GUARD
38	43248072	C1415	FRONT WHEEL - PRIOR TO 4/4/08
	43248073	C1415	FRONT WHEEL - AFTER 4/8/08
39	21312787	C1415	WASHER
40	38458046	C1415	LOWER SWITCH ROD
41	38421070	C1415	INDICATOR KNOB - AFTER 4/8/08
42	38567008	C1415	CAM ACTUATOR - AFTER 4/8/08
43	38563011	C1415	HEIGHT ADJUSTMENT CAM - AFTER 4/8/08

Parts List
Model C1415---
www.hoover.com

ASSEMBLY SCHEMATIC

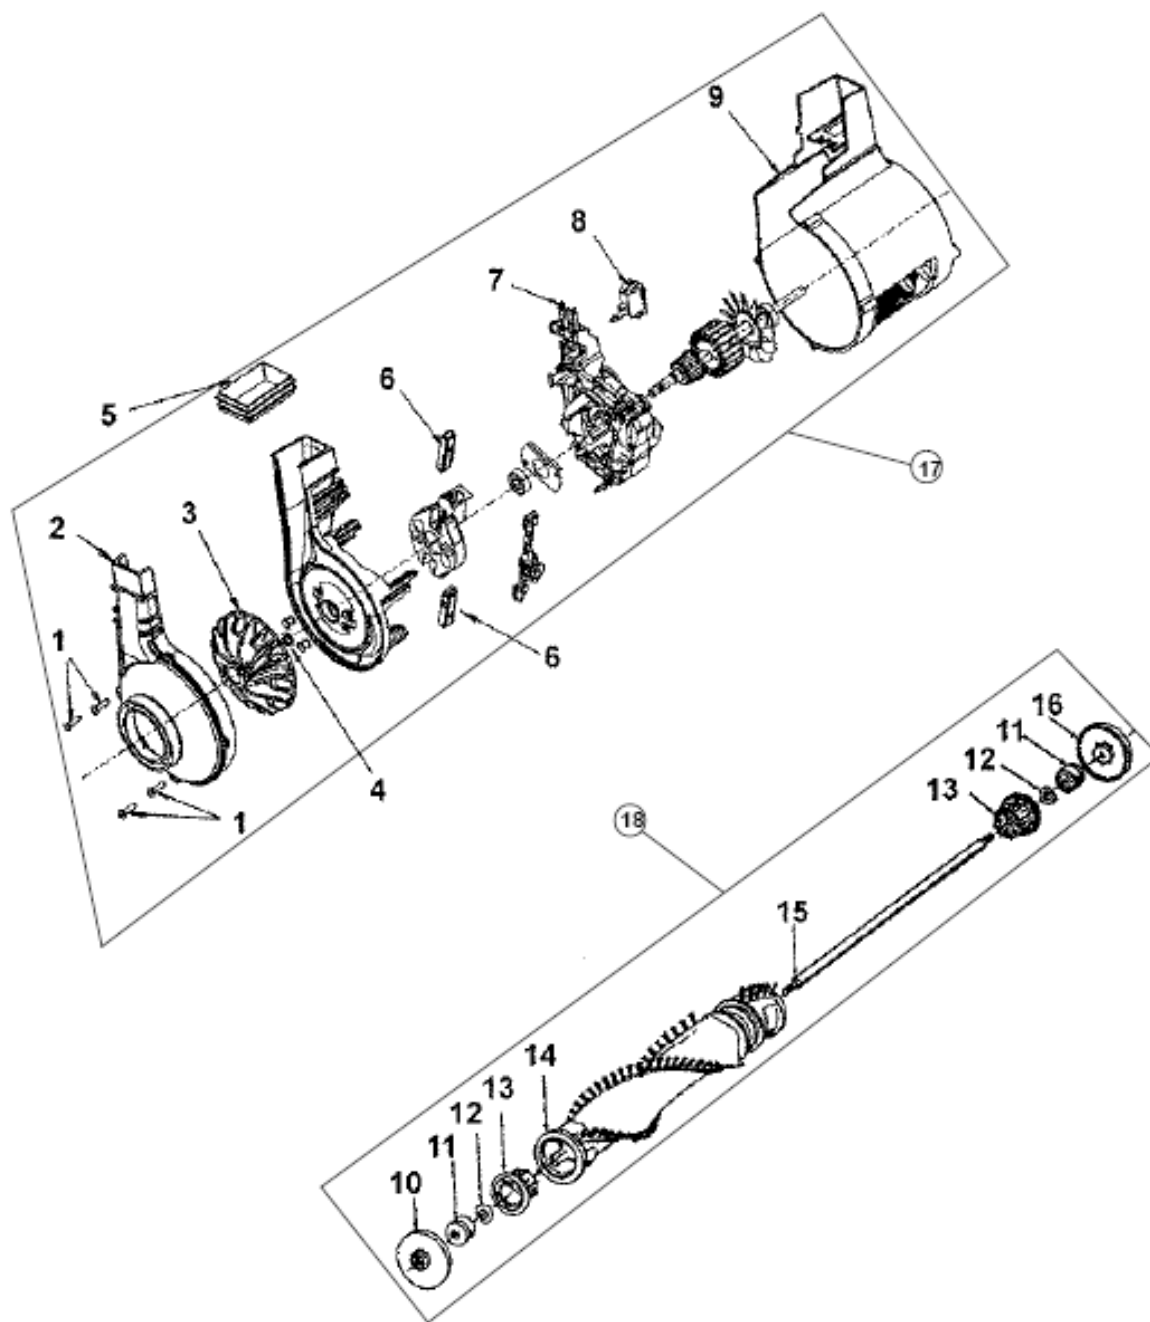

Model C1415---

ITEM	PART NUMBER	MODELS TO FIT	PART DESCRIPTION
1	214793DA	C1415	SCREW - SELF TAPPING 5/8"
2	38736033	C1415	FAN CHAMBER
3	43565006	C1415	FAN / NUT ASSEMBLY
4	21312793	C1415	WASHER
5	38783020	C1415	DUCT SEAL - MOLDED
6	41311022	C1415	MOTOR BRUSH
7	36914004	C1415	SWITCH BAR
8	28218043	C1415	ROCKER SWITCH
9	37194049	C1415	MOTOR END CAP
10	36423016	C1415	THREAD GUARD - RIGHT
11	43267002	C1415	AGITATOR BEARING ASSEMBLY
12	21347003	C1415	CONICAL WASHER
13	36422022	C1415	AGITATOR END
14		C1415	AGITATOR BODY
15		C1415	AGITATOR ROD
16	36423017	C1415	THREAD GUARD - LEFT
17	43576201	C1415	MOTOR ASSEMBLY
18	48414081	C1415	AGITATOR / BRUSH ROLL ASSEMBLY