




# 8210

## Operator Manual

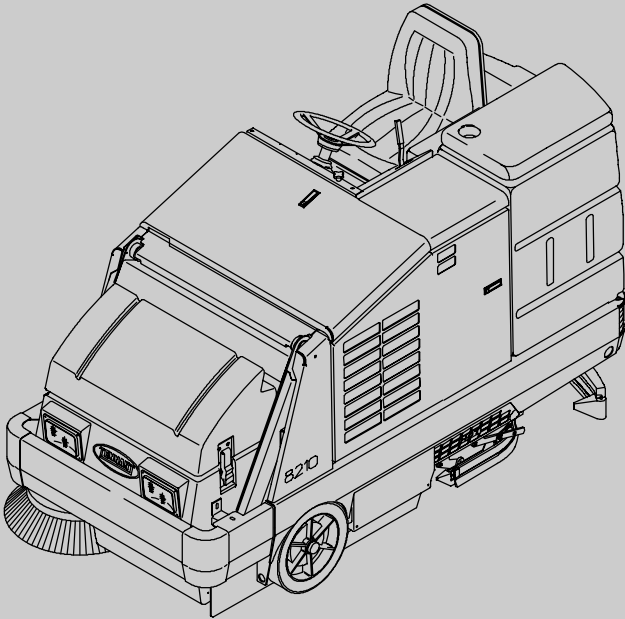


This manual is furnished with each new model. It provides necessary operation and maintenance instructions.

**Read this manual completely and understand the machine before operating or servicing it.**


This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly - per the machine maintenance instructions provided.
- The machine is maintained with manufacturer supplied or equivalent parts.



**PROTECT THE ENVIRONMENT**

Please dispose of packaging materials, old machine components such as batteries, hazardous fluids such as antifreeze and oil, in a safe environmentally way according to your local waste disposal regulations.



Always remember to recycle.

---

## MACHINE DATA

---

Please fill out at time of installation for future reference.

Model No.- 8210

Serial No.- \_\_\_\_\_

Machine Options - \_\_\_\_\_

Sales Rep. - \_\_\_\_\_

Sales Rep. phone no. - \_\_\_\_\_

Customer Number - \_\_\_\_\_

Installation Date - \_\_\_\_\_

**Tennant Company**

PO Box 1452

Minneapolis, MN 55440

Phone: (800) 553-8033 or (763) 523-2850



**CALIFORNIA PROPOSITION 65 WARNING:**

**Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

MAXPRO and ES are United States registered trademarks of the Tennant Company

Thermo Sentry is a United States trademark of Tennant Company.

Specifications and parts are subject to change without notice.

Copyright © 1998-2000, 2002-2006 TENNANT, Printed in U.S.A.

**CONTENTS**

	Page		Page
SAFETY PRECAUTIONS .....	3	HOPPER DOOR CLOSED LIGHT	
OPERATION .....	7	(OPTION) .....	32
OPERATOR RESPONSIBILITY .....	7	HYDRAULIC FILTER BYPASS LIGHT	
MACHINE COMPONENTS .....	8	(OPTION) .....	32
SYMBOL DEFINITIONS .....	9	HORN BUTTON .....	32
CONTROLS AND INSTRUMENTS .....	11	CIRCUIT BREAKERS .....	33
OPERATION OF CONTROLS .....	12	FUSES (GM ENGINE) .....	33
DIRECTIONAL PEDAL .....	12	OPERATOR SEAT .....	34
BRAKE PEDAL .....	13	DELUXE SUSPENSION SEAT	
PARKING BRAKE PEDAL .....	13	(OPTION) .....	34
IGNITION SWITCH .....	13	HOPPER SUPPORT BAR .....	35
STEERING WHEEL .....	14	ENGINE COVER GAS SPRING .....	35
STEERING COLUMN TILT LEVER ..	14	LATCHES .....	35
CHECK ENGINE LIGHT (GM ENGINE)	14	HOW THE MACHINE WORKS .....	36
SCRUB SWITCH .....	15	PRE-OPERATION CHECKLIST .....	37
SWEEP SWITCH .....	16	CHANGING AN LPG FUEL TANK .....	38
SIDE BRUSH SWITCH .....	16	STARTING THE MACHINE .....	40
HOURMETER .....	17	SWEEPING, SCRUBBING, AND	
FUEL LEVEL GAUGE .....	17	BRUSH INFORMATION .....	42
HOPPER LEVER .....	18	SWEEPING .....	44
MAIN SWEEP BRUSH DOWN		STOP SWEEPING .....	45
PRESSURE KNOB .....	18	EMPTYING THE HOPPER .....	46
SIDE BRUSH DOWN PRESSURE		FILLING THE TANKS .....	48
HANDLE .....	19	SCRUBBING .....	50
CONTROL PANEL .....	19	DOUBLE SCRUBBING .....	53
SETTING THE DISPLAY CLOCK .....	20	STOP SCRUBBING .....	53
MAINTENANCE MODE .....	21	DRAINING AND CLEANING THE TANKS	54
RESETTING THE MAINTENANCE		STOP THE MACHINE .....	57
TIMERS .....	22	POST-OPERATION CHECKLIST .....	59
DISABLING THE MAINTENANCE		ENGAGING HOPPER SUPPORT BAR .	60
MODE .....	23	DISENGAGING HOPPER SUPPORT	
OPERATING LIGHTS SWITCH .....	24	BAR .....	62
OPERATING/HAZARD LIGHT		OPERATION ON INCLINES .....	63
SWITCH (OPTION) .....	24	TIE DOWNS .....	63
SOLUTION FLOW SWITCH .....	24	MACHINE TROUBLESHOOTING .....	64
MANUAL FLOW VALVE .....	25	MAINTENANCE .....	66
ENGINE CHOKE KNOB		MAINTENANCE CHART .....	66
(FORD ENGINE) .....	25	LUBRICATION .....	68
SWEEP VACUUM FAN SWITCH .....	25	ENGINE (FORD) .....	68
HOPPER DOOR SWITCH .....	26	ENGINE (GM) .....	68
FILTER SHAKER SWITCH .....	26	REAR WHEEL SUPPORT .....	69
EDGE SCRUB SWITCH .....	27	FRONT WHEEL BEARINGS .....	70
SQUEEGEE SWITCH .....	27	HOPPER LIFT ARM PIVOTS .....	70
ES SWITCH (OPTION) .....	28	SCRUB HEAD DRAG LINK ARMS ...	70
DETERGENT PUMP SWITCH		HYDRAULICS .....	71
(OPTION) .....	29	HYDRAULIC FLUID RESERVOIR ...	71
ENGINE SPEED SWITCH .....	29	HYDRAULIC FLUID .....	72
CHARGING SYSTEM LIGHT .....	30	HYDRAULIC HOSES .....	73
ENGINE OIL PRESSURE LIGHT .....	30	PROPELLING MOTOR .....	73
ENGINE WATER TEMPERATURE		ENGINE .....	74
LIGHT .....	30	COOLING SYSTEM .....	74
HOPPER TEMPERATURE LIGHT -		AIR FILTER INDICATOR (OPTIONAL)	75
THERMO SENTRY .....	31	AIR FILTER .....	75
CLOGGED FILTER LIGHT (OPTION)	31	FUEL FILTER (GASOLINE) .....	76
		FUEL FILTER (GM LPG) .....	76
		SPARK PLUGS .....	76
		CRANKCASE VENTILATION SYSTEM	76

# CONTENTS

	Page		Page
INTAKE MANIFOLD (FORD) .....	76	PUSHING, TOWING, AND	
TIMING BELT (GM) .....	76	TRANSPORTING THE MACHINE ...	100
BATTERY .....	77	PUSHING OR TOWING	
BELTS AND CHAINS .....	78	THE MACHINE .....	100
ENGINE AND ACCESSORY PUMP BELT		TRANSPORTING THE MACHINE ...	101
(FORD) .....	78	MACHINE JACKING .....	103
ENGINE BELT (GM) .....	78	STORING MACHINE .....	103
STATIC DRAG CHAIN .....	79	SPECIFICATIONS .....	104
DEBRIS HOPPER .....	80	GENERAL MACHINE PERFORMANCE .	104
HOPPER DUST FILTER .....	80	POWER TYPE .....	105
REMOVING HOPPER DUST		STEERING .....	105
FILTER .....	81	HYDRAULIC SYSTEM .....	106
THERMO SENTRY .....	81	BRAKING SYSTEM .....	106
SCRUB HEAD .....	82	TIRES .....	106
BRUSHES .....	82	MACHINE DIMENSIONS .....	107
MAIN SWEEP BRUSH .....	82	INDEX .....	108
REPLACING MAIN SWEEP			
BRUSH .....	83		
CHECKING AND ADJUSTING MAIN			
SWEEP BRUSH PATTERN ...	85		
SIDE BRUSH .....	87		
REPLACING SIDE BRUSH .....	88		
SCRUB BRUSHES .....	89		
REPLACING THE SCRUB			
BRUSHES .....	90		
SOLUTION SYSTEM .....	90		
RECOVERY TANK .....	90		
SOLUTION TANK .....	91		
SQUEEGEES .....	91		
REAR SQUEEGEE .....	91		
LEVELING THE REAR SQUEEGEE	92		
ADJUSTING REAR SQUEEGEE			
BLADE DEFLECTION .....	93		
SIDE SQUEEGEES .....	94		
ADJUSTING THE SIDE SQUEEGEES	94		
SQUEEGEE BLADES .....	94		
REAR SQUEEGEE .....	94		
REPLACING OR ROTATING REAR			
SQUEEGEE BLADES .....	94		
SIDE SQUEEGEES .....	95		
REPLACING SIDE SQUEEGEE			
BLADES .....	95		
SKIRTS AND SEALS .....	96		
REAR SKIRTS .....	96		
BRUSH DOOR SEALS .....	96		
HOPPER LIP SKIRTS .....	96		
HOPPER SEALS .....	97		
HOPPER DOOR SEALS .....	97		
HOPPER FILTER SEALS .....	97		
HOPPER VACUUM FAN SEAL .....	98		
TANK COVER SEALS .....	98		
BRAKES AND TIRES .....	99		
SERVICE BRAKES .....	99		
PARKING BRAKE .....	99		
TIRES .....	99		
REAR WHEEL .....	99		

## SAFETY PRECAUTIONS

The following precautions are used throughout this manual as indicated in their description:



**WARNING:** To warn of hazards or unsafe practices that could result in severe personal injury or death.

**FOR SAFETY:** To identify actions that must be followed for safe operation of equipment.

**CAUTION:** To warn of unsafe practices that could result in minor or moderate personal injury.

The machine is suited to sweep disposable debris. Do not use the machine other than described in this Operator Manual. The machine is not designed for use on public roads.

The following information signals potentially dangerous conditions to the operator or equipment:



**WARNING:** Engine emits toxic gases. Severe respiratory damage or asphyxiation can result. Provide adequate ventilation. Consult with your regulatory authorities for exposure limits. Keep engine properly tuned.



**WARNING:** Raised hopper may fall. Engage hopper support bar.



**WARNING:** Lift arm pinch point. Stay clear of hopper lift arms.



**WARNING:** Moving belt and fan. Keep away.



**WARNING:** Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).



**WARNING:** Flammable materials or reactive metals can cause explosion or fire. Do not pick up.



**WARNING:** Hot bumper. Keep away.



**CAUTION:** LPG engine will run for a few seconds after the key is turned off. Apply the parking brake before leaving the machine.

## FOR SAFETY:

1. Do not operate machine:
  - Unless trained and authorized.
  - Unless operator manual is read and understood.
  - If it is not in proper operating condition.
  - In flammable or explosive areas unless designed for use in those areas.
  - In areas with possible falling objects unless equipped with overhead guard.
2. Before starting machine:
  - Check for fuel, oil, and liquid leaks.
  - Keep sparks and open flame away from refueling area.
  - Make sure all safety devices are in place and operate properly.
  - Check brakes and steering for proper operation.
3. When starting machine:
  - Keep foot on brake and directional pedal in neutral.
4. When using machine:
  - Use brakes to stop machine.
  - Go slow on inclines and slippery surfaces.
  - Use care when reversing machine.
  - Move machine with care when hopper is raised.
  - Make sure adequate clearance is available before raising hopper.
  - Do not carry passengers on machine.
  - Always follow safety and traffic rules.
  - Report machine damage or faulty operation immediately.
  - Follow mixing and handling instructions on chemical containers.
5. Before leaving or servicing machine:
  - Stop on level surface.
  - Set parking brake.
  - Turn off machine and remove key.

## **SAFETY PRECAUTIONS**

---

- 6. When servicing machine:**
  - **Avoid moving parts. Do not wear loose jackets, shirts, or sleeves.**
  - **Block machine tires before jacking machine up.**
  - **Jack machine up at designated locations only. Block machine up with jack stands.**
  - **Use hoist or jack that will support the weight of the machine.**
  - **Wear eye and ear protection when using pressurized air or water.**
  - **Disconnect battery connections before working on machine.**
  - **Avoid contact with battery acid.**
  - **Avoid contact with hot engine coolant.**
  - **Allow engine to cool.**
  - **Keep flames and sparks away from fuel system service area. Keep area well ventilated.**
  - **Use cardboard to locate leaking hydraulic fluid under pressure.**
  - **Use Tennant supplied or approved replacement parts.**
  
- 7. When loading/unloading machine onto/off truck or trailer:**
  - **Turn off machine.**
  - **Use truck or trailer that will support the weight of the machine.**
  - **Use winch. Do not drive the machine onto/off the truck or trailer unless the load height is 380 mm (15 in) or less from the ground.**
  - **Set parking brake after machine is loaded.**
  - **Block machine tires.**
  - **Tie machine down to truck or trailer.**

**SAFETY PRECAUTIONS**

The following safety labels are mounted on the machine in the locations indicated. If these or any label becomes damaged or illegible, install a new label in its place.


**EMISSIONS LABEL - LOCATED ON THE SIDE PANEL OF THE OPERATOR COMPARTMENT.**



**FLAMMABLE SPILLS LABEL - LOCATED ON THE SIDE PANEL OF THE OPERATOR COMPARTMENT.**



**HOPPER LIFT ARMS LABEL - LOCATED ON BOTH HOPPER LIFT ARMS.**

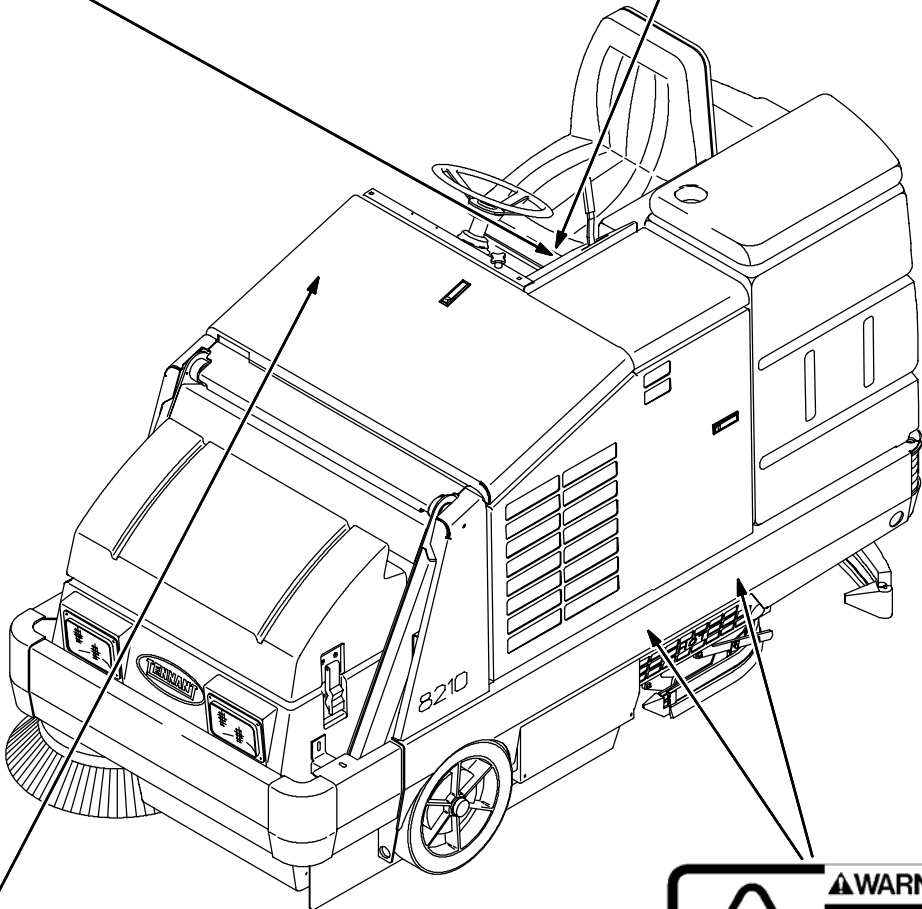

**ENGINE FAN AND BELT LABEL - LOCATED ON THE RADIATOR SHROUD.**



**HOT SURFACE LABEL - LOCATED ON THE SIDE OF THE BUMPER**


351551

# SAFETY PRECAUTIONS


**FLAMMABLE MATERIALS LABEL - LOCATED ON THE SOLUTION TANK COVER & ON THE BATTERY TRAY ON MACHINES WITH THE DETERGENT TANK OPTION.**



**FOR SAFETY LABEL - LOCATED ON THE SIDE PANEL OF THE OPERATOR COMPARTMENT.**

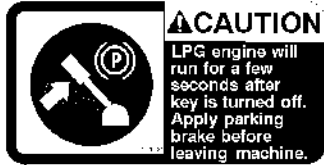

**LPG ENGINE WILL RUN LABEL - LOCATED ON THE SIDE OF THE INSTRUMENT PANEL.**

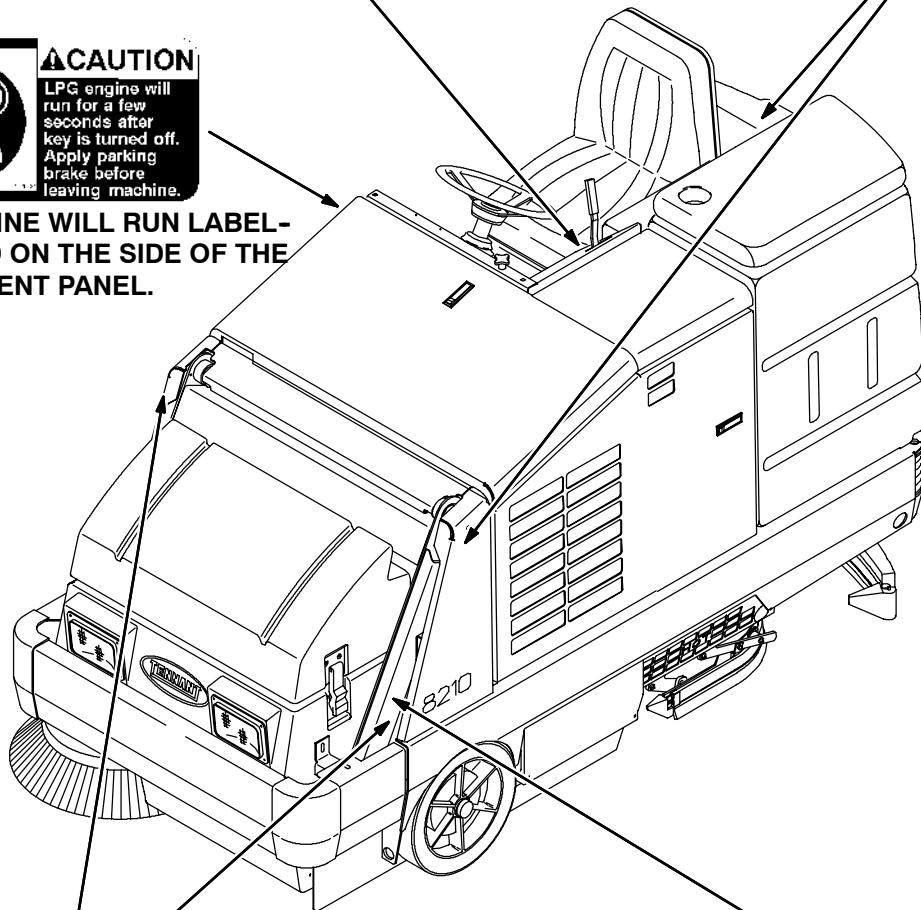

351551



**HOPPER SUPPORT BAR LABEL - LOCATED ON THE HOPPER SUPPORT BAR AND ON BOTH HOPPER LIFT ARMS.**



**HOPPER LIFT ARMS LABEL - LOCATED ON BOTH HOPPER LIFT ARMS.**



## OPERATION

---


**OPERATOR RESPONSIBILITY**

---

- The operator's responsibility is to take care of the daily maintenance and checkups of the machine to keep it in good working condition. The operator must inform the service mechanic or supervisor when the required maintenance intervals occur as stated in the *MAINTENANCE* section of this manual.
- Read this manual carefully before operating this machine.

**FOR SAFETY: Do not operate machine, unless operation manual is read and understood.**


- Check the machine for shipping damage. Check to make sure machine is complete per shipping instructions.
- Keep your machine regularly maintained by following the maintenance information in this manual. We recommend taking advantage of a regularly scheduled service contract from your Tennant representative.
- Order parts and supplies directly from your authorized Tennant representative. Use the parts manual provided when ordering parts.
- After the first 50 hours of operation, follow the recommended procedures stated in the *MAINTENANCE CHART*.

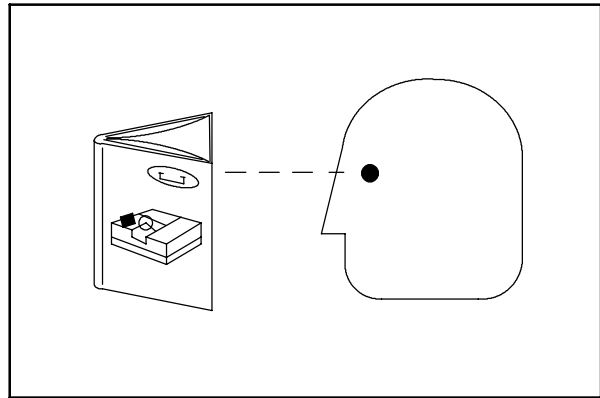

07324

# OPERATION

## MACHINE COMPONENTS

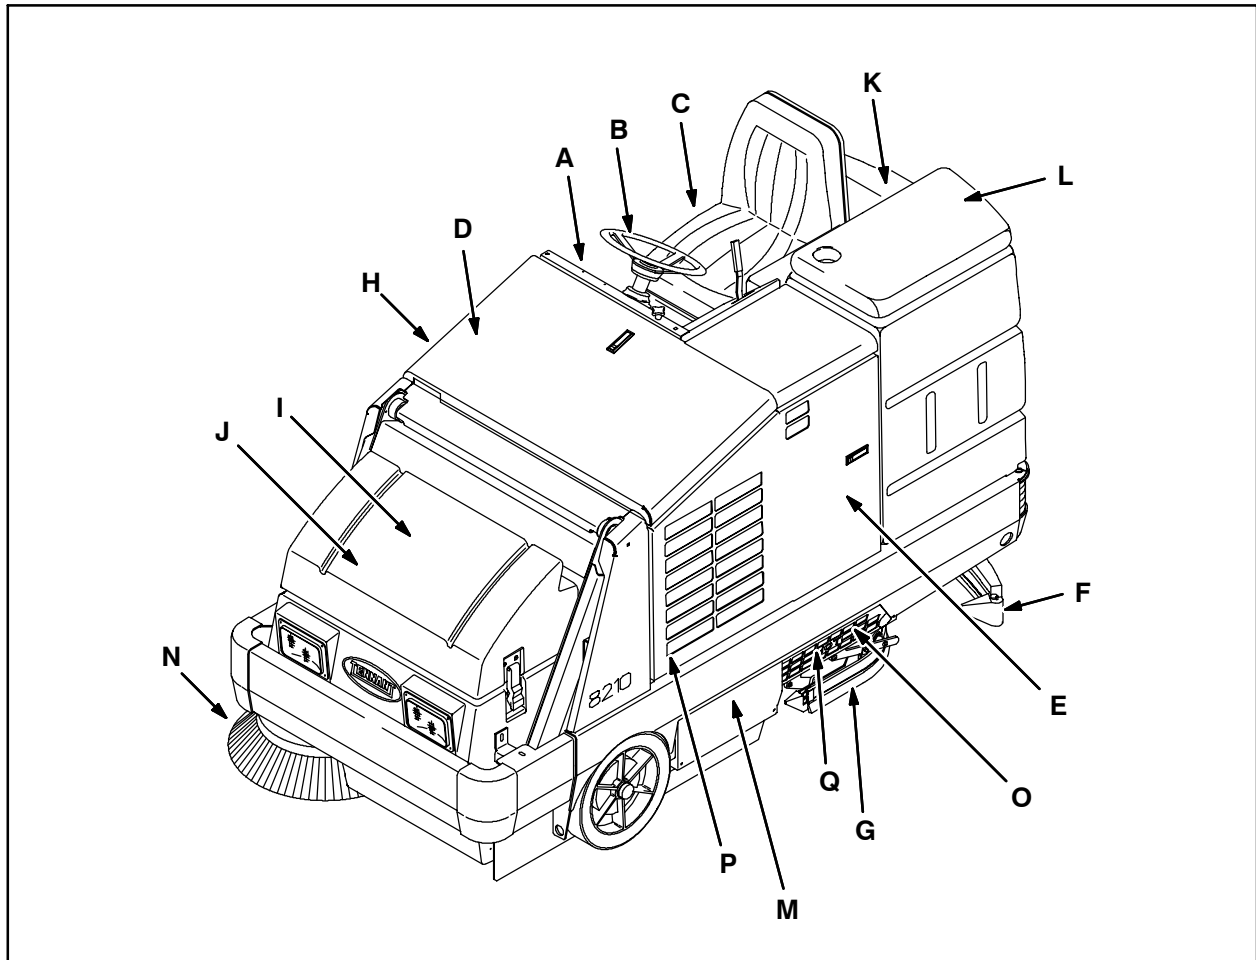

351551

- A. Control panel
- B. Steering wheel
- C. Operator seat
- D. Engine cover
- E. Engine side door
- F. Rear squeegee
- G. Side squeegee
- H. Sweeping brush access door
- I. Hopper cover
- J. Hopper dust filter
- K. Solution tank
- L. Recovery tank
- M. Main sweeping brush
- N. Side brush
- O. Scrub brushes
- P. Detergent tank (option)
- Q. Scrub head

**SYMBOL DEFINITIONS**

These symbols identify controls, displays, and features on the machine:



Hazard light



Operating lights



Hopper door open



Hopper door close



Hopper raise



Hopper lower



Filter shaker



Side brush down and on



Side brush up and off



Main brush down and on



Main brush up and off



Charging system



Engine oil pressure



Engine water temperature



Recovery tank full



Filter clogged



Hopper temperature - Thermo Sentry



Diagnostics



Gasoline fuel only



Hourmeter



Fan



ES (option)



Detergent flow



Scrub brush edge clean



Scrub brushes down and on



Rear squeegee down and vacuum on



Engine



Variable pressure

# OPERATION



Parking brake



Solution flow



Side brush down pressure light



Side brush down pressure heavy



Main sweep brush down pressure light



Main sweep brush down pressure heavy



Horn



Hydraulic fluid only



Jackpoint



Steering tilt



50 hour required maintenance interval



100 hour required maintenance interval



200 hour required maintenance interval



400 hour required maintenance interval



800 hour required maintenance interval



Circuit breaker 1



Circuit breaker 2



Circuit breaker 3



Circuit breaker 4



Circuit breaker 5



Circuit breaker 6



Circuit breaker 7




Circuit breaker 8



Check Engine

## CONTROLS AND INSTRUMENTS

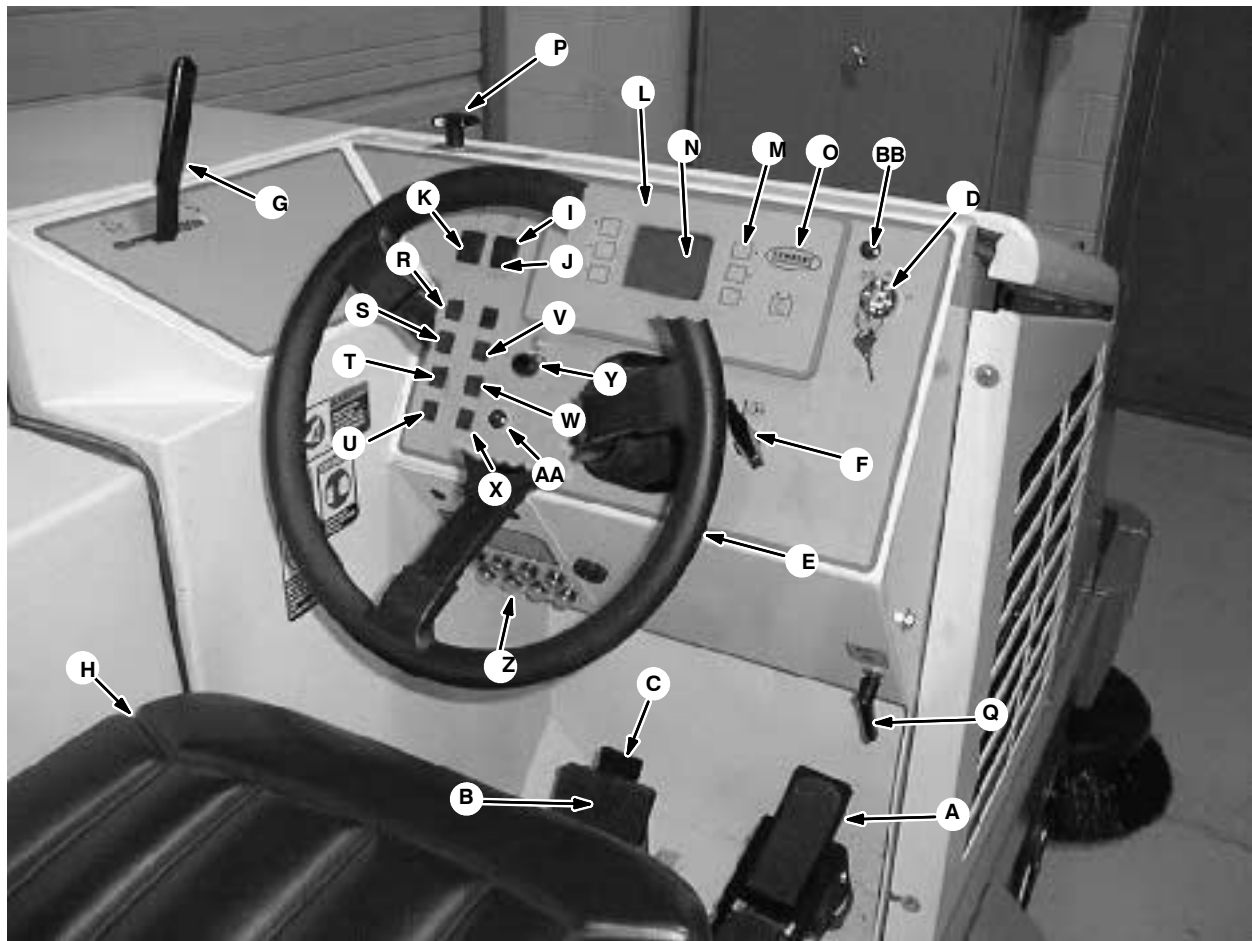

- |   |   |
|---|---|
| A. Directional pedal                        | V. Clogged filter light (option)          |
| B. Brake pedal                              | W. Hopper door closed light (option)      |
| C. Parking brake pedal                      | X. Hydraulic filter bypass light (option) |
| D. Ignition switch                          | Y. Horn button                            |
| E. Steering wheel                           | Z. Circuit breakers                       |
| F. Steering column tilt lever               | AA. Engine choke knob (FORD engine)       |
| G. Hopper lever                             | BB. Check Engine Light (GM engine)        |
| H. Operator seat                            |   |
| I. Operating lights switch                  |   |
| J. Operating/hazard lights switch (option)  |   |
| K. Solution flow switch                     |   |
| L. Control panel                            |   |
| M. Multi-function switches (6)              |   |
| N. Display screen                           |   |
| O. TENNANT logo switch                      |   |
| P. Main brush down pressure knob            |   |
| Q. Side brush down pressure handle          |   |
| R. Charging system light                    |   |
| S. Engine oil pressure light                |   |
| T. Engine water temperature light           |   |
| U. Hopper temperature light - Thermo Sentry |   |

# OPERATION

---

## OPERATION OF CONTROLS

---

### DIRECTIONAL PEDAL

The directional pedal controls direction of travel and the propelling speed of the machine. Change the speed of the machine with the pressure of your foot; the harder you press the pedal, the faster the machine travels.

Forward: Press the top of the directional pedal with the toe portion of your foot.



Reverse: Press the bottom of the directional pedal with the heel of your foot.



Neutral: Take your foot off the directional pedal and it will return to the neutral position.



**BRAKE PEDAL**

The brake pedal stops the machine.

Stop: Take your foot off the directional pedal and let it return to the neutral position. Step on the brake pedal.

**PARKING BRAKE PEDAL**

The parking brake pedal sets and releases the front wheel brakes.

Set: While pressing the brake pedal as far as it will go, set the parking brake by pressing the parking brake pedal with the toe portion of your foot.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

Release: Press on the brake pedal to unlock the parking brake pedal.

**IGNITION SWITCH**

The ignition switch starts and stops the engine with a key.

**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

Start: Turn the key all the way clockwise. Release the key as soon as the engine starts.

Stop: Turn the key counter-clockwise.

**CAUTION: LPG engine will run for a few seconds after the key is turned off. Apply the parking brake before leaving the machine.**

*NOTE: To protect the GM engines emission components LPG machines, the engine will continue to operate for a few seconds after the switch is turned off.*




## OPERATION

### STEERING WHEEL

The steering wheel controls the machine's direction. The machine is very responsive to the steering wheel movements.

Left: Turn the steering wheel to the left.

Right: Turn the steering wheel to the right.

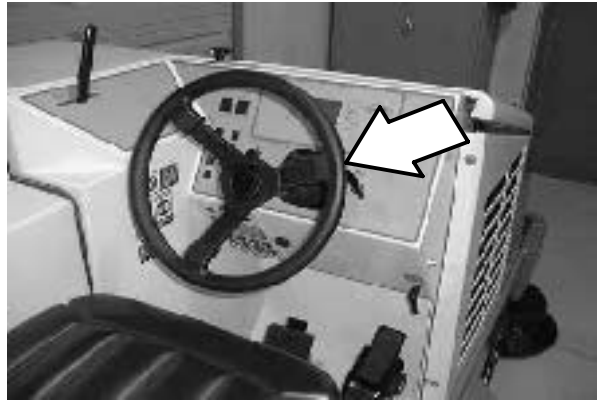

### STEERING COLUMN TILT LEVER

The steering column tilt handle controls the angle of the steering wheel.

Adjust: Pull out the tilt handle, then move the wheel to the desired position and release the tilt handle.



### CHECK ENGINE LIGHT (GM ENGINE)

The check engine light comes on if the engines control system detects a fault during machine operation.

If the check engine light comes on while operating the machine, contact a TENNANT service representative.





## SCRUB SWITCH

The scrub switch controls the scrubbing operations. The scrub switch also sets the scrub brush pressure.

The scrubbing operations include the functions described below. The scrub head lowers and the scrub brushes activate. The rear squeegee will lower and the vacuum fan will start. The solution system will start, if the solution flow switch is on. Also, the optional ES system and detergent pump will start, if the switches are on. The engine speed will change to *fast*.

**Start:** Press the scrub switch. The indicator light next to the switch will illuminate.


**Stop:** Press the scrub switch. The indicator light next to the switch goes out.

**Scrub brush pressure:** Press and hold the scrub switch. The brush pressure will scroll through four settings. The heaviest or fourth brush pressure setting is called **Super Scrub**. The pressure setting selected when the switch is released will be the new default brush pressure setting.

The brush pressure can be set into four different positions. Under normal conditions, the brush pressure should be set in the minimum settings (one or two downward arrows). Under heavy grime conditions, the brush pressure should be set in the maximum settings (three or four downward arrows). The fourth brush pressure setting (*Super Scrub*) is not available when the machine is scrubbing and sweeping simultaneously. Travel speed and floor conditions will affect the scrubbing performance.

*NOTE: The brush pressure setting and the detergent flow rate will default to the last settings used when the scrubbing operations are started again.*

*NOTE: The scrub head will raise when the directional pedal is in the neutral position. The rear squeegee will raise when the directional pedal is in the reverse position.*

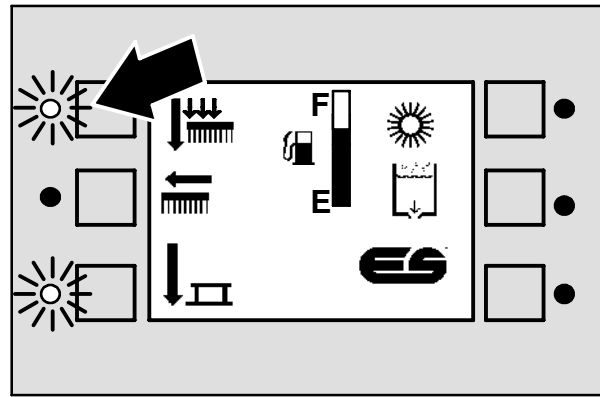

351647

## OPERATION

### SWEEP SWITCH

The sweep switch controls the sweeping operations.


If the sweep switch is pressed while the machine is idle or in the scrub mode, the hopper door will open, the main sweeping brush will lower and activate, the sweep vacuum fan will activate, the side brush will lower and activate, and the engine speed will increase to the *fast* speed.

Sweeping operations on: Press the sweep switch. The indicator light next to the switch will illuminate.

Sweeping operations off: Press the switch again. The indicator light next to the switch will go out.

Sweeping in wet conditions: Press the vacuum fan switch to disable the fan. The indicator light next to the switch will go out.

*NOTE: If the hopper is raised, even slightly, the raised hopper icon will replace the sweep icon on the control panel display and the sweeping operations will not start.*

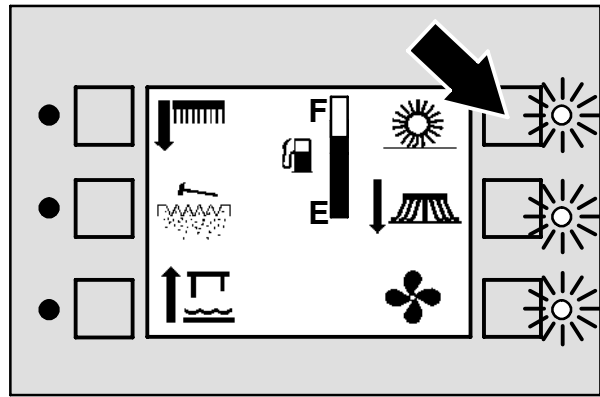

351648

### SIDE BRUSH SWITCH

The side brush switch controls the side brush position and rotation. The main sweeping brush must be operating for the side brush to work.


*NOTE: The side brush operates automatically when the main sweeping brush starts operating. To sweep without using the side brush, press the side brush switch.*

Up and Off: Press the switch again. The indicator light next to the switch will go out.

Down and On: Press the switch. The indicator light next to the switch will illuminate.

*NOTE: The side brush operates automatically when the main sweeping brush starts operating. To sweep without using the side brush, press the side brush switch.*


*NOTE: If the hopper is raised, even slightly, the raised hopper icon will replace the sweep icon on the control panel display and the sweeping operations will not start.*

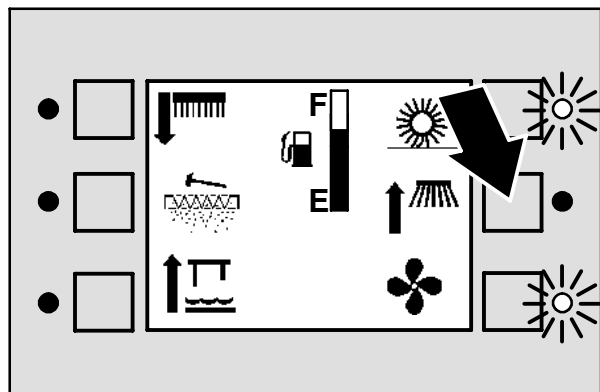

351649

**HOURMETER**

The hourmeter records the number of hours the machine has been operated. Check the hourmeter regularly; this information is used to determine when to perform routine machine maintenance.

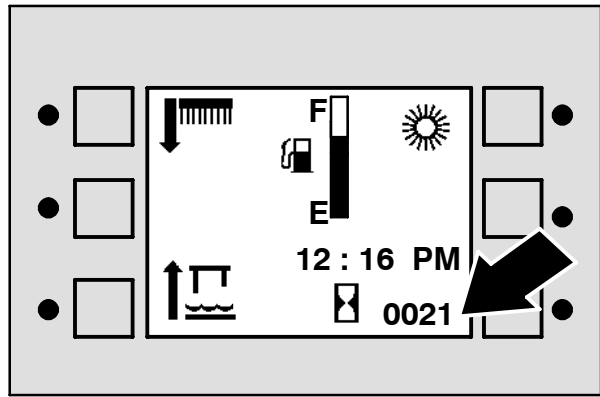


351650

**FUEL LEVEL GAUGE**

The fuel level gauge indicates the amount of fuel remaining in the fuel tank. When the indicator bar is fully shaded, the fuel tank is full. The fuel tank is nearly empty when only a small portion of the indicator bar remains shaded. Refill the fuel tank as soon as possible.

*NOTE: Do not use leaded fuels. The use of leaded fuels will cause permanent damage to the system's oxygen sensor and catalytic converter.*

LPG powered machine: The fuel gauge is located on the top of the LP tank.

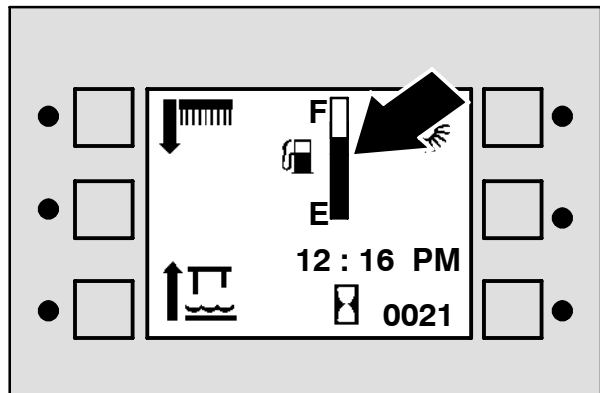

351650

## OPERATION

### HOPPER LEVER

The hopper lever raises and lowers the hopper.


**Hopper up:** Turn off all scrubbing and sweeping functions. Pull and hold the hopper lever backward until the hopper reaches the desired height.

**Hold:** Release the hopper lever into the middle position.

 **WARNING: Raised hopper may fall.**  
**Engage hopper support bar.**

**Hopper down:** Push the hopper lever forward until the hopper has lowered completely.

*NOTE: The main sweeping brush, side brush, and sweep vacuum fan will stop operating when the hopper is raised. If the sweep vacuum fan, side brush switch, or the main brush switch is pressed while the hopper is raised, none of the sweeping operations will activate and the raised hopper icon will appear on the control panel.*

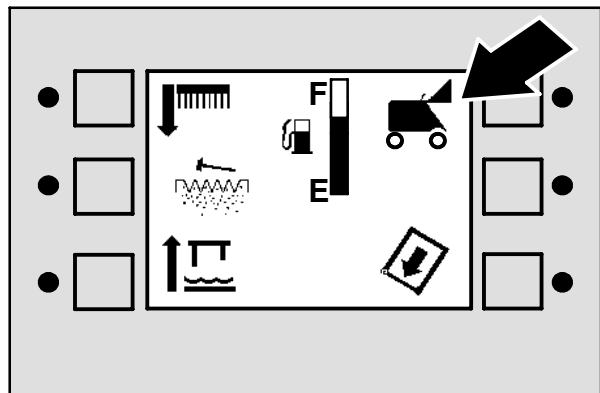

351651

### MAIN SWEEP BRUSH DOWN PRESSURE KNOB

The main brush down pressure knob changes the amount of contact the main brush has with the surface being swept.

**Increase:** Turn the main brush down pressure knob counter-clockwise.

**Decrease:** Turn the main brush down pressure knob clockwise.



### SIDE BRUSH DOWN PRESSURE HANDLE

The side brush down pressure handle changes the amount of contact the side brush has with the surface being swept.

Increase: Turn the side brush down pressure handle counter-clockwise.


Decrease: Turn the side brush down pressure handle clockwise.



### CONTROL PANEL

The sweeping and scrubbing functions are activated by the control panel. Features of the control panel include six multi-function buttons and graphics icons which display the current state of the sweeping and scrubbing functions. The control panel also features a display clock for operator convenience, and a maintenance mode that prompts the operator when to perform routine machine maintenance.

By pressing the TENNANT logo, the operator can cycle the control panel display through the different function screens. Each function screen allows the operator to enable or disable different sweeping or scrubbing functions.

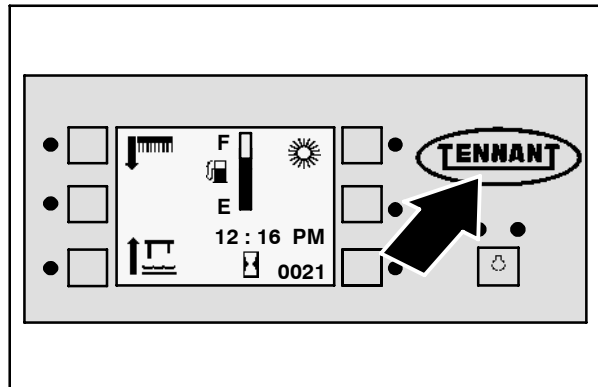


351652

## OPERATION


### SETTING THE DISPLAY CLOCK

1. Turn the machine off.
2. Press and hold the TENNANT logo button while turning the ignition key to the ON position. DO NOT start the engine. The ON position is between the STOP and START positions. Continue to press the TENNANT logo button until the RESET PRESSURE screen appears on the display. Release the logo button.
3. Press and release the TENNANT logo button. The ADJUST TIME screen will appear on the screen.

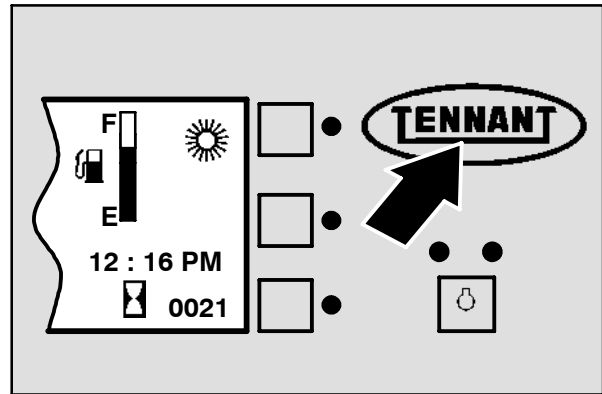


351653

4. Press the switch next to ADJUST TIME.

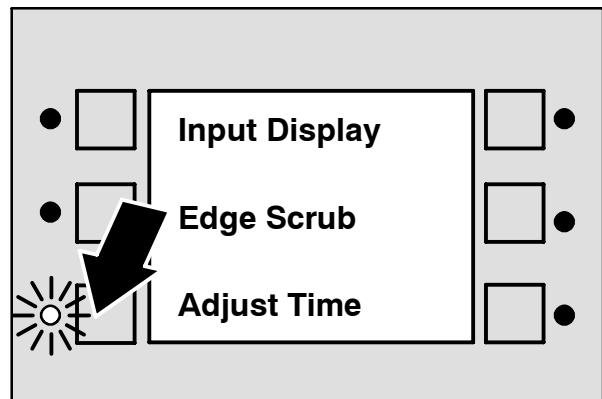

351654

5. Set the time, date, and choose between the 12 or 24 hour clock modes by moving the underline through the display by pressing the switches next to the direction arrows. Increase the value of the underlined segment by pressing the switch next to the positive (+) icon. Decrease the value of the underlined segment by pressing the switch next to the negative (-) icon.
6. Exit the ADJUST TIME function by pressing the TENNANT logo switch.
7. Turn the key to the off position.

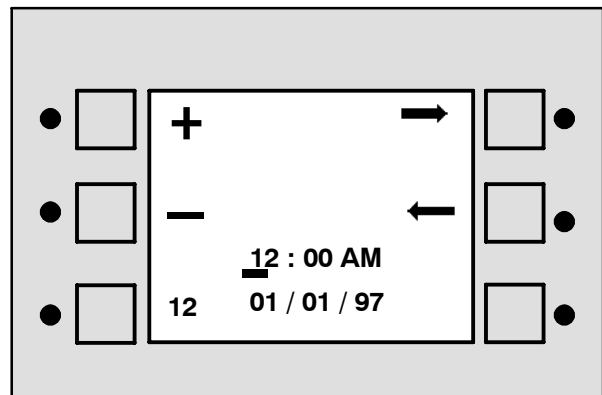


351655

**MAINTENANCE MODE**

The maintenance mode allows the operator to monitor and reset the elapsed time between six different regular maintenance requirements.

When the maintenance mode is enabled, an alarm will sound and an icon representing a maintenance function will appear on the display each time machine is started if one or more of the maintenance timers goes past its recommended interval. Each time the required maintenance function is performed, the timer for that function should be reset.

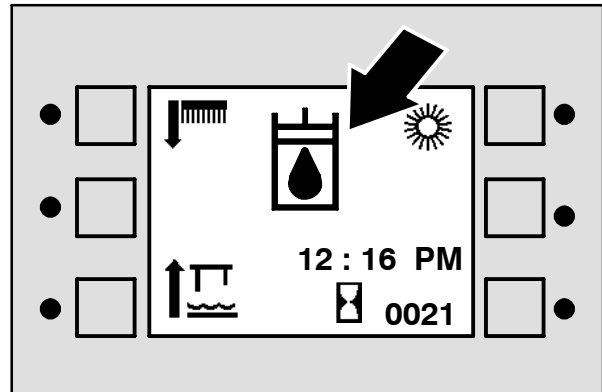


351656

## OPERATION


### RESETTING THE MAINTENANCE TIMERS

1. Turn the machine off.
2. Press and hold the TENNANT logo button while turning the ignition key to the ON position. DO NOT start the engine. The ON position is between the STOP and START positions. Continue to press the TENNANT logo button until the RESET PRESSURE screen appears on the display. Release the logo button.
3. Press and release the TENNANT logo button two more times. The SELF TEST screen will appear on the display.

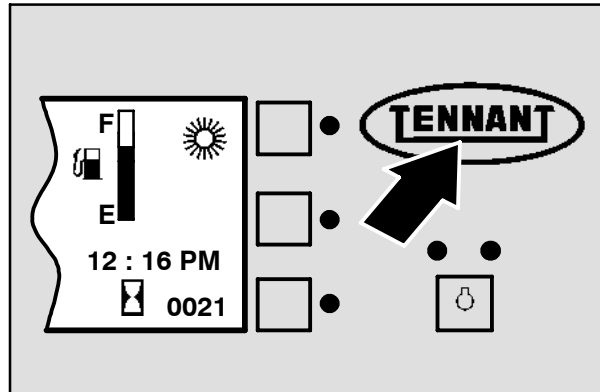


351653

4. Press the switch next to DISPLAY MAINT.

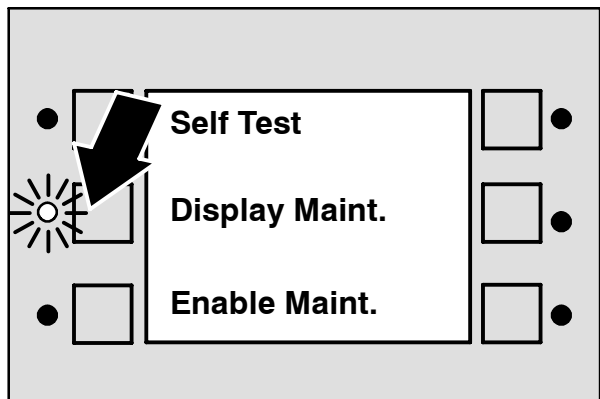

351657

Each maintenance item is represented by an icon with the recommended maintenance interval printed in hours below it. The lower right-hand corner of the screen displays the number of hours that have elapsed since the maintenance timer was last reset and the date it was last reset. The switch at the upper right-hand corner of the screen will reset the hour counter for each maintenance item. Reset the maintenance timer each time the maintenance function represented by the icon is performed. The operator can scroll through the six maintenance function screens by pressing the TENNANT logo button.

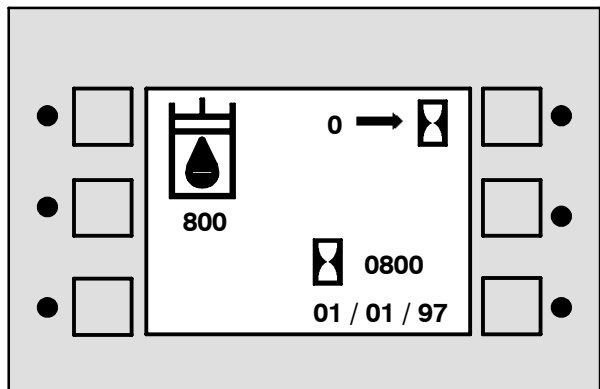

351658

To determine which routine maintenance function each icon represents, see the *SYMBOL DEFINITIONS* section of this manual.




5. Exit the DISPLAY MAINT. function by pressing the TENNANT logo switch until all six maintenance mode screens have been displayed.
6. Turn the key to the off position.

DISABLING THE MAINTENANCE MODE

When the maintenance mode is disabled, the flashing icon and alarm will not appear and sound when the machine is started if one or more of the maintenance timers goes past its recommended interval.

1. Turn the machine off.
2. Press and hold the TENNANT logo button while turning the ignition key to the ON position. DO NOT start the engine. The ON position is between the STOP and START positions. Continue to press the TENNANT logo button until the RESET PRESSURE screen appears on the display. Release the logo button.
3. Press and release the TENNANT logo button two more times. The SELF TEST screen will appear on the display.

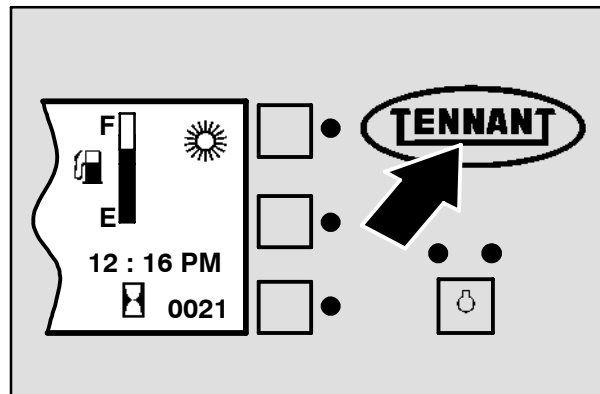


351653

4. Press the switch next to ENABLE MAINT.

*NOTE: If the light next to the ENABLE MAINT. switch is not illuminated, the maintenance mode is currently disabled.*

*NOTE: When the maintenance mode is disabled, the maintenance timers continue to record the elapsed time between maintenance intervals. To view the elapsed time between each of the six default maintenance intervals, press the switch next to Display Maint.. Press the TENNANT logo button to scroll through the maintenance function screens.*

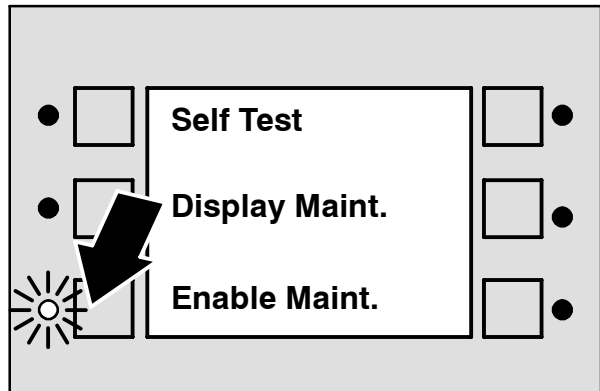

351657

## OPERATION

### OPERATING LIGHTS SWITCH

The operating lights switch powers the headlights and taillights on and off.

On: Press the top of the operating lights switch.

Off: Press the bottom of the operating lights switch.




### OPERATING/HAZARD LIGHT SWITCH (OPTION)

The operating/hazard light switch powers the headlights and taillights, and the revolving hazard light (option) on and off.

Operating lights on: Press the top of the hazard light switch.

Operating lights/Hazard light (option) on: Press the bottom of the hazard light switch.

All lights off: Set the the hazard light switch in the middle position.

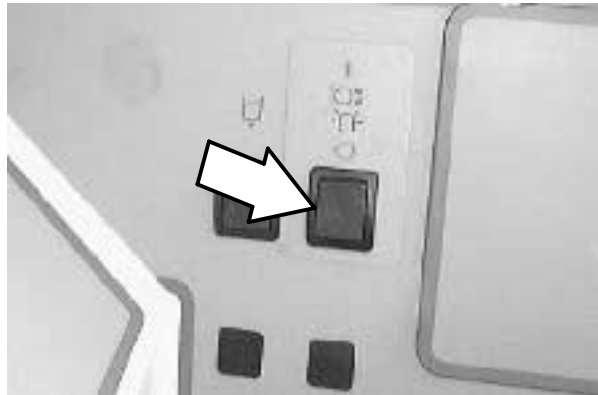


### SOLUTION FLOW SWITCH

The solution flow switch controls the amount of solution that flows to the floor while scrubbing.

(1) Low: Press the top of the switch. Use this flow rate for smooth floors and light dirt.

(0) Off: Press the middle of the switch.

(2) High: Press the bottom of the switch. Use this flow rate for rough floors and heavy or compacted dirt.

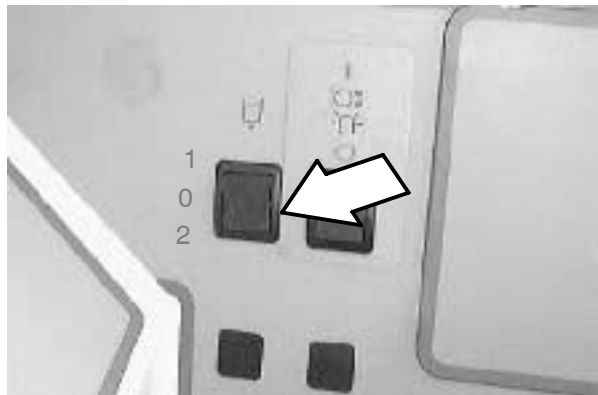


**MANUAL FLOW VALVE**

The machine is equipped with a manually adjustable solution flow valve that is located on the right side of the scrubhead. The valve can be adjusted to dispense either more or less solution. Contact your TENNANT representative with solution flow rate questions.

Maximum flow: Turn the flow lever to the horizontal position.

Minimum flow: Turn the flow lever to the vertical position.

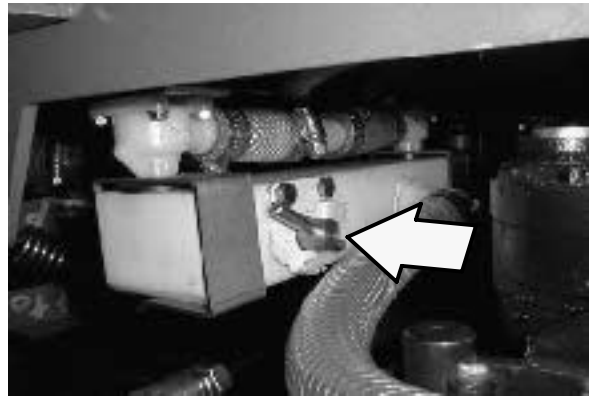


**ENGINE CHOKE KNOB (FORD ENGINE)**

The engine choke knob controls the engine choke on FORD gasoline powered machines.

On: For cold starting, pull the engine choke knob out.

Off: Push the engine choke knob in.

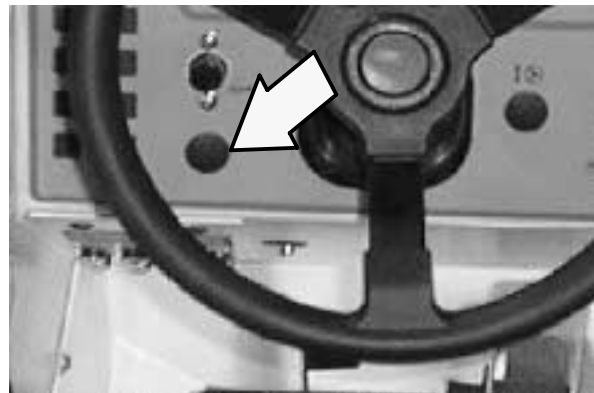

**SWEEP VACUUM FAN SWITCH**


The sweep vacuum fan switch starts and stops the sweep vacuum fan. Do not operate the vacuum fan when sweeping in wet conditions.

Start: Press the switch. The indicator next to the switch will illuminate.

Stop: Press the switch. The indicator light next to the switch will go out.

*NOTE: The sweep vacuum fan activates automatically when the main sweeping brush starts operating. The sweep vacuum fan will not activate unless the main sweeping brush is operating.*

*NOTE: The sweep vacuum fan will not start if the hopper is raised, even slightly. If the sweep vacuum fan switch is pressed while the hopper is raised, the sweep vacuum will not start and the raised hopper icon will appear on the control panel.*

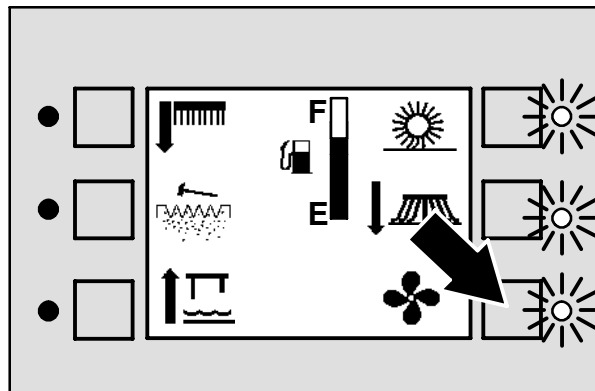

351648

## OPERATION

### HOPPER DOOR SWITCH


The hopper door switch opens and closes the hopper door.

*NOTE: The hopper door icon only appears when the hopper is raised.*

**Open:** Press the switch. The indicator light next to the switch will illuminate and the icon will indicate the door is open.

**Close:** Press the switch. The indicator next to the switch will go out and the icon will indicate the door is closed.

*NOTE: The hopper door opens automatically when the main sweeping brush starts operating. The hopper door closes automatically when the machine is started or if the main sweeping brush is not operating.*

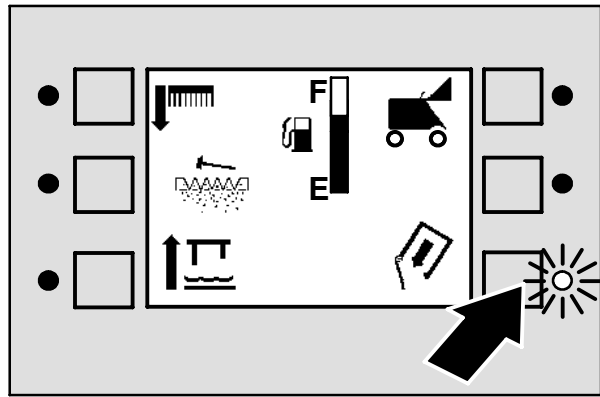

351659


### FILTER SHAKER SWITCH

The filter shaker switch starts the hopper dust filter shaker. The shaker automatically operates for 30 seconds.

*NOTE: If the machine begins to create an excessive amount of dust while sweeping, press the filter shaker switch.*

**Start:** Press the filter shaker switch. The indicator light will remain on while the filter shaker is operating.

*NOTE: The filter shaker will activate automatically for a short time each time the sweeping operations are stopped. The vacuum system will not operate while the filter shaker is operating.*

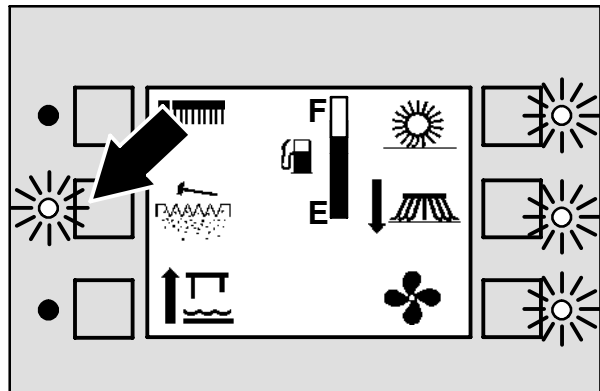


351648

### EDGE SCRUB SWITCH

The edge scrub switch extends the scrub head to the right to allow close edge scrubbing.

**Out:** Press the edge scrub switch during scrubbing. The indicator light next to the switch will illuminate.

**In:** Press the edge scrub switch. The indicator light next to the switch will go out.

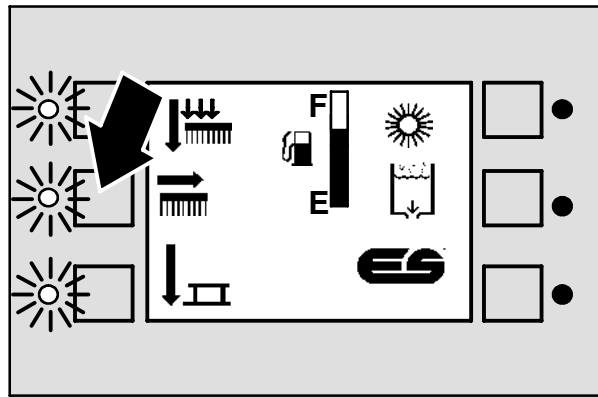

351660

### SQUEEGEE SWITCH

The squeegee switch controls the position of the rear squeegee. The rear squeegee can be operated separately from the scrub brushes for the purpose of picking-up excess water without scrubbing.


**Lower:** Press the squeegee switch. The indicator light next to the switch will illuminate.

**Raise and stop:** Press the squeegee switch. The indicator light above the switch goes off. There will be a slight delay before the vacuum shuts off.

**NOTE:** The rear squeegee lowers and scrubbing vacuum starts automatically when the scrubbing operations start.

**NOTE:** The rear squeegee will raise and the scrubbing vacuum will shut off after a short delay when the machine travels in reverse.

**NOTE:** The rear squeegee will raise and the scrubbing vacuum fan will shut off after a short delay when the scrubbing operations are shut off.

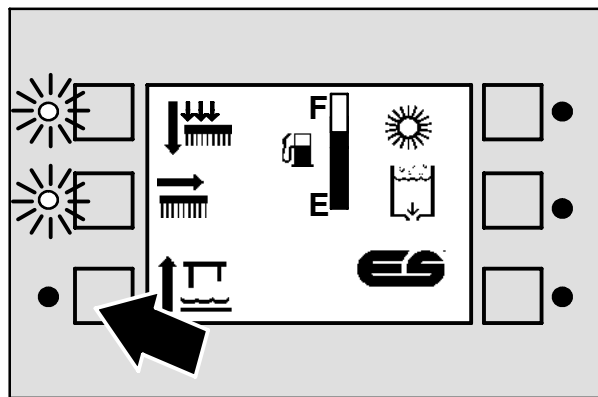

351661

## OPERATION


### ES SWITCH (OPTION)

The ES switch turns the extended scrub system on and off . When the machine is started, the ES switch will default to the last setting used.

*NOTE: The ES icon only appears after the scrub functions have been activated.*

**On:** Press the ES switch. The indicator light next to the switch will illuminate.

**Off:** Press the ES switch. The indicator light next to the switch will go out.

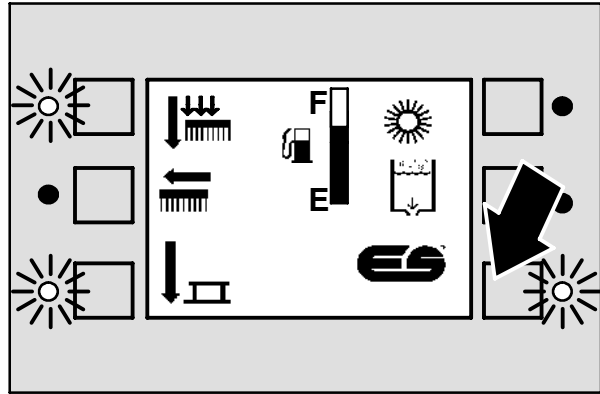

351647

### DETERGENT PUMP SWITCH (OPTION)

The detergent switch controls the amount of detergent that flows to the floor while scrubbing. When the machine is started, the detergent pump switch will default to the last setting used.


*NOTE: The detergent icon only appears after the scrub functions have been activated.*

*NOTE: The detergent pump switch will not activate unless the main scrub brushes are active and the solution switch is in the high or low position.*

**High:** Press and hold the detergent pump switch until two downward pointing arrows appear on the icon next to the switch. Release the switch.

**Low:** Press and hold the detergent pump switch until one downward pointing arrow appears on the icon next to the switch. Release the switch.

**Off:** Press and release the detergent pump switch.

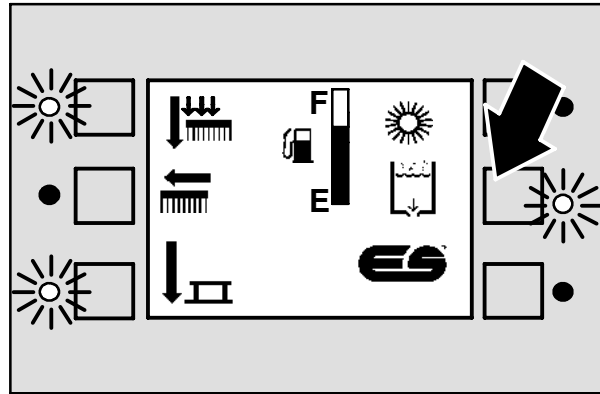

351647

### ENGINE SPEED SWITCH


The engine speed switch controls the engine governed speed. When one indicator light above the switch is illuminated, the engine is in *idle* speed. When two indicator lights above the switch are illuminated, the engine is in *fast* speed.

*NOTE: The engine will run automatically in fast speed while scrubbing or sweeping, or both simultaneously.*

**Idle speed (one indicator lit):** The engine will automatically start in idle speed. To switch to *fast* engine speed, press the engine speed switch.

**Fast speed (two indicators lit):** Press the engine speed switch until both indicators are lit. Use this speed is for transporting, sweeping, and scrubbing. To return the engine to *idle* speed from the *fast* engine speed, press the engine speed switch.

*NOTE: All sweeping and scrubbing functions while stop automatically if idle speed is selected while in fast engine speed.*

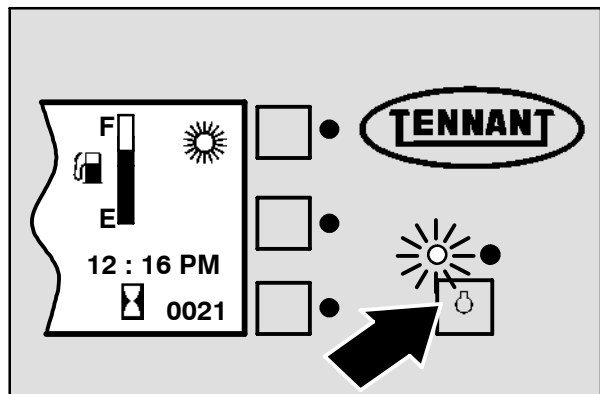


351653

## OPERATION


### CHARGING SYSTEM LIGHT

The charging system light will illuminate when the alternator is not operating within the normal range. If the light illuminates stop the machine immediately, then find the problem and have it corrected.

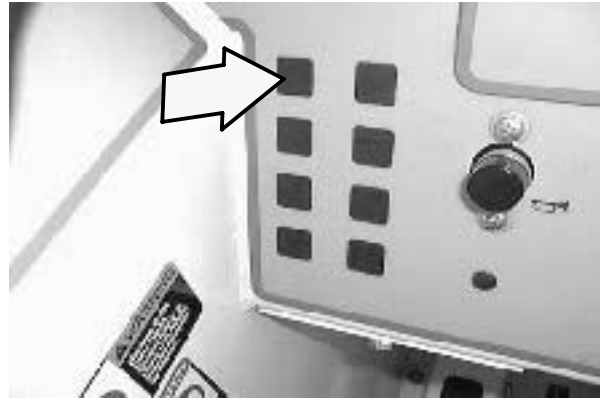


### ENGINE OIL PRESSURE LIGHT

The engine oil pressure light will illuminate when the engine oil pressure falls below 40 kPa (5 psi). In this situation, an alarm will sound until the oil pressure problem is corrected. If the light illuminates stop the machine immediately, then find the problem and have it corrected.

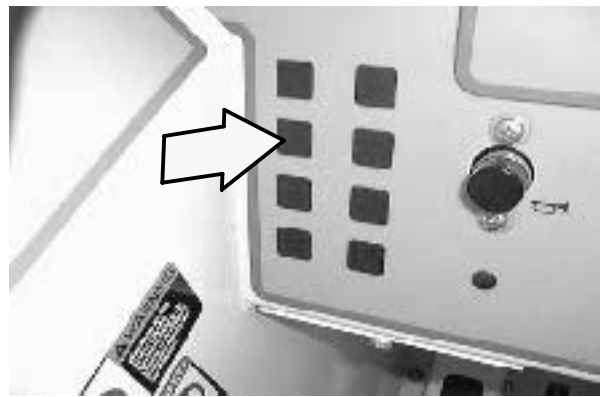

### ENGINE WATER TEMPERATURE LIGHT

The engine water temperature light will illuminate when the temperature of the engine coolant is more than 107° C (225° F). If the light illuminates stop the machine immediately, then find the problem and have it corrected.

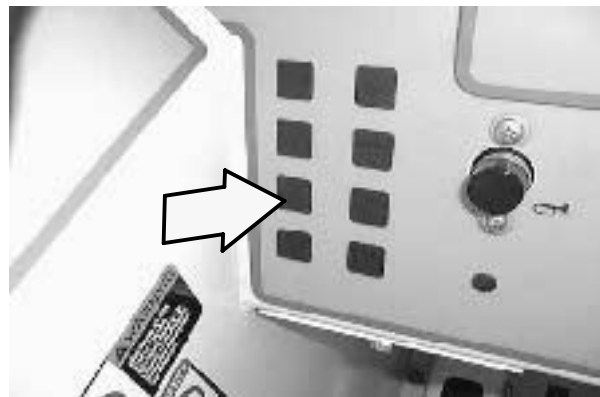




**HOPPER TEMPERATURE LIGHT -  
THERMO SENTRY**

The hopper temperature light will illuminate when there is too much heat, possibly from a fire, in the hopper. The Thermo Sentry will stop the sweeping vacuum fan. If the light illuminates stop the machine immediately, then find the problem and have it corrected.

**CLOGGED FILTER LIGHT (OPTION)**

The clogged filter light will illuminate when the hopper dust filter is clogged.

To clean the filter, press the filter shaker switch. If the clogged filter light remains lit, manually clean the hopper dust filter. See *HOPPER DUST FILTER* in the *MAINTENANCE* section of this manual.

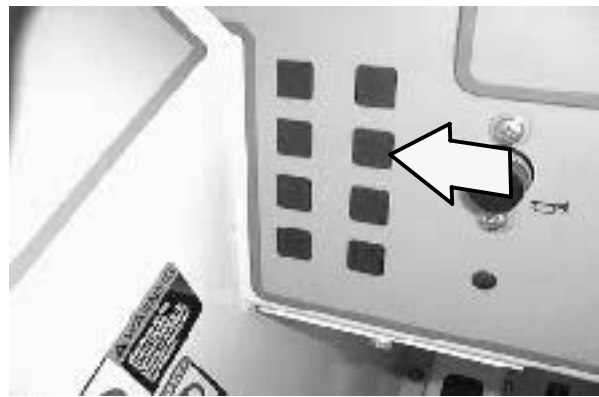


## OPERATION

### HOPPER DOOR CLOSED LIGHT (OPTION)

The hopper door closed light will illuminate when the hopper door is closed.

Make sure the the hooper door is open (the light will be out), while sweeping.

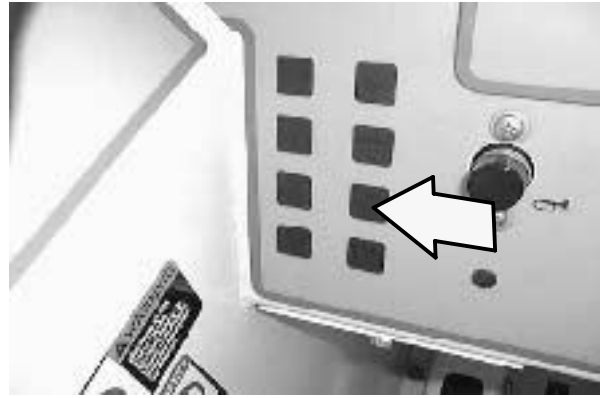

### HYDRAULIC FILTER BYPASS LIGHT (OPTION)

The hydraulic filter bypass light will illuminate when the hydraulic filter becomes clogged. If the light illuminates stop the machine immediately, then change the hydraulic filter and hydraulic fluid as soon as possible.



### HORN BUTTON

The horn button operates the horn.

Sound: Press the button.



**CIRCUIT BREAKERS**

The circuit breakers are resettable electrical circuit protection devices. Their design stops the flow of current in the event of a circuit overload. Once a circuit breaker is tripped, it must be reset manually. Press the reset button after the breaker has cooled down.

If the overload that caused the circuit breaker to trip is still there, the circuit breaker will continue to stop current flow until the problem is corrected.

The circuit breakers are located in the operator compartment.


The chart lists the circuit breakers and the electrical components they protect.



<b>Circuit Breaker</b>	<b>Rating</b>	<b>Circuit Protected</b>
CB-1	15 A	Horn
CB-2	15 A	Ignition
CB-3	15 A	Headlights / Taillights
CB-4	5 A	Logic Power
CB-5	15 A	Sweeping
CB-6	15 A	Scrubbing Accessories
CB-7	15 A	Scrubbing Brushes
CB-8	15 A	Filter Shaker Motor

**FUSES (GM ENGINE)**

On machines with the GM engine, there are *engine harness fuses* that are located on the battery box inside the engine side door. Access the fuses by opening the engine side door.

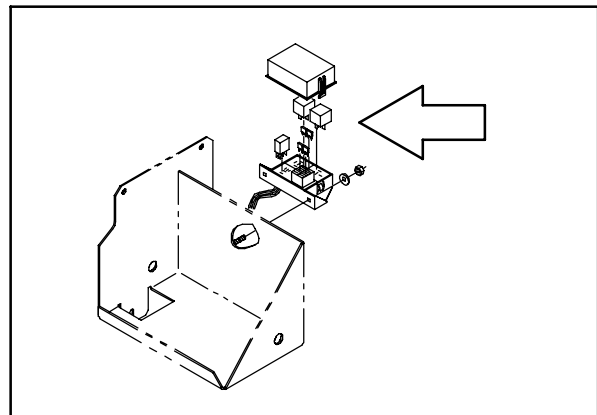

<b>Engine Harness Fuses</b>		
<b>Fuse</b>	<b>Rating</b>	<b>Circuit Protected</b>
FU-1	5 A	Key switch
FU-2	20 A	Main power
FU-3	15 A	Auxiliary power
FU-4	15 A	Fuel pump
FU-5	50 A	Alternator

## OPERATION

### OPERATOR SEAT

The standard operator seat has a position adjustment lever that allows the operator to move the seat forward or backward to the desired position.

Adjust: Pull the lever outward and slide the seat to the desired position, then release the lever.




### DELUXE SUSPENSION SEAT (OPTION)

The deluxe suspension seat can be adjusted according to the operator's weight, desired back rest angle, and desired front-to-back position.

The operator weight adjustment lever has three different positions: lightweight, middleweight, and heavyweight.

Adjust: Pull the lever up for the lightweight position. Move the lever to middle for the middleweight position. Push the lever down for the heavyweight position.

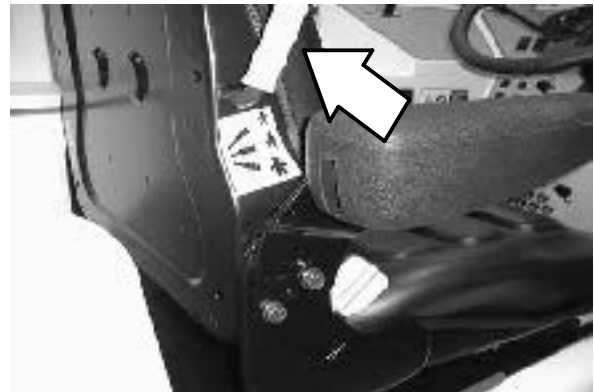

The back rest angle knob adjusts the angle of the back rest.

Adjust: Turn the knob clockwise to decrease or counter-clockwise to increase the angle of the back rest.



The seat position lever adjusts the seat forward or backward.

Adjust: Pull the lever outward and slide the seat to the desired position, then release the lever.




### HOPPER SUPPORT BAR

The hopper support bar is located on the operator's side of the hopper. The hopper support bar holds the hopper in the raised position to allow work under the hopper. **DO NOT** rely on the machine hydraulic system to keep the hopper raised.




**WARNING: Raised hopper may fall.  
Engage hopper support bar.**

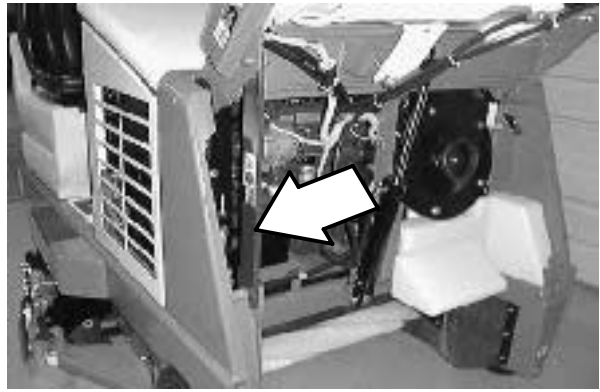

### ENGINE COVER GAS SPRING

The engine cover gas spring is located underneath the engine cover. The gas spring holds the engine cover in the raised position to allow work on the engine.

To close the engine cover, push the lower portion of the gas spring in line with the top portion, and push the engine cover downward.

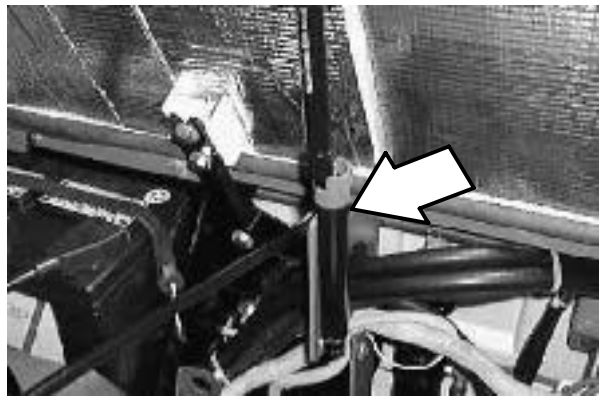


### LATCHES

The solution tank cover and the side and top engine doors are secured with latches.

Open: Press the raised part of the latch.

Close: Press the flat part of the latch.

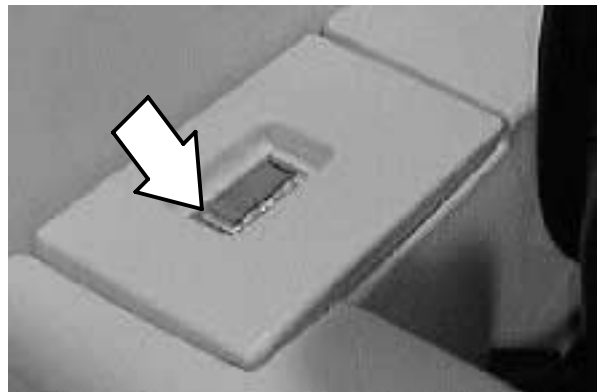

## HOW THE MACHINE WORKS

---

The steering wheel controls the direction of machine travel. The directional pedal controls the speed and forward/reverse direction. The brake pedal slows and stops the machine.

The side brush sweeps debris into the path of the main sweeping brush. The main brush sweeps debris from the floor into the hopper. The vacuum system pulls dust and air through the hopper and the hopper dust filter.

Water and detergent from the solution tank flow to the floor through a solution valve to the scrub brushes. The brushes scrub the floor. As the machine is moved forward the squeegee wipes the dirty solution off the floor, which is then picked up and drawn into the recovery tank.

When using the ES mode, the dirty solution in the recovery tank is filtered and returned to the solution tank to be reused.

When sweeping and scrubbing is finished, clean the hopper dust filter, empty the hopper, and drain and clean the recovery tank. If using the ES system, drain and clean the solution tank, and clean the ES filter.

---

**PRE-OPERATION CHECKLIST**

---

- Check the engine oil level.
- Check the engine coolant level.
- Check the radiator and hydraulic cooler fins for debris.
- Check the hydraulic fluid level
- Check the air filter indicator.
- Check the skirts and seals for damage and wear.
- Check the condition of the sweeping and scrubbing brushes. Remove any string, banding, plastic wrap, or other debris wrapped around them.
- Check the sweeping brush patterns for adjustment.
- Check the condition of the hopper dust filter and seals. Clean as required.
- Check the tank cover seals for damage and wear.
- Clean the vacuum fan inlet filter.
- Check the squeegees for damage, wear and for deflection adjustment.
- Check the vacuum hose for debris or blockage.
- ES machines; check the detergent tank level.
- Drain and clean the recovery tank.
- ES machines; drain and clean the solution tank and ES filter. Rinse level sensors.
- Check the brakes and steering for proper operation.
- Check the fuel level
- Empty the debris hopper.
- Check the service records to determine maintenance requirements.

## OPERATION

### CHANGING AN LPG FUEL TANK

1. Park the machine in a designated safe area.
2. Close the tank service valve on the LPG tank located inside the engine compartment.
3. Operate the engine until it stops from lack of fuel, then set the machine parking brake.

**FOR SAFETY: When servicing machine, Keep flames and sparks away from fuel system service area. Keep area well ventilated.**




4. Put on gloves and remove the quick-disconnect tank coupling.
5. Unlatch and remove the empty LPG fuel tank from the machine and store the tank in a designated, safe area.

*NOTE: Make sure the LPG fuel tank matches the fuel system (liquid tank with liquid system).*



6. Carefully put the filled LPG tank in the machine so that the tank centering pin enters the aligning hole in the tank collar.
7. Fasten the tank hold-down clamp to lock the tank in position.

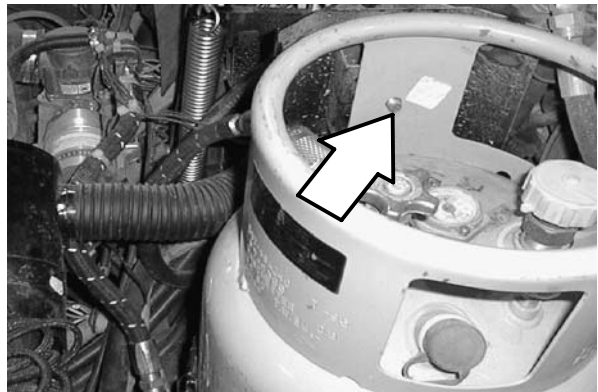



8. Connect the LPG fuel line to the tank service coupling. Make sure the service coupling is clean and free of damage. Also make sure it matches the machine service coupling.



9. Open the tank service valve slowly and check for leaks. Close the service valve immediately if an LPG leak is found, and tell the appropriate personnel.



# OPERATION

## STARTING THE MACHINE


1. LPG powered machines: Open the liquid service valve slowly.

*NOTE: Opening the service valve too quickly may cause the service check valve to stop the flow of LPG fuel. If the check valve stops the fuel flow, close the service valve, wait a few seconds and open the valve slowly again.*




2. You must be in the operator's seat with the directional pedal in neutral, and your foot on the brake pedal or with the parking brake set.

**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

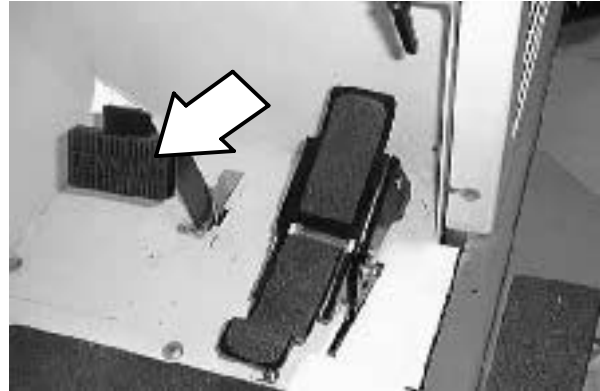

3. Ford gasoline powered machines: Pull out the choke knob when the engine is cold. Push in the choke knob after the engine is running smoothly.

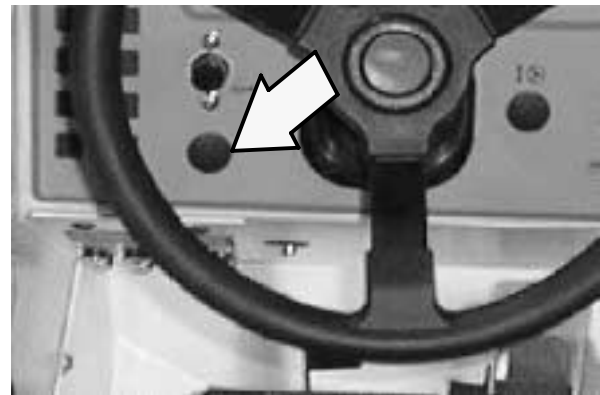

4. Turn the ignition switch key clockwise until the engine starts.

*NOTE: Do not operate the starter motor for more than 10 seconds at a time or after the engine has started. Allow the starter to cool between starting attempts or damage to the starter motor may occur.*



5. Allow the engine and hydraulic system to warm up three to five minutes.

**⚠ WARNING: Engine emits toxic gases. Severe respiratory damage or asphyxiation can result. Provide adequate ventilation. Consult with your regulatory authorities for exposure limits. Keep engine properly tuned.**

6. Release the machine parking brake.



7. Drive the machine to the area to be cleaned.

### **SWEEPING, SCRUBBING, AND BRUSH INFORMATION**

---

Pick up oversized debris before sweeping. Flatten or remove bulky cartons from aisles before sweeping. Pick up pieces of wire, twine, string, or anything that could become entangled in the brush or brush plugs.

Plan the sweeping and scrubbing in advance. Try to arrange long runs with minimum stopping and starting. Sweep debris from very narrow aisles into main aisles ahead of time. Do an entire floor or section at one time. Drive as straight as possible. Overlap the brush paths. Avoid bumping into posts or scraping the sides of the machine.

Avoid turning the steering wheel abruptly, except in emergencies. The machine is very responsive to the movement of the steering wheel.


Adjust the machine speed, scrub brush pressure, and detergent and solution flow as required when scrubbing. Use the minimum scrub brush pressure and solution flow for the best scrubbing results. Machines with the edge clean option have the ability to scrub against walls and edges.

When the recovery tank is almost full, the recovery tank full indicator will appear on the display screen and blink for almost a minute before the scrubbing system shuts off. The recovery tank will have to be drained and cleaned. Refill the solution tank with clean water and detergent and continue cleaning.

For best results, use the correct brush type for your sweeping and scrubbing application. The following are recommendations for main sweeping, scrubbing, and side brush applications.

***Polypropylene 8-double row main sweep brush*** – Superior pick-up of sand, gravel, and paper litter. Polypropylene retains its stiffness when wet, and can be used indoors or out with equal performance. Not recommended for high-temperature debris.

***Polypropylene and Wire 8-double row main sweep brush*** – The wire bristles loosen slightly packed soilage and heavier debris. The polypropylene bristles sweep up the debris with excellent hopper loading.

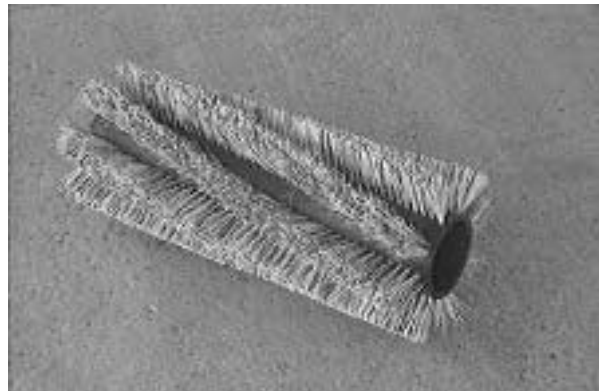

**Polyester 8-double row main sweep brush –**

Polyester combines the durability of nylon with the moisture resistance of polypropylene.

**Polyester 24-row main sweep brush –**

Polyester combines the durability of nylon with the moisture resistance of polypropylene. This high density brush is recommended for applications that sweep heavy accumulations of fine dust, sand, or other similar material.

**Polypropylene side brush** – A good general purpose brush for sweeping of light to medium debris in both indoor and outdoor applications. This brush is recommended when bristles may get wet.

**Nylon side brush** – A longer life, general purpose brush that is recommended for rough surfaces.

**Flat wire side brush** – Recommended for outside and curb-side sweeping where soilage is heavy or compacted. The stiff wire bristles dig out soilage. This brush is also recommended for foundry sweeping when heat may melt synthetic bristles.

**Non-scuff polypropylene scrub brush** – This brush uses a softer, general -purpose poly bristle to lift lightly compacted soilage, without scuffing high-gloss coated floors.

**Nylon scrub brush** – Recommended for scrubbing coated floors. Cleans without scuffing.

**Super abrasive bristle scrub brush** – Nylon fiber impregnated with abrasive grit to remove stains and soilage. Strong action on any surface, performs well on debris build-up, grease, or tire marks.

**Black high-productivity stripping pads** – Use these 12 mm (0.50 in) pads for aggressive stripping of floor finishes or sealers, or heavy-duty scrubbing.

**Brown stripping pads** – Use these pads for light stripping of floor finishes or sealers.

**Blue scrubbing pads** – Use these pads for medium to heavy-duty scrubbing on industrial floor surfaces.

**Red buffing pads** – Use these pads for light-duty scrubbing on industrial floor surfaces.

**White polishing pads** – Use these pads for surface cleaning of highly-polished or burnished floors.




# OPERATION

## SWEEPING

1. Start the engine.
2. Press the sweep switch.

*NOTE: The hopper door will open, the main sweeping brush will lower and activate, the sweep vacuum fan will activate, the side brush will lower and activate, and the engine speed will increase to the fast speed.*

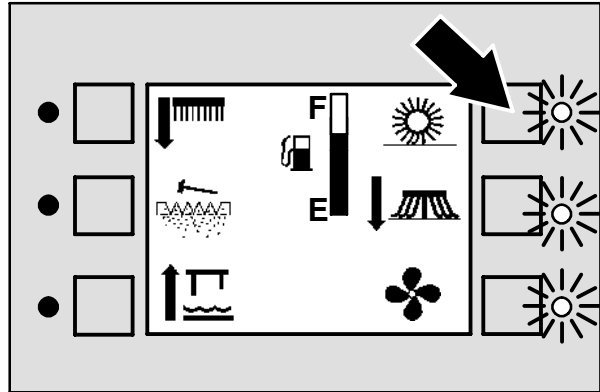

351648

3. Sweep as needed.


---

**STOP SWEEPING**

---

1. Press the sweep switch to stop the sweeping operations.

The main brush will stop and raise, the side brush will stop and raise, the sweeping vacuum will stop, the filter shaker will operate for a short time, and the engine speed will remain in the *fast* speed.

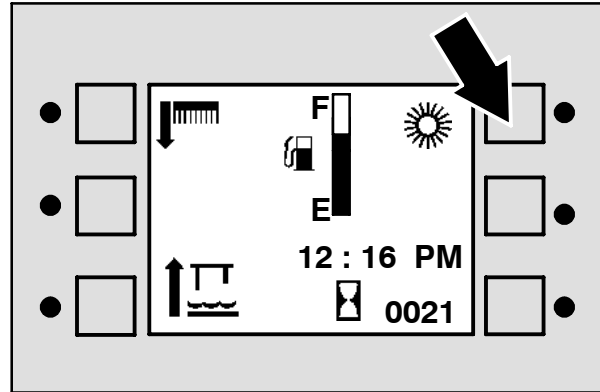

351662

## EMPTYING THE HOPPER

1. Stop sweeping.

*NOTE: The filter shaker will operate automatically and the hopper door will close automatically when sweeping functions are deactivated.*



2. Slowly drive the machine to the debris site or debris container.
3. Pull and hold the hopper lever backward to raise the hopper

**FOR SAFETY: When using machine, make sure adequate clearance is available before raising hopper.**

*NOTE: Be aware that the minimum ceiling height needed to high dump the hopper is 2286 mm (90 in).*

**FOR SAFETY: When using machine, move machine with care when hopper is raised.**

4. Drive the machine up to the debris container.
5. Push the hopper door switch to open the hopper door. The indicator light next to the switch will illuminate and the hopper door icon will indicate the hopper door is open.
6. Allow all of the debris in the hopper to fall into the debris container.

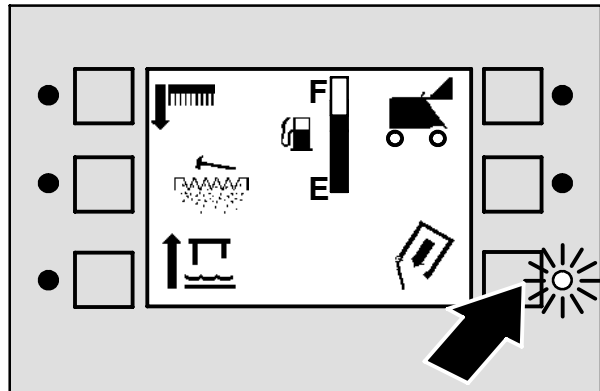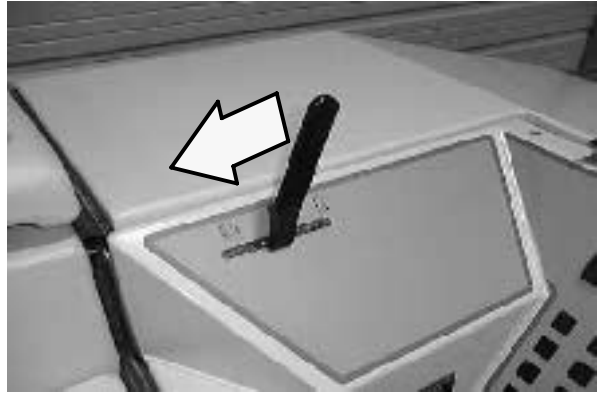


351659



7. Push the hopper door switch to close the hopper door. The indicator light next to the switch will go out and the hopper door icon will indicate the hopper door is closed.
8. Slowly back the machine away from the debris site or debris container when all of the debris has fallen out of the hopper.

**FOR SAFETY: When using machine, use care when reversing machine.**

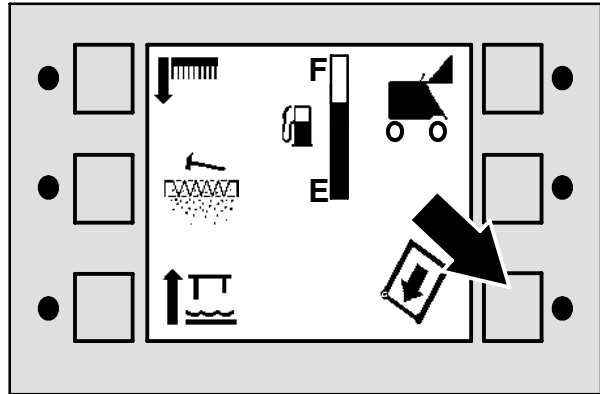

351663

9. Push the hopper lever forward to lower the hopper.



## FILLING THE TANKS

1. Start the machine.

**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

2. Drive the machine to the filling site.
3. Shut the engine off.
4. Set the parking brake.



5. Open the solution tank cover. Measure and pour in the correct amount of detergent. Fill the solution tank with water up to the FULL line near the top of the tank.

**FOR SAFETY: When using machine, follow mixing and handling instructions on chemical containers.**

*NOTE: Floor conditions, water condition, amount of soilage, type of soilage, and brush pressure all play an important role in determining the type and concentration of detergent to be used. For specific recommendations, contact your TENNANT representative.*



**WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).**

- Remove the detergent tank (option) lid. Fill the tank to just below the top. Be sure to use only the proper detergent for your scrubbing application. Put the lid back on the detergent tank.



**WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).**

*NOTE: Floor conditions, water condition, amount of soilage, type of soilage, and brush action all play an important role in determining the type and concentration of detergent used. For specific recommendations, contact your TENNANT representative.*

ES mode with auto-fill: Connect the hose from the water source to the auto-fill connection on the machine. Turn the ignition key to the on position and turn on the water source. The auto-fill will automatically fill the tanks to the proper level for ES operation and automatically shut-off.



*NOTE: An alarm will sound when the solution tank is full.*

ES mode *without* auto-fill: Fill the solution tank to the FULL line.

ES mode *without* auto-fill: Fill the recovery tank half full of water (to the top of the ES filter).

*NOTE: If you DO NOT want to use the ES system, DO NOT put water in the recovery tank. Turn the ES switch OFF.*

- Close the tank cover.

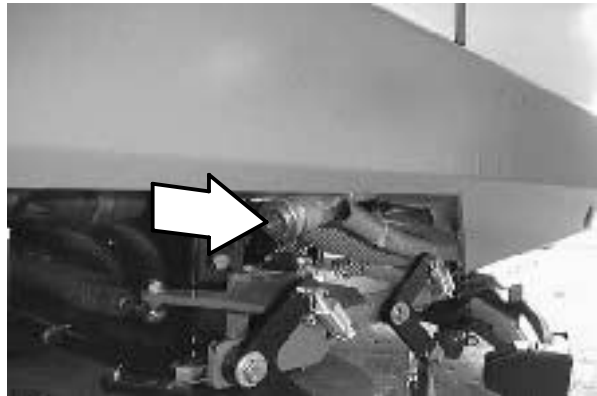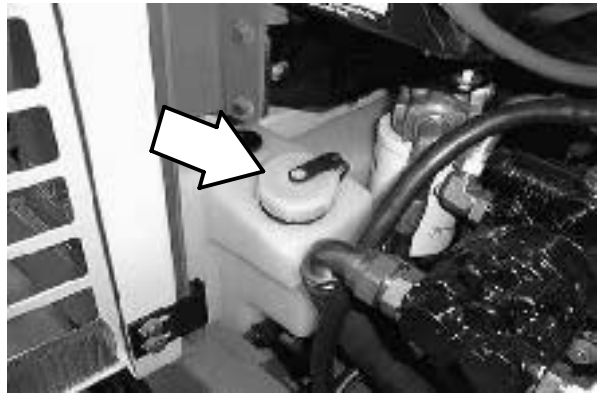


# OPERATION

## SCRUBBING

1. Start the engine.

**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

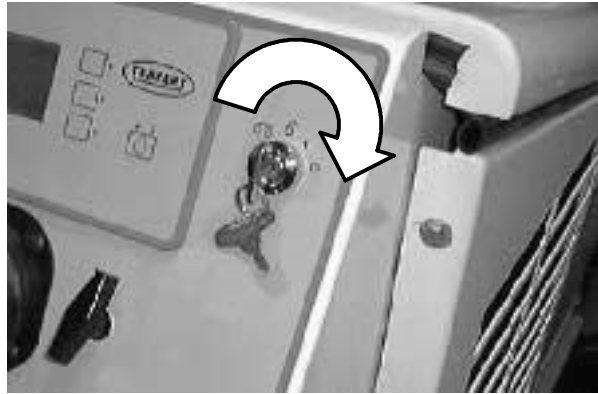

2. Adjust the solution flow to the floor as needed.


Low (1): Press the top of the switch. Use this flow rate for smooth floors and light dirt.

Off (0): Press the middle of the switch.

High (2): Press the bottom of the switch. Use this flow rate for rough floors and heavy or compacted dirt.



3. Press the scrub switch to start the scrubbing operations.

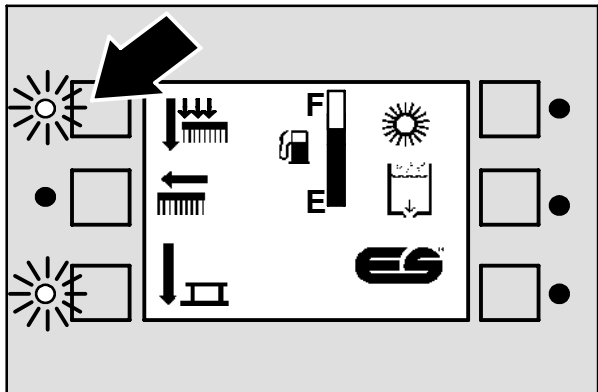

351647

As long as the machine is moving forward the scrub head will lower and the scrub brushes will start. The rear squeegee will also lower and the scrubbing vacuum will start. The solution flow will start when the machine first begins to move forward, but only if the solution flow switch is on. Also the optional ES system and detergent pump will start, if the switches are on. The engine speed will change to *Fast*.

*NOTE: The scrub head will raise when the directional pedal is in the neutral position. The rear squeegee will raise when the directional pedal is in the reverse position.*

*NOTE: If an excess of water in the recovery tank causes the recovery tank float to rise, an overflow alarm will sound for ten seconds and an overflow icon will appear on the control panel. All scrubbing functions will be canceled. To make the overflow icon disappear, drain the recovery tank, then press the scrub and squeegee switches.*


4. Adjust brush pressure for cleaning application.

Press and hold the scrub switch. The brush pressure will scroll through four settings. The pressure setting selected when the switch is released will be the new default brush pressure setting.

The brush pressure can be set into four different positions. Under normal conditions, the brush pressure should be set in the minimum settings (one or two downward arrows). Under heavy grime conditions, the brush pressure should be set in the maximum settings (three or four downward arrows). Travel speed and floor conditions will affect the scrubbing performance.

*NOTE: If sweeping operations are started while scrubbing with the scrub brush pressure set to the **Super Scrub** setting (four downward arrows), brush pressure will decrease to the third pressure setting (three downward arrows).*


*NOTE: The scrub head will raise when the directional pedal is in the neutral position. The rear squeegee will raise when the directional pedal is in the reverse position.*

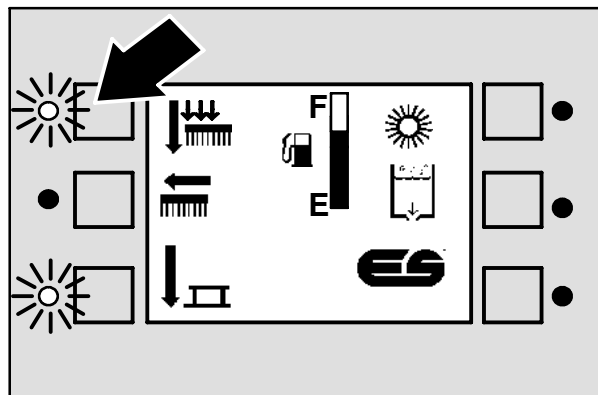

351647

## OPERATION


5. Press the edge scrub switch if edge scrubbing is necessary.

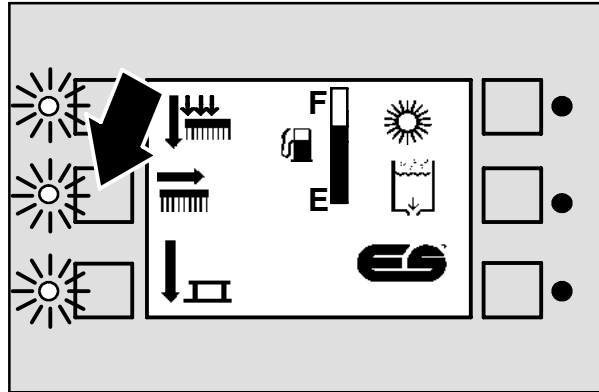

351660

6. Press the ES switch (option) if extended scrubbing is necessary.


*NOTE: When using the ES (option), the recovery tank must be filled with water up to the top of the ES filter.*

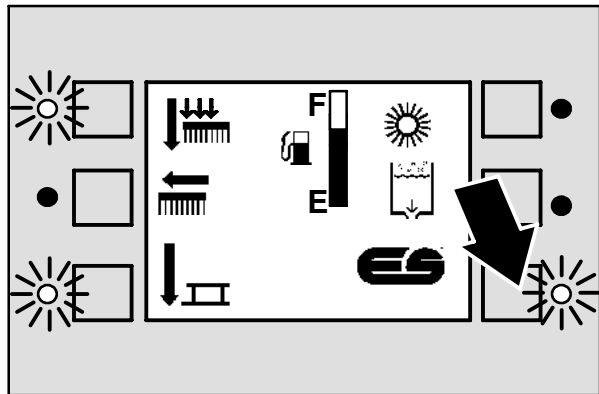


351647

*NOTE: If you **do not** want to use the ES system, make sure the indicator next to the ES switch is off.*

7. Drive the machine forward and scrub as required.

 **WARNING: Flammable materials or reactive metals can cause explosion or fire. Do not pick up.**

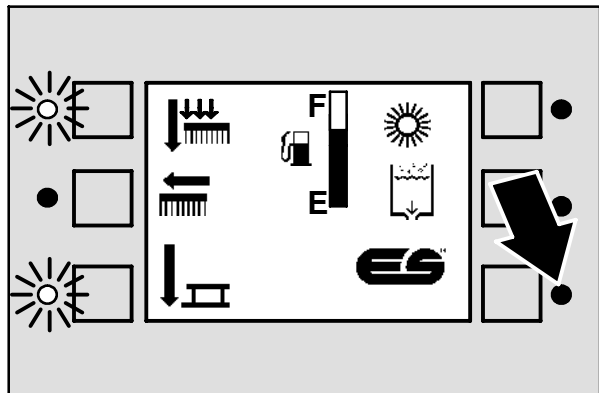

351647

---

## DOUBLE SCRUBBING

---

Double scrubbing is the process of making two or more passes over a heavily soiled area. The first pass is made with the rear squeegee raised to allow the solution to soak into the floor.

Use the maximum solution and detergent flow settings. Use a higher brush pressure setting. Let the solution remain on the floor for 5 to 15 minutes, then make a second scrubbing pass with the rear squeegee down.

**FOR SAFETY: When using machine, go slow on inclines and slippery surfaces.**

---


## STOP SCRUBBING

---

Press the scrub switch to stop the scrubbing operations.

The scrub brushes will stop and the scrub head will raise. The ES detergent pump (option) will stop, and the solution flow will stop. After a short delay, the rear squeegee will automatically raise and the scrubbing vacuum fan will stop. The engine speed will remain in the *fast* speed.

Continue driving the machine forward until the vacuum fan shuts off.

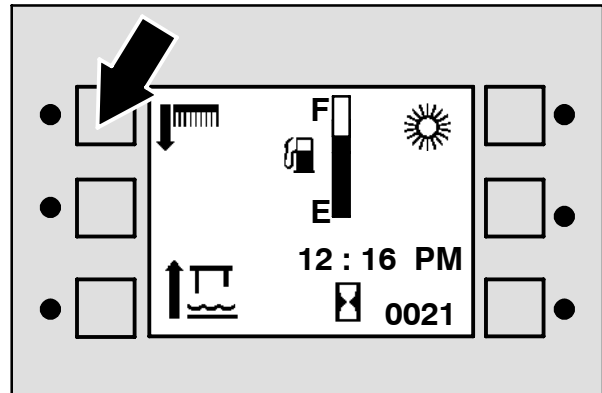


351662

## DRAINING AND CLEANING THE TANKS


When you are finished scrubbing or you hear the vacuum fan shut off and the machine starts trailing water, the recovery tank should be drained and cleaned. The solution tank then can be filled again for additional scrubbing.

If you used the machine in ES mode, the solution tank should also be drained and cleaned when you are finished scrubbing.

1. Stop scrubbing.
2. Drive the machine next to an appropriate disposal site.
3. Shut the engine off.

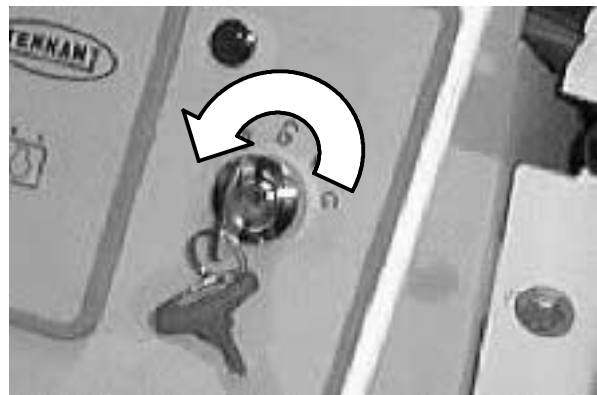

4. Set the parking brake.

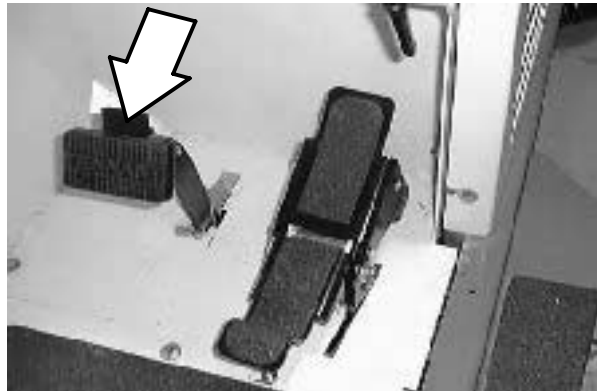



5. Unscrew the drain hose cap from the access cap of the recovery tank drain.
6. Pull out and place the drain hose next to the floor drain. Remove the drain end cap from the hose. Stand back, the solution rushes out of the drain hoses.



7. Open the recovery tank cover.
8. Spray the inside of the recovery tank with clean water. **DO NOT** allow any water to enter the vacuum fan air intake tube at the top of the tank.




9. Remove the large drain cap and flush out the bottom on the recovery tank.




## OPERATION

10. ES mode: Lift up the ES filter by the handle until the mesh is exposed and rinse it thoroughly.

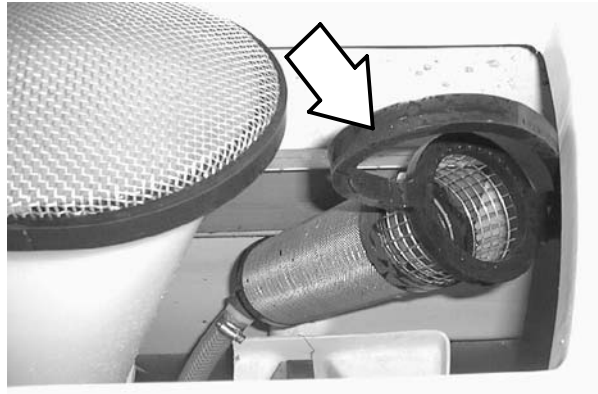

11. ES mode: Drain the solution tank. Flush out the solution tank with clean water. Rinse the solution outlet filters at the bottom of the tank through the drain access.

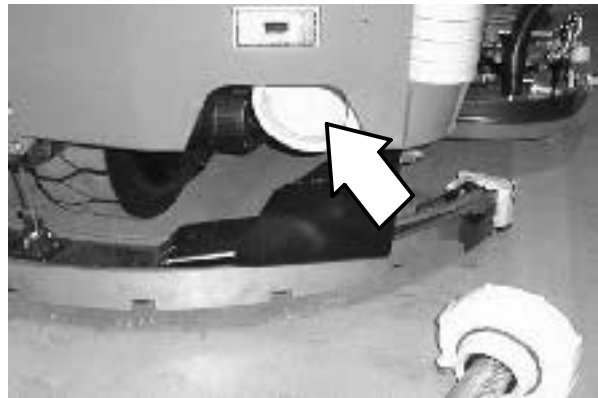

12. ES mode: Replace the recovery tank drain cap and fill the recovery tank with clean water up to the top of the ES filter.

13. ES mode: Start the ES system. Flush the ES pump by raising the float inside the recovery tank for 30 to 60 seconds.




14. Lower the recovery tank cover.
15. Shut the engine off.
16. Drain the recovery tank.
17. Replace the drain hoses and drain caps.

---


**STOP THE MACHINE**

---


1. Stop sweeping and scrubbing.
2. Take your foot off the directional pedal. Step on the brake pedal.

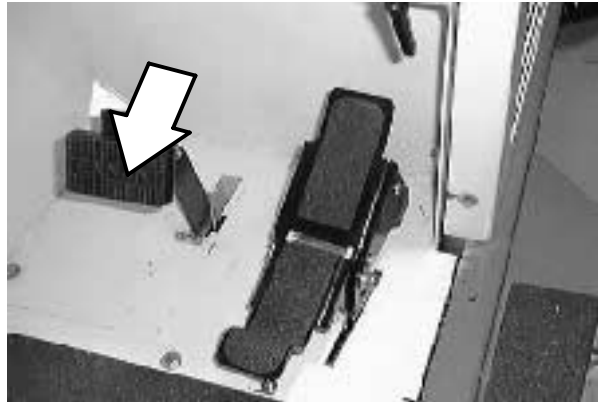

3. Shut the engine off. Remove the switch key.

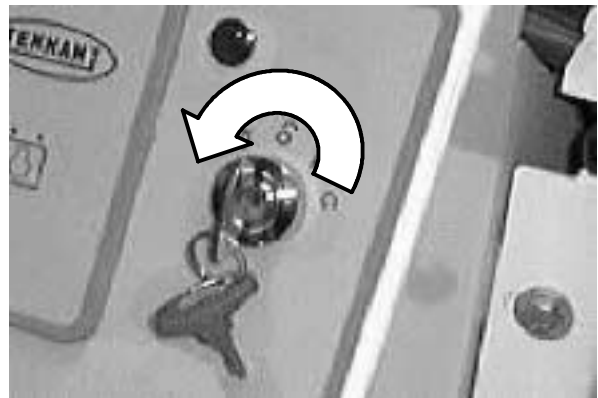

4. Set the machine parking brake.

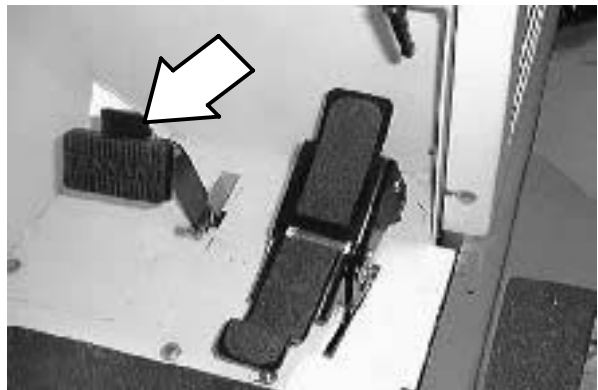

## OPERATION

---

5. LPG powered machines: Close the LPG tank's liquid service valve.



---

**POST-OPERATION CHECKLIST**


---

- Check the engine oil level.
- Check the engine coolant level.
- Check the radiator and hydraulic cooler fins for debris.
- Check the hydraulic fluid level
- Check the air filter indicator.
- Check the skirts and seals for damage and wear.
- Check the condition of the sweeping and scrubbing brushes. Remove any string, banding, plastic wrap, or other debris wrapped around them.
- Check the sweeping brush patterns for adjustment.
- Check the condition of the hopper dust filter and seals. Clean as required.
- Check the tank cover seals for damage and wear.
- Clean the vacuum fan inlet filter.
- Check the squeegees for damage, wear and for deflection adjustment.
- Check the vacuum hose for debris or blockage.
- ES machines; check the detergent tank level.
- Drain and clean the recovery tank.
- ES machines; drain and clean the solution tank and ES filter. Rinse level sensors.
- Check the brakes and steering for proper operation.
- Check the fuel level
- Empty the debris hopper.
- Check the service records to determine maintenance requirements.


## ENGAGING HOPPER SUPPORT BAR

1. Set the machine parking brake.


**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

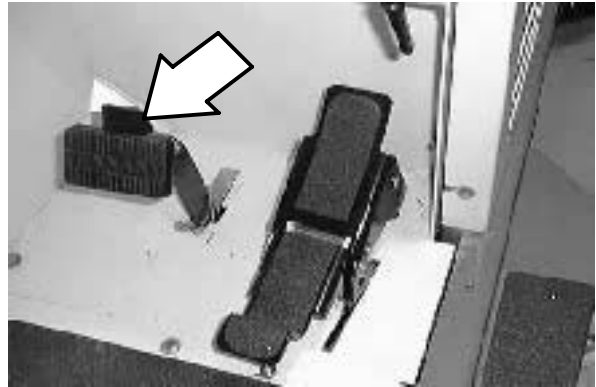

2. Start the engine.

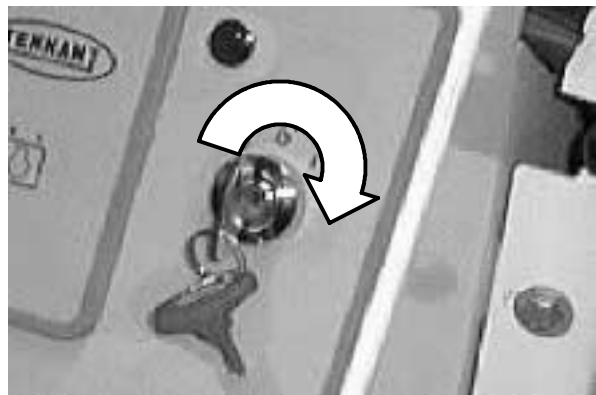


3. Pull the hopper lever backward until the hopper reaches its maximum height.

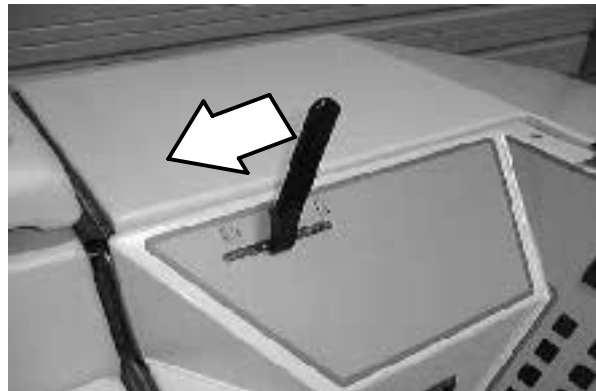



4. Lower and position the hopper support bar onto the support bar stop.



**WARNING: Raised hopper may fall.  
Engage hopper support bar.**

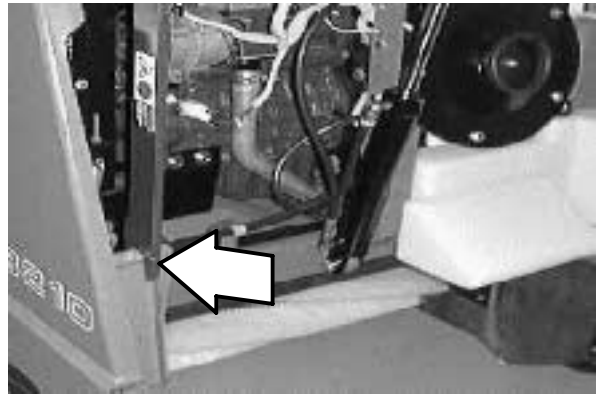

5. Slowly lower the hopper so the hopper support bar rests against the bar stop.

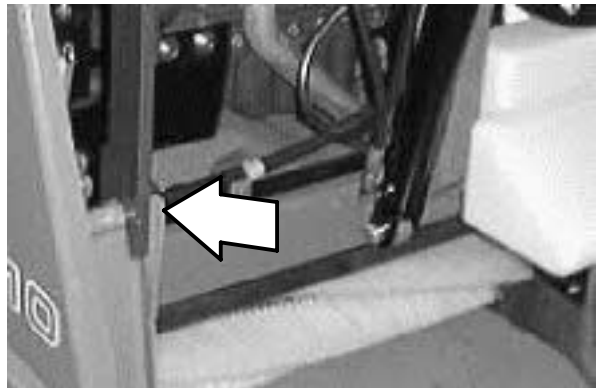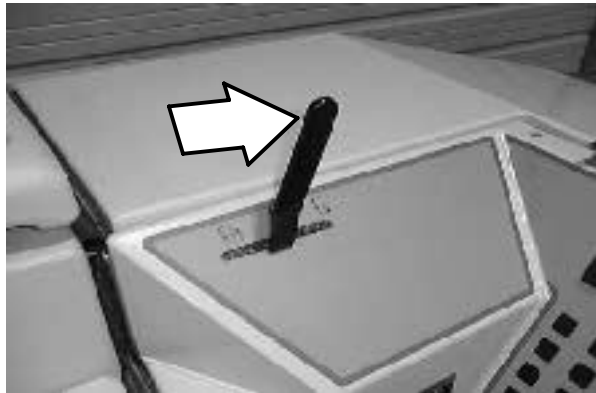

6. Shut the engine off.


## OPERATION

### DISENGAGING HOPPER SUPPORT BAR

1. Start the engine.

**FOR SAFETY: When starting machine, keep foot on brake and directional pedal in neutral.**

2. Pull the hopper lever backward to slightly raise the hopper in order to release the hopper support bar.

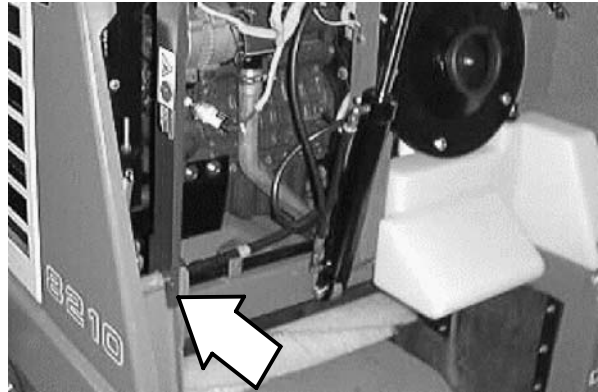


3. Put the support bar in its storage position.

**⚠ WARNING: Lift arm pinch point. Stay clear of hopper lift arms.**



4. Lower the hopper.
5. Shut the engine off.

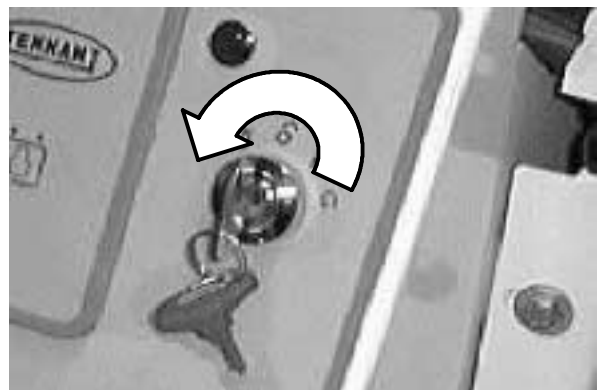



---

## OPERATION ON INCLINES

---

Drive the machine slowly on inclines. Use the brake pedal to control machine speed on descending inclines. DO NOT turn the machine on an incline; drive straight up or down.

The maximum rated incline for sweeping and scrubbing with the machine is 6°. The maximum rated incline during transport of the machine is 8°.

**FOR SAFETY: When using machine, go slow on inclines and slippery surfaces.**


---

## TIE DOWNS

---


The machine can be tied down for transport using the tie-down holes at the front and rear of the machine.

The front tie-down holes are located in front of the front tires.

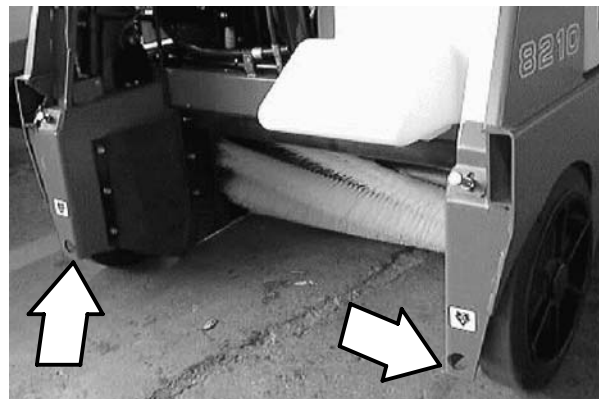

The rear tie-downs are located on the rear corners of the machine.

When transporting the machine on a trailer or in a truck, be sure to set the parking brake and block the tires to prevent the machine from rolling.

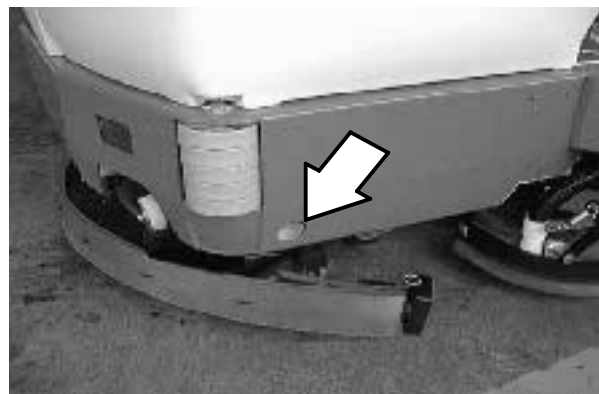


# OPERATION

## MACHINE TROUBLESHOOTING

Problem	Cause	Remedy
Excessive dusting	Brush skirts and dust seals worn, damaged, out of adjustment	Replace or adjust brush skirts or dust seals
	Hopper dust filter clogged	Shake and/or clean or replace dust filter
	Vacuum fan seal damaged	Replace vacuum seal
	Vacuum fan failure	Call TENNANT service personnel
	Thermo Sentry tripped	Allow Thermo Sentry to cool
Poor sweeping performance	Brush bristles worn	Replace brushes
	Main and side brushes not adjusted properly	Adjust main and side brushes
	Debris caught in main brush drive mechanism	Free drive mechanism of debris
	Main brush drive failure	Call TENNANT service personnel
	Side brush drive failure	Call TENNANT service personnel
	Hopper full	Empty hopper
	Hopper lip skirts worn or damaged	Replace lip skirts
	Wrong sweeping brush	Call TENNANT representative
Trailing water – poor or no water pickup.	Worn rear squeegee blades.	Rotate or replace blades
	Rear squeegee out of adjustment	Adjust rear squeegee
	Worn side squeegee blades.	Replace side squeegee blades
	Side squeegees out of adjustment	Adjust side squeegees
	Recovery tank cover not seated	Reseat tank cover
	Recovery tank cover seal worn	Replace seal
	Too much solution flow to floor	Reduce solution flow to floor
	Vacuum hose clogged	Flush vacuum hoses
	Rear squeegee tube clogged	Flush squeegee tube
	Recovery tank full	Drain recovery tank
		Check ES pump and filter
	Float stuck shutting off vacuum	Clean float
	Debris caught on rear squeegee	Remove debris
	Foam filling recovery tank	Empty recovery tank; use less or change detergent
	Vacuum hose to rear squeegee disconnected	Reconnect
	Vacuum-fan-to-recovery-tank-hose damaged	Replace hose
	Too much solution flow for floor conditions / machine speed	Adjust manual flow control valve to reduce total solution flow

<b>Problem</b>	<b>Cause</b>	<b>Remedy</b>
Little or no solution flow to the floor.	Solution tank empty.	Fill solution tank.
	Solution flow switch turned off.	Turn solution flow switch on.
	Solution supply lines plugged.	Flush solution supply lines.
	ES switch off.	Turn ES switch on.
	Manual control valve nearly closed	Open valve more
Poor scrubbing performance.	Debris caught on scrub brushes.	Remove debris.
	Improper detergent or brushes used.	Check with TENNANT representative for advice.
	Worn scrub brushes.	Replace scrub brushes.
ES system does not fill solution tank.	Clogged solution pump or lines.	Flush ES system.
	ES float stuck.	Clean floats of debris.
	Clogged ES pump filter.	Clean filter.
	Water levels too low in tanks.	Add water.

**MAINTENANCE**

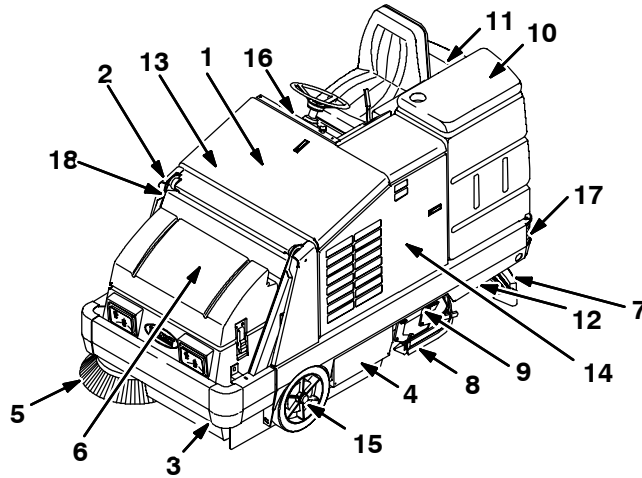

351551

**MAINTENANCE CHART**

*NOTE: Check procedures indicted (■) after the first 50-hours of operation.*

Interval	Key	Description	Procedure	Lubricant/ Fluid	No. of Service Points	
Daily	1	Engine air filter	Check indicator	-	1	
			Empty dust cap	-	1	
			Clean / change filter element as necessary	-	1	
	1	1	Engine crankcase	Check oil level	EO	1
	2	2	Brush compartment skirts	Check for damage, wear and adjustment	-	5
	3	3	Hopper lip skirts	Check for damage, wear and adjustment	-	3
	4	4	Main sweep brush	Check for damage, wear, and adjustment	-	1
				Check brush pattern	-	1
	5	5	Side brush	Check for damage, wear, and adjustment	-	1
				Check brush pattern	-	1
	6	6	Hopper dust filter	Shake to clean	-	2
	7	7	Rear Squeegee	Check for damage and wear	-	1
				Check deflection	-	1
8	8	Side Squeegees	Check for damage and wear	-	2	
9	9	Scrub brushes	Check for damage and wear	-	1	
10	10	Recovery tank	Clean	-	1	
10	10	Recovery tank, ES mode	Clean ES filter	-	1	
11	11	Solution tank, ES mode	Clean	-	1	
50 Hours	1	Engine crankcase	Change oil and filter element	EO	1	
	4	Main sweep brush	Rotate end-for-end	-	1	
100 hours	13	Radiator	Clean core exterior	-	1	
			Check coolant level	WG	1	
	1	Engine belts	Check belt tension	-	1	
	6	Hopper dust filter	Check for damage, clean or replace	-	1	

Interval	Key	Description	Procedure	Lubricant/ Fluid	No. of Service Points		
100 hours	14	Hydraulic fluid reservoir	Check fluid level	HYDO	1		
	15	Tires	Check all for damage	-	3		
	2,6	Main sweep brush and hopper seals	Check for damage or wear	-	8		
	7	Rear squeegee	Check leveling	-	1		
	10, 11	Tank cover seals	Check for damage or wear	-	2		
	12	Scrub head drag link arm pivot points	Lubricate	SPL	4		
200 Hours	17	Rear wheel support bearings	Lubricate	SPL	2		
	13	Radiator hoses and clamps	Check for tightness and wear	-	2		
	16	Parking brake	Check adjustment	-	1		
	16	Brake pedal	Check travel adjustment	-	1		
	18	Hopper lift arm pivots	Lubricate	SPL	2		
400 Hours	1	Engine (FORD)	Change fuel filter	-	2		
			Clean and re-gap or replace spark plugs	-	2		
	1	Engine (GM)	Clean and re-gap or replace spark plugs	-	4		
			Clean PCV hoses	-	4		
			Replace air filter	-	2		
			Replace fuel filter element (LPG)	-	2		
	15	Front wheel bearings	Check, lubricate, and adjust	SPL	2		
	1	Valve clearance (first 400 hours of machine use)	Check / adjust valve clearance	-	2		
800 hours	1	Engine (FORD)	Replace Oil fill cap/PCV breather. Clean PCV hose.	-	4		
				-	1		
			Torque intake manifold bolts	-	8		
	1	Engine (GM)	Replace fuel filter (Gasoline)	-	4		
	13	Cooling system	Flush	WG	2		
			14	Hydraulic fluid reservoir	Change hydraulic fluid	HYDO	1
					Replace suction strainer		1
					Replace hydraulic breather		1
			Replace cap		1		
	14	Hydraulic fluid filter	Change filter element	-	1		
	-	Hydraulic hoses	Check for wear and damage	-	All		
	1	Propelling motor	■Torque shaft nut	-	1		
	17	Rear wheel	■Torque wheel nuts	-	1		
1	Battery	■Clean and tighten battery cable connections	-	1			
1000 hours	1	Engine (GM engine)	Replace timing belt	-	1		

**LUBRICANT/FLUID**

EO . . . . Engine oil, 10W30 SAE-SG/SH only.

HYDO . . . Tennant or approved hydraulic fluid

WG . . . . Water and permanent-type ethylene glycol anti-freeze, -34° C (-30° F)

SPL . . . . Special lubricant, Lubriplate EMB grease (Tennant part number 01433-1)

*NOTE: More frequent intervals may be required in extremely dusty conditions.*

## LUBRICATION

### ENGINE (FORD)


Check the engine oil level daily. Change the engine oil and oil filter every 50 hours of machine operation. Use 10W30 SAE-SG/SH rated engine oil.

Fill the engine with oil until the oil is between the indicator marks on the dipstick. DO NOT fill past the top indicator mark. The FORD engine oil capacity is 3.7 L (4 qt) including the oil filter.

The FORD engine oil drain hose is located on the right-hand side of the machine, in front and above the scrub brushes.



The FORD engine oil filter is mounted toward the front of the engine compartment, behind the hopper.

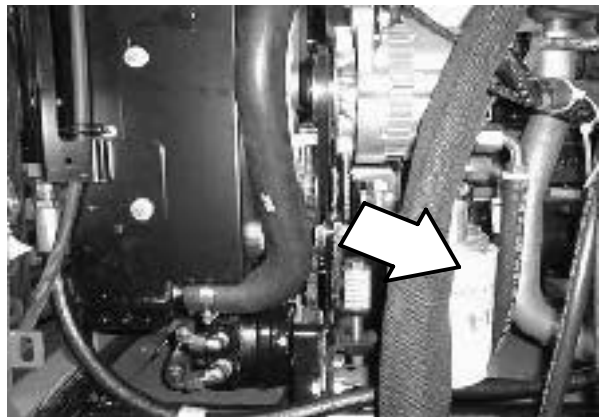

### ENGINE (GM)

Check the engine oil level daily. Change the engine oil and oil filter every 50 hours of machine operation. Use 10W30 SAE-SG/SH rated engine oil.

Fill the engine with oil until the oil level is between the indicator marks on the dipstick. DO NOT fill past the top indicator mark. The GM engine oil capacity is 3.3 L (3.7 qt) including the oil filter.

The engine oil drain hose is located on the right-hand side of the machine, in front and above the scrub brushes.



The GM engine oil filter is located on the hopper side of the engine.

To access the GM engine oil filter, raise the hopper and engage the hopper support bar.

**⚠ WARNING: Raised hopper may fall. Engage hopper support bar.**



Lift the lintel seal from its retainer and pull open to access the GM engine oil filter.



### **REAR WHEEL SUPPORT**

The rear wheel support pivots the rear wheel. The support has two grease fittings for the bearings. The rear wheel support bearings must be lubricated every 200 hours of operation. Use Lubriplate EMB grease (Tennant part number 01433-1).

**⚠ WARNING: Hot bumper. Keep away.**



## MAINTENANCE

### FRONT WHEEL BEARINGS


Inspect the front wheel bearings for seal damage, and repack and adjust every 400 hours of operation. Use Lubriplate EMB grease (Tennant part number 01433-1).



### HOPPER LIFT ARM PIVOTS

The hopper lift arms have two grease fittings, one on each lift arm at the top pivot.

The lift arms should be lubricated every 200 hours of operation. Use Lubriplate EMB grease (Tennant part number 01433-1).

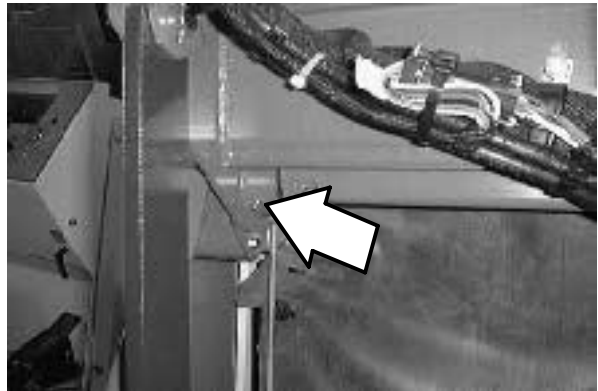


### SCRUB HEAD DRAG LINK ARMS

The scrub head drag link arms of the Edge scrub and Max Pro 1200 have a grease fitting at each end of the pivot points.

The scrub head drag link arms should be lubricated every 100 hours of operation. Use Lubriplate EMB grease (Tennant part number 01433-1).



**WARNING: Hot bumper. Keep away.**

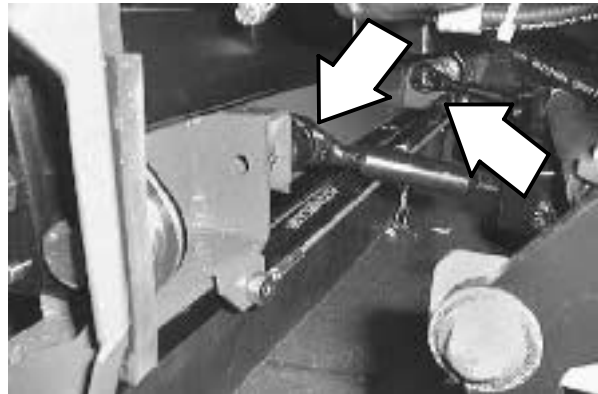



**HYDRAULICS**

**HYDRAULIC FLUID RESERVOIR**

The reservoir is located on the left side of the machine.

Mounted on top of the reservoir is a filler cap with a built-in breather and fluid level dipstick. Replace the cap every 800 hours of operation.

Check the hydraulic fluid level at operating temperature every 100 hours of operation. Make sure the hopper is down when checking hydraulic fluid level. The end of the dipstick is marked with FULL and ADD levels to indicate the level of hydraulic fluid in the reservoir.


Lubricate the filler cap gasket with a film of hydraulic fluid before putting the cap back on the reservoir.

**ATTENTION! Do not overfill the hydraulic fluid reservoir or operate the machine with a low level of hydraulic fluid in the reservoir. Damage to the machine hydraulic system may result.**

Drain and refill the hydraulic fluid reservoir with new hydraulic fluid every 800 hours of operation.

The hydraulic fluid filter is located at the bottom of the engine compartment. Replace the filter element every 800 hours of operation.

The reservoir has a built-in strainer outlet that filters hydraulic fluid before it enters the system. Replace the strainer every 800 hours of operation.

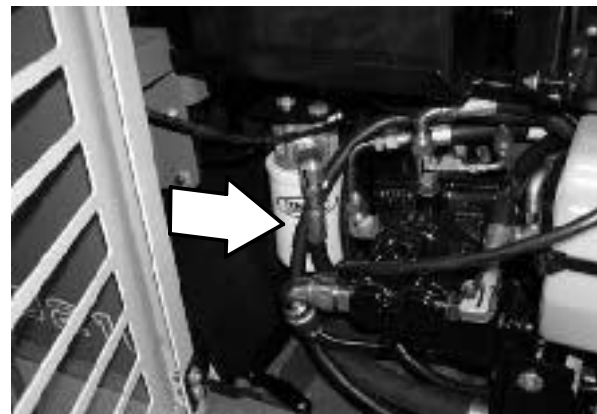

### HYDRAULIC FLUID

The quality and condition of the hydraulic fluid play a very important role in how well the machine operates. Tennant's hydraulic fluid is specially selected to meet the needs of Tennant machines.

Tennant's hydraulic fluids provide a longer life for the hydraulic components. There are two fluids available for different temperature ranges:

Tennant part no.	Ambient Temperature
65869	above 7° C (45° F)
65870	below 7° C (45° F)

The higher temperature fluid has a higher viscosity and should not be used at the lower temperatures. Damage to the hydraulic pumps may occur because of improper lubrication.

The lower temperature fluid is a thinner fluid for colder temperatures.

If a locally-available hydraulic fluid is used, make sure the specifications match Tennant hydraulic fluid specifications. Using substitute fluids can cause premature failure of hydraulic components.

**ATTENTION! Hydraulic components depend on system hydraulic fluid for internal lubrication. Malfunctions, accelerated wear, and damage will result if dirt or other contaminants enter the hydraulic system.**


**HYDRAULIC HOSES**

Check the hydraulic hoses every 800 hours of operation for wear or damage.

Fluid escaping at high pressure from a very small hole can be almost invisible, and can cause serious injuries.

See a doctor at once if injury results from escaping hydraulic fluid. Serious infection or reaction can develop if proper medical treatment is not given immediately.

**FOR SAFETY: When servicing machine, use cardboard to locate leaking hydraulic fluid under pressure.**

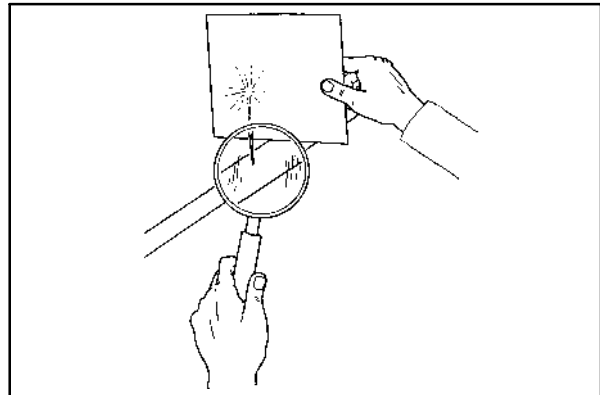

00002

If you discover a fluid leak, contact your mechanic or supervisor.

**PROPELLING MOTOR**

Torque the shaft nut to 508 Nm (375 ft lb) lubricated, 644 Nm (475 ft lb) dry after the first 50-hours of operation, and every 800 hours there after.



**WARNING: Hot bumper. Keep away.**

## ENGINE


### COOLING SYSTEM

Check the radiator coolant level every 100 hours of operation. Use clean water mixed with a permanent-type, ethylene glycol antifreeze to a  $-34^{\circ}\text{C}$  ( $-30^{\circ}\text{F}$ ) rating.

**FOR SAFETY: When servicing machine, avoid contact with hot engine coolant.**




The coolant system must be completely filled with coolant to keep the engine from overheating. When filling the radiator with coolant, use the drain cocks to ensure that all the air is out of the system.

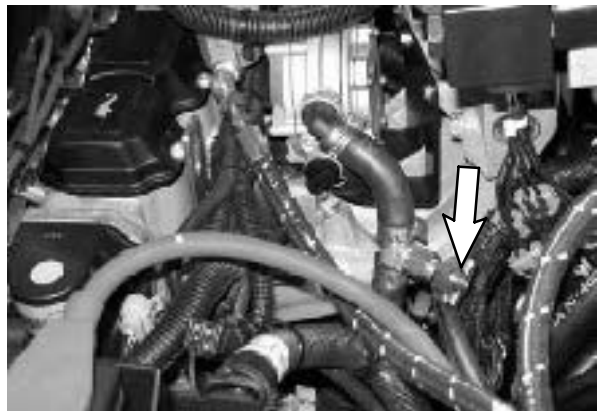

Check the radiator hoses and clamps every 200 hours of operation. Tighten the clamps if they are loose. Replace the hoses and clamps if the hoses are cracked, harden, or swollen.

Check the radiator core exterior and hydraulic cooler fins for debris every 100 hours of operation. Blow or rinse all dust, which may have collected on the radiator, in through the grille and radiator fins, opposite the direction of normal air flow. Be careful not to bend the cooling fins when cleaning. Clean thoroughly to prevent the fins becoming encrusted with dust. Clean the radiator and cooler only after the radiator has cooled to avoid cracking.

**FOR SAFETY: When servicing machine, wear eye and ear protection when using pressurized air or water.**

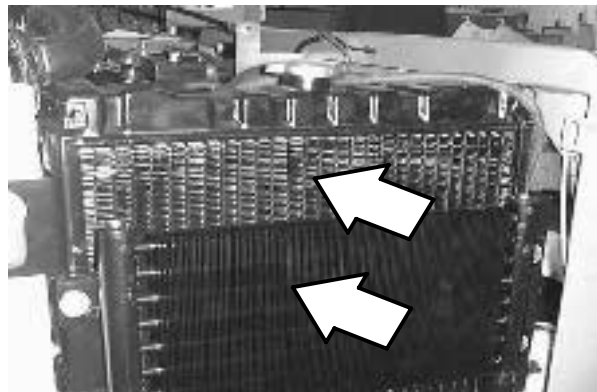


Flush the radiator and the cooling system every 800 hours of operation, using a dependable cleaning compound.

**AIR FILTER INDICATOR (OPTIONAL)**

The air filter indicator shows when to replace the air filter element. Check the indicator daily. The indicator's red line will move as the air filter element fills with dirt. Do not replace the air filter element until the red line reaches 5 kPa (20 in H<sub>2</sub>O) and the "SERVICE WHEN RED" window is filled with red. The indicator's red line may return to a lower reading on the scale when the engine shuts off. The red line will return to a correct reading after the engine runs for a while.


Reset the air filter indicator by pushing the reset button on the end of the indicator after replacing the air filter element.

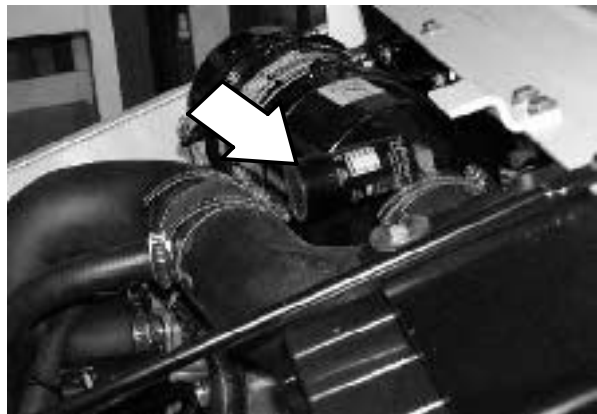

**AIR FILTER**


The engine air filter housing has a dust cap and a dry cartridge-type air filter element. Empty the dust cap daily. The air filter must be replaced whenever the filter element is damaged or when the optional air filter indicator shows a restriction. The air filters cannot be cleaned.

Machines with the heavy duty air filter (option) have a safety element inside the the standard element. Replace the inner element after the regular element becomes damaged or has been changed three times.

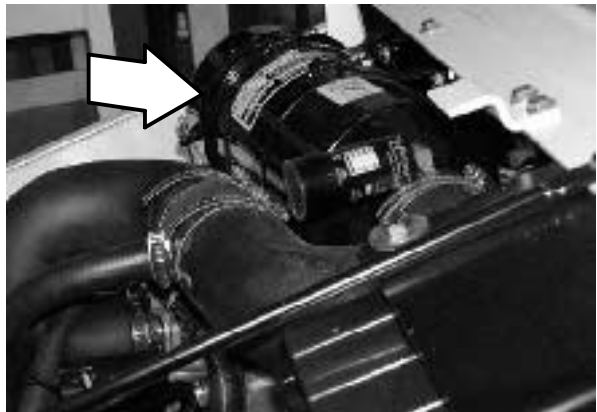

Install the dust cap on the air filter housing with the arrows pointing up.

Replace the air filter element only when the air filter indicator shows restriction in the air intake system. Do not remove the air filter element from the housing unless it is restricting air flow.

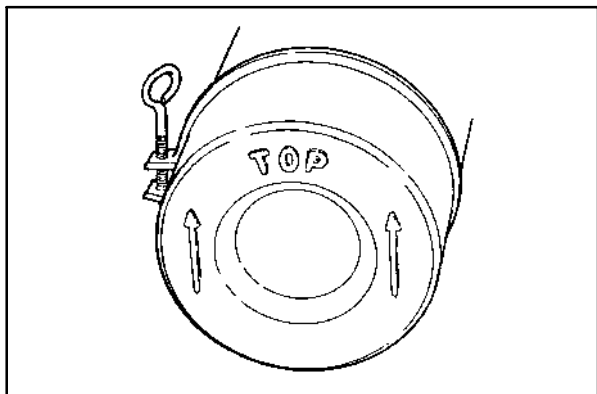

02492


## MAINTENANCE

### FUEL FILTER (GASOLINE)

Gasoline powered machines only: The fuel filter traps fuel contaminants. The filter is located on the fuel line inside the engine side door.

Replace the filter elements on machines with the FORD engine after every 400 hours of operation.

Replace the filter elements on machines with the GM engine after every 800 hours of operation.

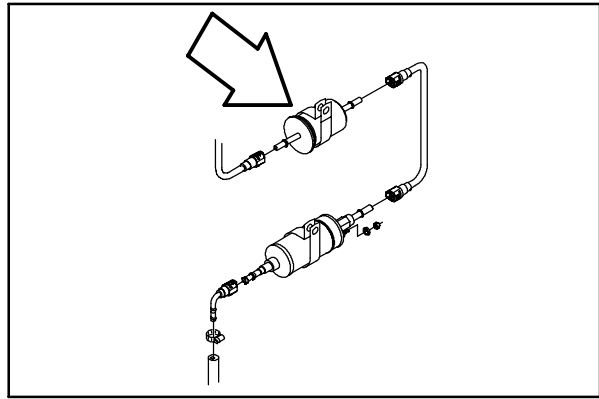


06805

### FUEL FILTER (GM LPG)

GM engine LPG powered machines only: The fuel filter traps fuel contaminants. The filter element is located inside the fuel lockoff on the LPG regulator going into the fuel injection system.

Replace the fuel filter element on machines with the GM engine after every 400 hours of operation.

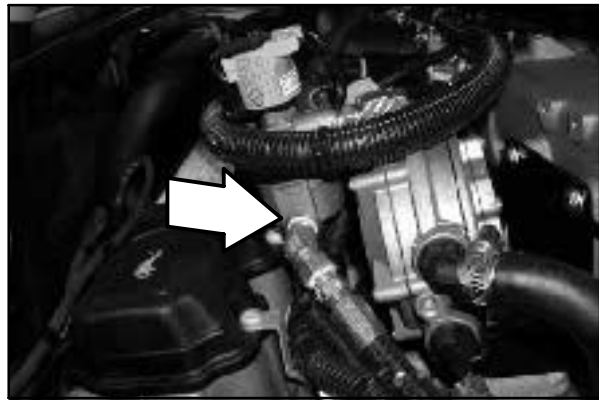

### SPARK PLUGS

Clean or replace, and set the gap of the spark plugs every 400 hours of operation.

The proper spark plug gap is 1 mm (0.042 in).


### CRANKCASE VENTILATION SYSTEM

Replace the Oil fill cap/PCV breather and clean the crankcase ventilation hose on machines with the FORD engine after every 800 hours of operation.

Clean the PCV hoses on machines with the GM engine after every 600 hours of operation.

### INTAKE MANIFOLD (FORD)

On machines with the FORD engine, tighten the intake manifold bolts or nuts every 800 hours of operation. They are tightened in a two-step sequence. Torque the M8 bolts or nuts to 7 to 9.5 Nm (5 to 7 ft lb) in the first step, and 19 to 28.5 Nm (14 to 21 ft lb) in the second step of torquing.

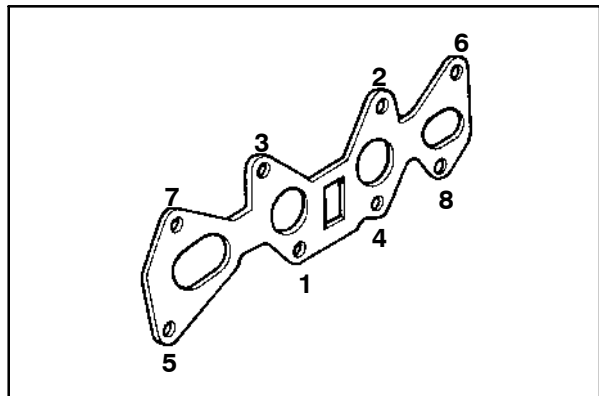

06805

### TIMING BELT (GM)

On machines with the GM engine, replace the timing belt after every 1000 hours of operation.

---

**BATTERY**


---

The battery for the machine is a low maintenance battery. Do not add water to the battery or remove the battery vent plugs.

The battery is located at the front of the engine compartment.

After the first 50 hours of operation, and every 800 hours after that, clean and tighten the battery connections.

**FOR SAFETY: When servicing machine, avoid contact with battery acid.**

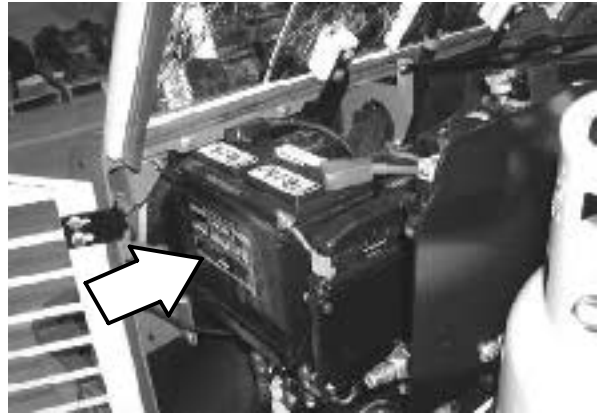

## BELTS AND CHAINS

### ENGINE AND ACCESSORY PUMP BELT (FORD)

The engine belt is driven by the engine crankshaft pulley and drives the water pump and alternator pulleys. Proper belt tension is 13 mm (0.50 in) from a force of 4 to 5 kg (8 to 10 lb) applied at the mid-point of the longest span.

The accessory pump belt is driven by the engine crankshaft pulley and drives the accessory pump.



**WARNING: Moving belt and fan. Keep away.**

Check and adjust the belt tension every 100 hours of operation.

Accessory pump belt adjustment is made by turning the bolt on top of the tension spring. The tension spring is located at the front of the engine compartment, near the accessory pump belt sheave. The accessory pump belt is at the proper tension when the tension spring is compressed to 3.81 cm  $\pm$  0.0076 mm (1.5 in  $\pm$  0.030 in). When adjusting the accessory pump belt tension, measure only the spring and not the washers at either end.

### ENGINE BELT (GM)


The engine belt is driven by the engine crankshaft pulley and drives the water pump, alternator, and accessory pump pulleys. Proper belt tension is 13 mm (0.50 in) from a force of 4 to 5 kg (8 to 11 lb) applied at the mid-point of the longest span.





**WARNING: Moving belt and fan. Keep away.**

*NOTE: If you do not have a belt tension gauge, press the belt mid-point of the longest span with your thumb (reasonable pressure). Proper belt tension is 13mm (0.50 in) to 20mm (0.75 in).*

Check and adjust the belt tension every 100 hours of operation.

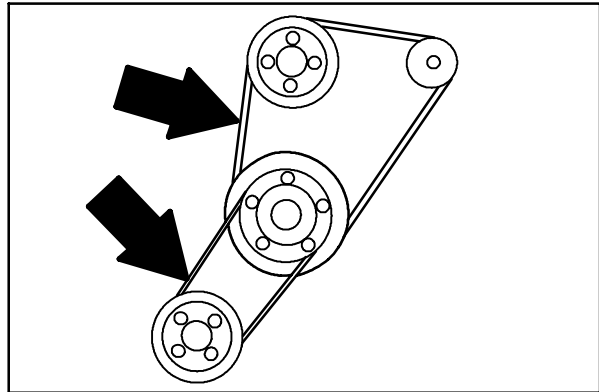

351646

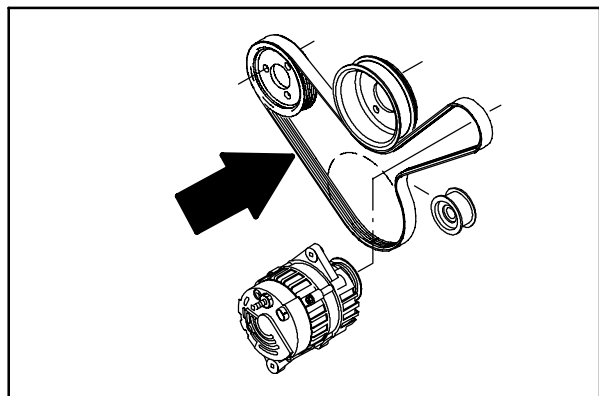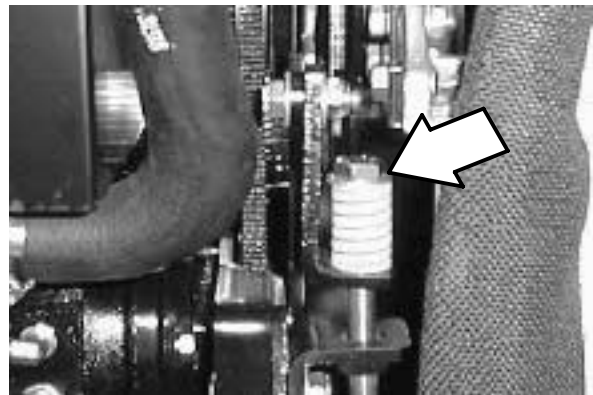





To access the GM engine belt and check the tension, raise the hopper and engage the hopper support bar.

**⚠ WARNING: Raised hopper may fall. Engage hopper support bar.**

Lift the lintel seal from its retainer and pull open to access the GM engine belt.

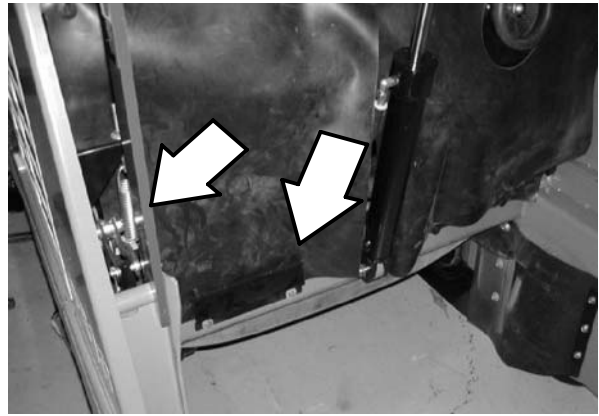

Adjust the GM engine belt tension by loosening the two hold down bolts and then turning the bolt on the tension arm. Retighten the hold down bolts. Access to the tension arm is located behind the front door access panel in the operator station.

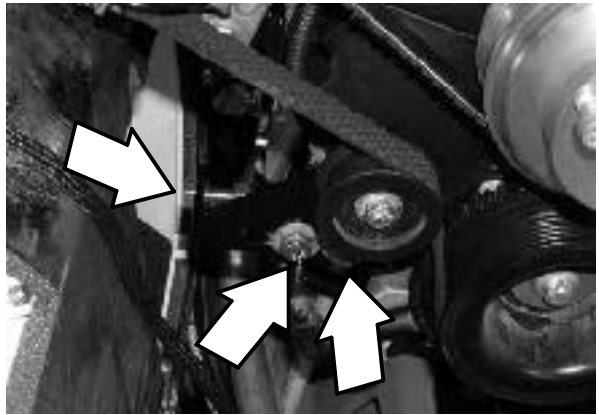

**STATIC DRAG CHAIN**

The static drag chain prevents the buildup of static electricity in the machine. The chain is attached to the machine directly in front of the scrub head and brushes.

Make sure the chain is touching the floor at all times.



## DEBRIS HOPPER

---

### HOPPER DUST FILTER

The dust filter filters the air pulled up from the hopper. The dust filter is equipped with a shaker to remove the accumulated dust particles. The dust filter shaker is operated by the filter shaker switch.

The standard dust filter works well for normal sweeping applications. The synthetic filter works well for humid or wet applications.

Shake the dust filter before emptying the hopper and at the end of every work shift. Check and clean or replace the dust filter every 100 hours of operation.

To clean the dust filter, use one of the following methods:

- **SHAKING** - Press the filter shaker switch.
- **TAPPING** - Tap the filter gently on a flat surface with the dirty side down. Do not damage the edges of the filter element or the filter will not seat properly in the filter frame.
- **AIR** - Always wear eye protection when using compressed air. Blow air through the dust filter opposite the direction of the arrows. Never use more than 690 kPa (100 psi) of air pressure and never closer than 50 mm (2 in) away from the filter. This may be done with the dust filter in the machine.

**FOR SAFETY: When servicing machine, wear eye and ear protection when using pressurized air or water.**

- **WATER** - Rinse the synthetic filter with a low pressure garden hose through the dust filter opposite the direction of the arrows. The standard dust filter can also be rinsed, but the filter will degrade with each rinsing and should be replaced after rinsing five times.

*NOTE: Be sure the dust filter is dry before reinstalling it in the machine.*



**REMOVING HOPPER DUST FILTER**

1. Stop the engine and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

2. Open the hopper cover.
3. Lift the dust filter element out of the hopper insert.



4. Clean or discard the dust filter as required.
5. Put the cleaned or new dust filter in the hopper insert with the arrows pointing up.
6. Close the hopper cover.



**THERMO SENTRY**

The Thermo Sentry, located inside the hopper, senses the temperature of the air pulled up from the hopper. If there is a fire in the hopper, the Thermo Sentry stops the vacuum fan and cuts off the air flow.

The Thermo Sentry resets itself automatically after cooling down.

---

## SCRUB HEAD

---

The scrub head encloses the scrub brushes and a solution dispensing system. The scrub head is located directly behind the sweeping brush compartment.

The scrub head is factory adjusted and the measurement should not be changed unless scrub head parts are damaged or are replaced.

---

## BRUSHES

---

### MAIN SWEEP BRUSH

The main sweep brush is cylindrical and spans the width of the machine, sweeping debris into the hopper.

Check the brush daily for wear or damage. Remove any string or wire tangled on the main brush, main brush drive hub, or main brush idler hub.

Check the main sweep brush pattern daily. The pattern should be 50 to 65 mm (2.0 to 3.0 in) wide with the main sweep brush in the lowered position. Adjust the main sweep brush pattern by turning the main brush pressure knob located to the left of the steering wheel, at the top of the instrument panel.

Rotate the main brush end-for-end every 50 hours of operation for maximum brush life and best sweeping performance.

Sweeping performance often becomes less effective as the bristle length is worn. Replace the main sweep brush when the remaining bristles measure between 40 mm (1<sup>1</sup>/<sub>2</sub>in) and 50 mm (2 in) in length.




**REPLACING MAIN SWEEP BRUSH**


1. Stop the engine and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**


2. Release the scrub head guard arm by pulling the retaining clip over the top of the pin. Remove the pin. Swing the scrub head guard arm out toward the front tire.

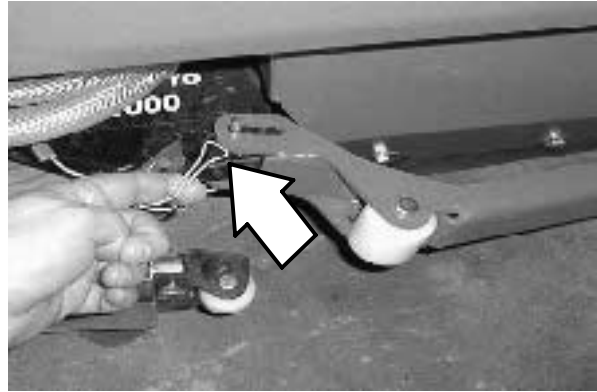

3. Unlatch and swing the right side main brush door open. The latch is located just to the rear of the door and must be pushed upward to release the door.

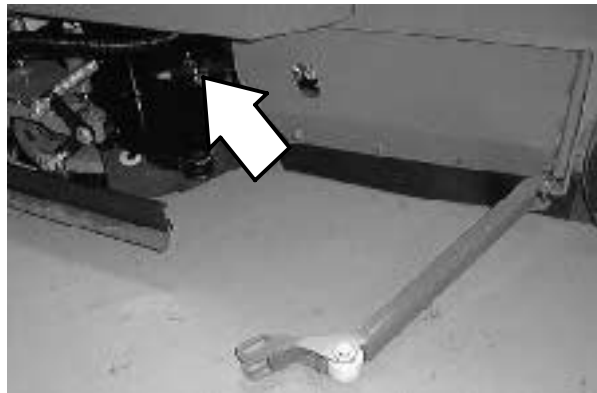


4. Remove the main brush idler plate by turning the idler plate retainer nut counter-clockwise.

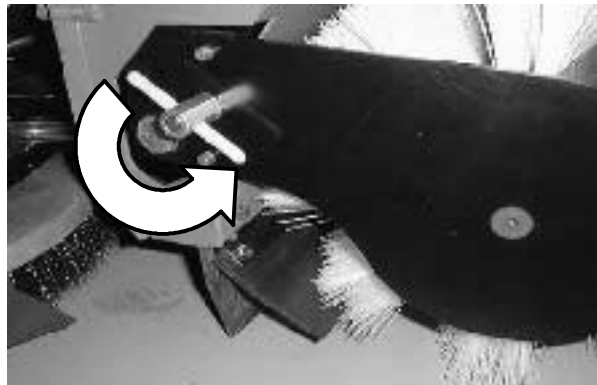


## MAINTENANCE


5. Pull the main sweep brush off the brush drive plug and out of the main brush compartment.
6. Rotate the main brush end for end or, if necessary, install a new main brush.
7. Slide the main sweep brush onto the drive plug. Rotate the brush until it engages the drive plug. Push it all the way onto the plug.

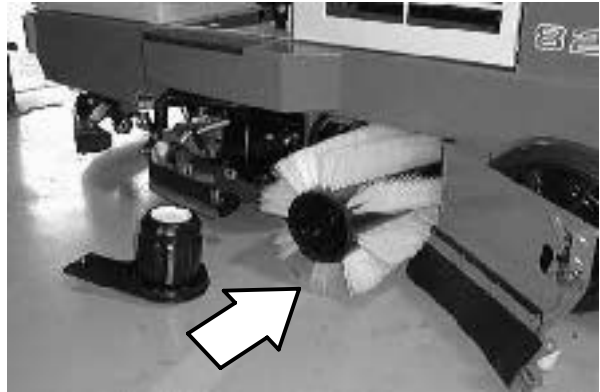

8. Replace the main brush idler plate and secure it by turning the idler plate retainer nut clockwise.

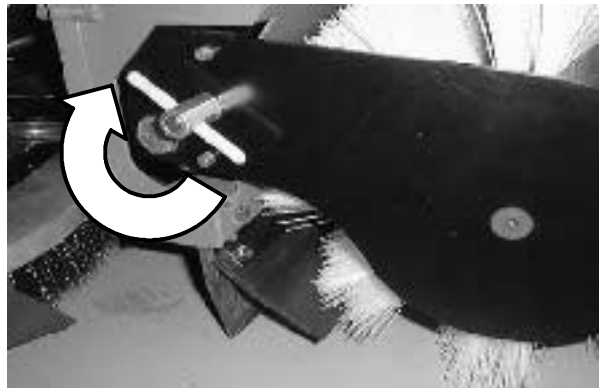

9. Close and latch the main brush door, then swing the scrub head guard arm back in place and replace the pin. Install the pin from the bottom up.

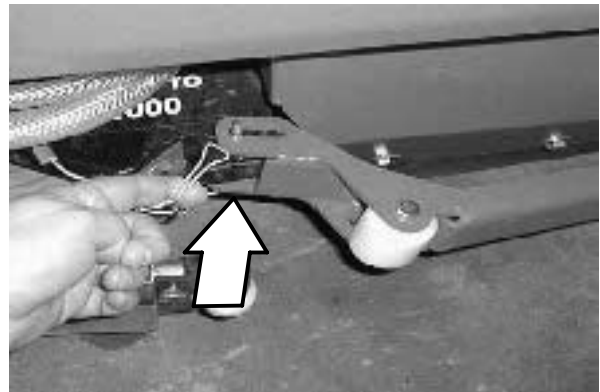

**CHECKING AND ADJUSTING MAIN SWEEP BRUSH PATTERN**


1. Apply chalk, or some other material that will not easily blow away to a smooth and level section of the floor.

*NOTE: If chalk or other material is not available, in Step 4 allow the sweep brush to spin on the floor for two minutes. A polish mark will remain on the floor.*

2. Position the main sweep brush over the chalked area.
3. Start the main sweep brush.
4. Allow the main brush to sweep for 15 to 20 seconds while keeping a foot on the brakes to keep the machine from moving.

*NOTE: If chalk or other material is not available, allow the sweep brush to spin on the floor for two minutes. A polish mark will remain on the floor.*

5. Stop the main sweep brush.
6. Drive the machine off the test area.
7. Observe the width of the brush pattern. The proper brush pattern width is 50 to 65 mm (2.0 to 3.0 in).

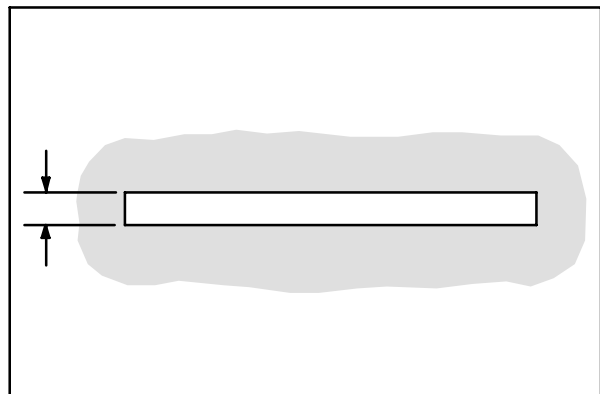


00582


## MAINTENANCE

8. To increase the width of the main sweep brush pattern, turn the main sweep brush down pressure knob counter-clockwise.

To decrease the width of the main sweep brush pattern, turn the main sweep brush down pressure knob clockwise.

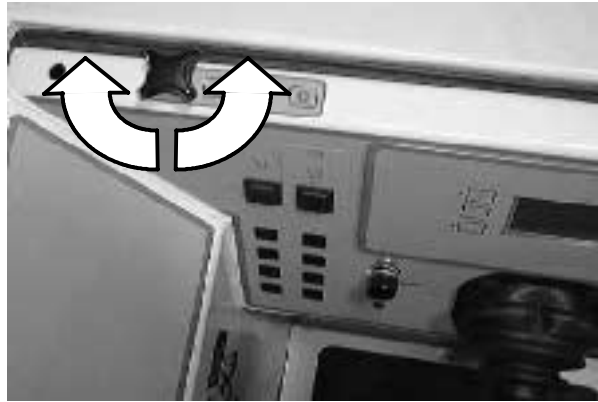


If the main sweep brush pattern is tapered more than 15 mm (0.5 in) on one end than the other, adjustment of the main brush pattern is necessary.

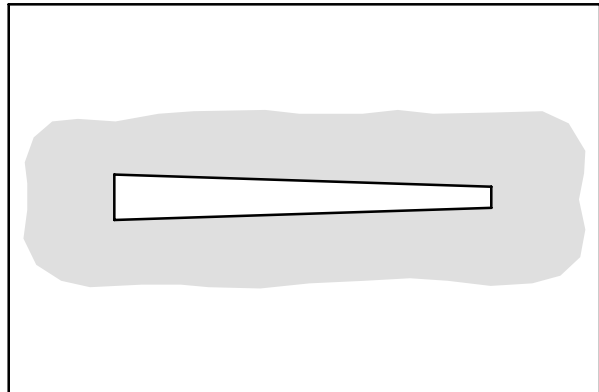


00601

- A. The bearing bracket mounting bolts (3), adjust the main brush pattern. The bolts are located behind the main brush, on the inside of the main brush idler arm. Removal of the idler arm and main brush is NOT necessary to adjust the main brush pattern.

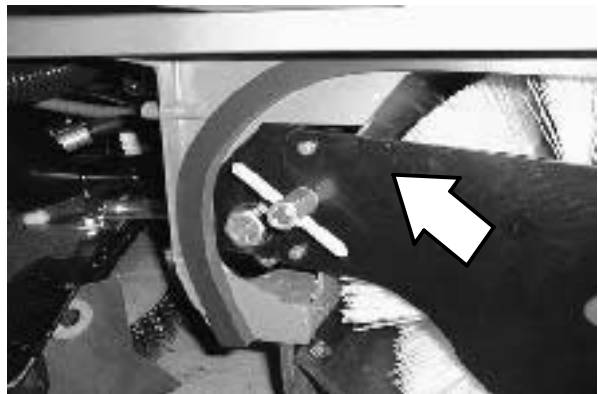

- B. Loosen the bolts (shown with idler arm and main brush removed). Move the bearing bracket down to increase the width of the brush pattern on the right-hand side or up to decrease the width of the brush pattern on the right-hand side. Tighten the bolts.

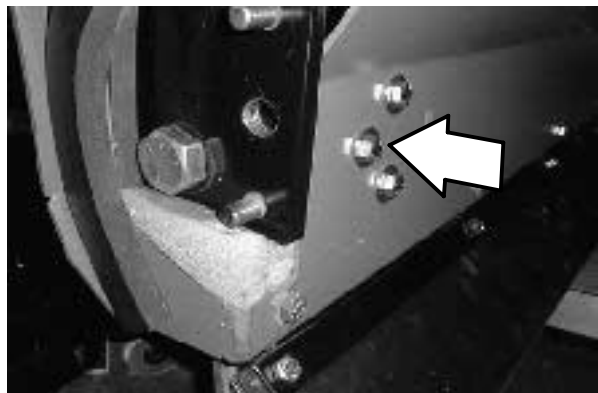

- C. Check the main sweep brush pattern and readjust as necessary.




**SIDE BRUSH**

The side brush sweeps debris along edges into the path of the main brush.

Check the brush daily for wear or damage. Remove any string or wire found tangled on the side brush or side brush drive hub.

Check the side brush pattern daily. The side brush bristles should contact the floor in a 10 o'clock to 3 o'clock pattern when the brush is in motion.

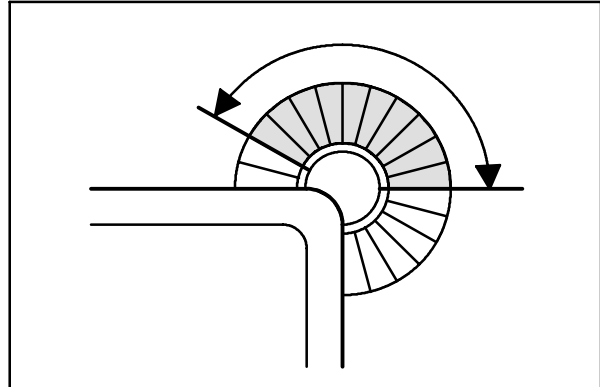

350327

Adjust the side brush pattern using the side brush down pressure knob. Turn the knob counter-clockwise to increase the brush contact with the sweeping surface, and clockwise to decrease the brush contact with the sweeping surface.



### REPLACING SIDE BRUSH

The side brush should be replaced when it no longer sweeps effectively for your application. A guideline length is when the remaining bristles measure 50 mm (2 in) in length. You may change the side brush sooner if you are sweeping light litter, or wear the bristles shorter if you are sweeping heavy debris.

1. Empty the debris hopper.
2. Raise the hopper and engage the hopper support bar.

**⚠ WARNING: Raised hopper may fall. Engage hopper support bar.**


3. Set the machine parking brake.
4. Stop the engine.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

5. Remove the side brush retaining pin from the side brush drive shaft by pulling the pin keeper off the end of the pin.
6. Slide the side brush off the side brush drive shaft.

*NOTE: Remove the drive hub and put it on the new brush if one is not installed.*

7. Slide the new side brush onto the side brush drive shaft.
8. Insert the side brush retaining pin through the side brush hub and shaft.
9. Secure the pin by clipping the pin keeper over the end of the pin.
10. Disengage the hopper support bar and lower the hopper.
11. Adjust the side brush pattern with the side brush down pressure knob.

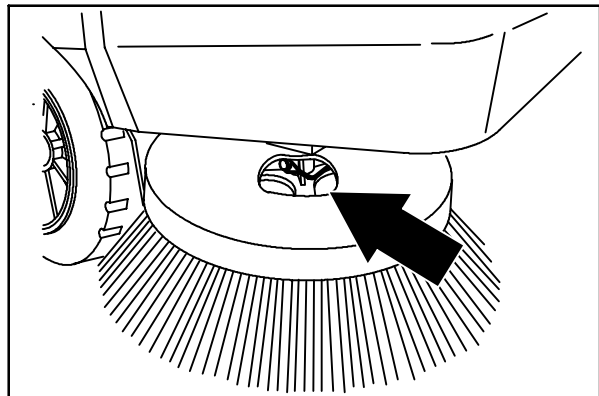

08019

**SCRUB BRUSHES**

Two disc-type scrub brushes scrub the floor. Optional three brush scrub heads are available. A spring lock clip holds the scrub brushes onto the drive hubs.

The scrub brushes should be checked daily for tangled wire or string, wear, and damage. The brushes should be replaced if large portions of the brush bristles are missing or if the remaining brush bristle measure 0.50 in (12 mm) or less in length.

*NOTE: Replace all scrub brushes at the same time to ensure equal scrubbing performance.*

To use the stripping, scrubbing, buffing, or polishing pads, install the pads onto brush drivers. Secure each pad onto the driver with a pad retaining plug. Install the brush drivers in place of the normal scrubbing brushes. Use the normal amount of detergent and water.

## MAINTENANCE


---

### REPLACING THE SCRUB BRUSHES

1. Stop the engine.
2. Set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

3. Press the brush spring clip ends together with your thumb and index finger to remove the scrub brush. Repeat for the other brushes.
4. When replacing scrub brushes, start with the center brush, if applicable. Slide the new scrub brush under the scrub brush drive assembly.
5. Line up the scrub brush drive socket with the drive plug.
6. Press the brush spring clip together and lift the scrub brush onto the drive plug. Release the spring clip when the brush is in place. Repeat for the other brushes.

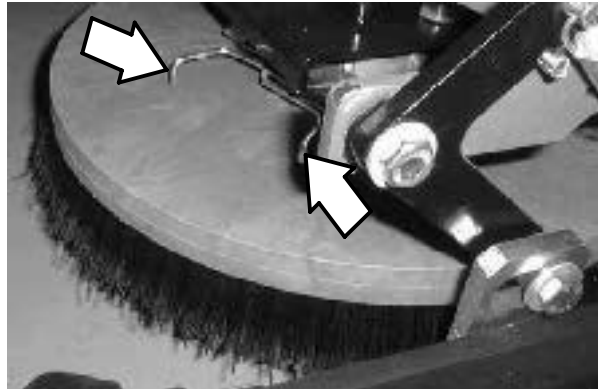

---


## SOLUTION SYSTEM

---

### RECOVERY TANK

Recovered solution collects in the recovery tank. The recovery tank should be drained and cleaned daily, or when the recovery tank full light comes on.

ES option: The ES filter inside the tank should be cleaned daily.

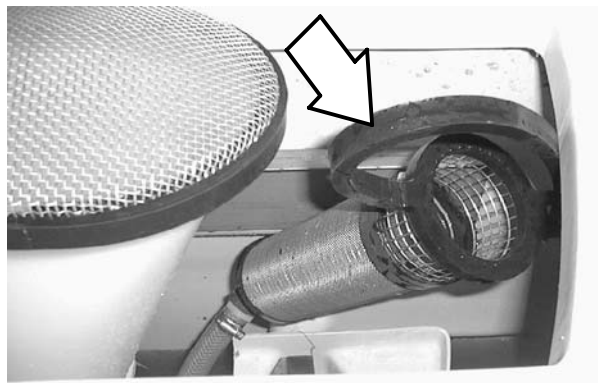

The vacuum fan air intake screen should be checked daily and cleaned as necessary. To clean the screen, remove it and spray it off with a hose. DO NOT allow any water to enter the vacuum fan air intake tube.



### **SOLUTION TANK**

The solution tank contains the cleaning solution.

The solution tank does not require regular maintenance. If deposits form on the bottom of the tank, rinse the tank with a strong blast of warm water. The tank can be flushed through the drain opening. Drain the tank with the solution tank drain hose.

The solution tank on machines with the ES option should be drained and cleaned daily. Rinse the solution outlet filters at the bottom of the tank through the drain access.



---

### **SQUEEGEES**

---

The rear squeegee channels water into the vacuum fan suction. The front blade channels the water, and the rear blade wipes the floor.

The side squeegees control water spray and channel water into the path of the rear squeegee.

### **REAR SQUEEGEE**

Check the squeegee blades for damage and wear daily. Rotate or replace either of the squeegee blades if the leading edge is torn or worn half-way through the thickness of the blade.

The squeegee can be adjusted for leveling and deflection. The deflection of the squeegee blades should be checked daily, or when scrubbing a different type of floor. The leveling of the squeegee should be checked every 100 hours of machine operation.

## MAINTENANCE

### LEVELING THE REAR SQUEEGEE

Leveling of the squeegee assures even contact the length of the squeegee blade with the surface being scrubbed. Make sure this adjustment is done on an smooth, level floor.


1. Lower the rear squeegee. Shut off the engine and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**


2. Grab the rear squeegee assembly and lift it until the assembly is resting on the squeegee blades without any deflection.

 **WARNING: Hot bumper. Keep away.**

3. Loosen the cam locking screws located on the outside of each upper squeegee linkage by turning 1/2 to 1 turn. Do NOT overturn as this may disengage the cam locking tabs.

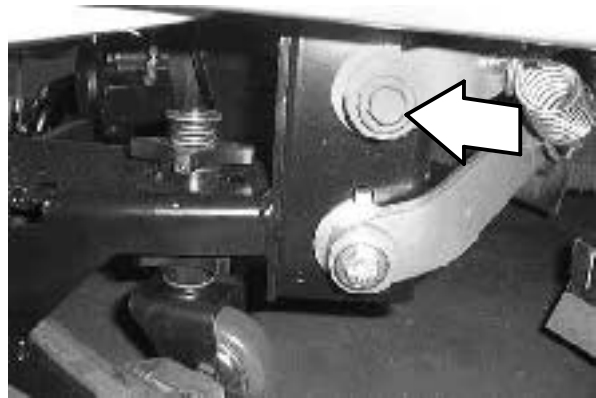

4. Adjust the squeegee blade until it deflects more at the center and less at the tips. The adjustment cams are located on the inside of the squeegee frame. Turn the adjustment cams forward to raise the tips of the squeegee and backward to lower the tips of the squeegee. The notch on the cam will be straight up or slightly toward the rear when adjusted properly. Hold the cam in this position and tighten the cam locking screws.

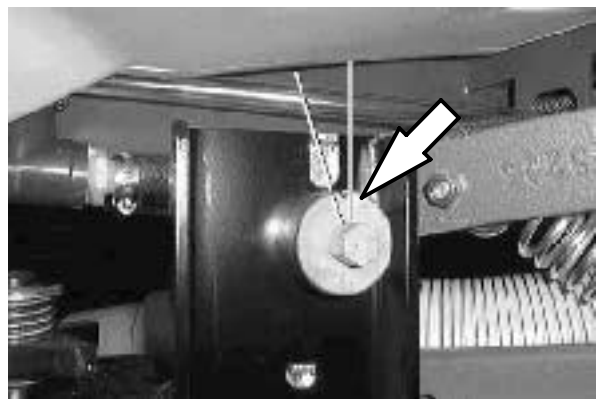

5. Start the machine, lower the squeegee and drive it forward to check the squeegee blade deflection. The squeegee blade should deflect more at the center and less at the tips. See *ADJUSTING REAR SQUEEGEE BLADE DEFLECTION* section of this manual.

ADJUSTING REAR SQUEEGEE BLADE DEFLECTION

Deflection is the amount of curl the squeegee blade has when the machine moves forward with the squeegee lowered to the floor.


1. Lower the squeegee and drive the machine forward.
2. Shut off the engine and set the machine parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

3. Look at the deflection of the rear squeegee blade. The correct amount of deflection is 25 to 22 mm (1.00 to 0.88 in) at the center of the squeegee and about 3 mm (0.12 in) less deflection at the tips of the squeegee.




**WARNING: Hot bumper. Keep away.**

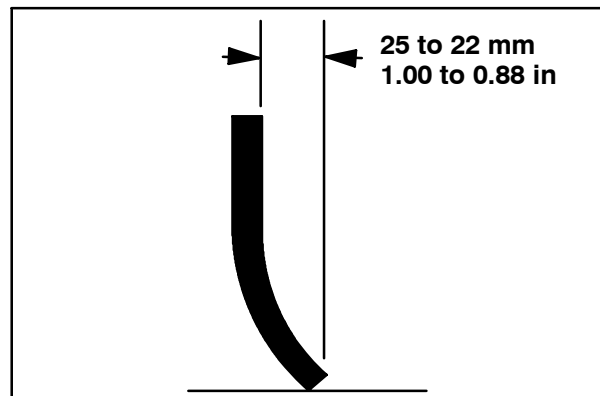

03719

4. To adjust the amount of deflection, loosen the top knob on the two casters.
5. Turn the bottom knob clockwise to decrease the blade deflection. Turn the bottom knob counter-clockwise to increase the blade deflection. Be sure to turn both knobs the **same** number of turns. Tighten the top knobs on the casters.
6. Start the machine, lower the squeegee and drive the machine forward again to check the squeegee blade deflection. Readjust the squeegee blade deflection if necessary.
7. Raise the squeegee when finished.

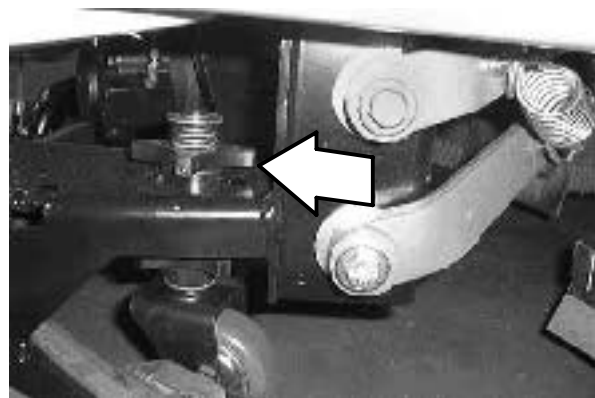

## MAINTENANCE


### SIDE SQUEEGEES

#### ADJUSTING THE SIDE SQUEEGEES

The side squeegee has one adjustment; height. To change the height adjustment, disconnect the squeegee spring from the clevis pin and move the clevis pin to a different hole location.



**WARNING: Hot bumper. Keep away.**

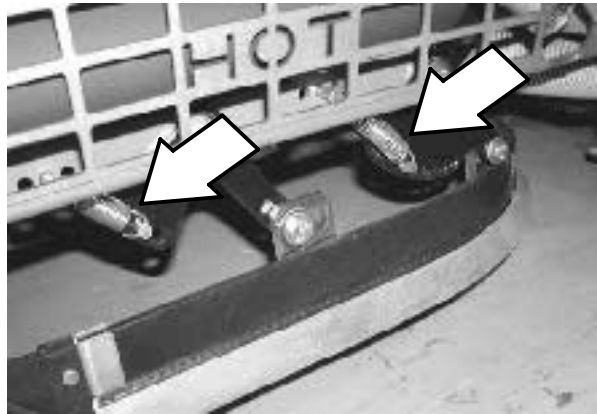

---

### SQUEEGEE BLADES

---

#### REAR SQUEEGEE

The rear squeegee has two squeegee blades. Each blade has four wiping edges. To use them all, start with one wiping edge. To use the next wiping edge, rotate the blade end-for-end. To use the next wiping edge, rotate the top edges down, bottom edges up. To use the last edge, rotate the blade end-for-end.

Replace any worn or damaged squeegee blades.

#### REPLACING OR ROTATING REAR SQUEEGEE BLADES

1. Make sure the squeegee is raised off the floor.
2. Shut the engine off and set the parking brake.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

3. Open the retaining band clamp and remove the squeegee blade.
4. Replace or rotate the squeegee blade to allow a new edge to face the front of the machine.
5. Place the squeegee blade over the protrusions of the squeegee frame.





6. Position the retaining band over the squeegee blade. Latch the retaining band clamp.
7. Adjust the squeegee blade leveling and deflection as stated in *LEVELING THE REAR SQUEEGEE* and *ADJUSTING REAR SQUEEGEE BLADE DEFLECTION*.

**SIDE SQUEEGEES**

The side squeegees control water spray and channel water into the path of the rear squeegee. Check the side squeegees for damage and wear daily. Replace the side squeegee blades whenever they become damaged or lose their shape or resilience. Replace the squeegee deflectors whenever they become worn.

**REPLACING SIDE SQUEEGEE BLADES**

1. Raise the scrub head.
2. Turn off the machine and set the machine parking brake.


**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

**⚠ WARNING: Hot bumper. Keep away.**

3. Remove the cotter pin, clevis pin, deflector, and the retainer bracket from the front of the side squeegee.
4. Pull the squeegee blade off the front of the squeegee frame.
5. Slide the new squeegee blade onto the frame.

*NOTE: Lubricating the squeegee frame where the squeegee makes contact will make for easier squeegee installation.*

6. Replace the retainer bracket, deflector, clevis pin, and cotter pin.
7. Repeat for the side squeegee on the other side of the scrub head.

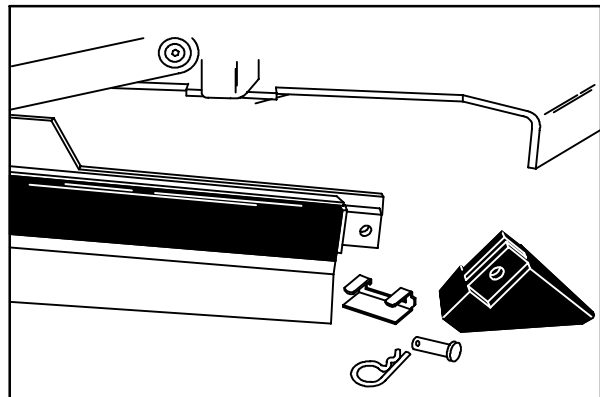


05942

## SKIRTS AND SEALS

### REAR SKIRTS

The two rear skirts are located on the bottom rear of the main brush compartment. The vertical skirt (rear) should clear the floor up to 3 mm (0.12 in) in dusty conditions, and touch the floor otherwise.


Check the skirts for wear or damage and adjustment daily.

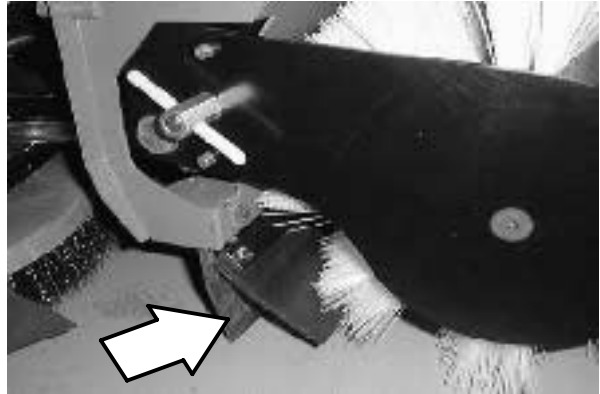

### BRUSH DOOR SEALS

The brush door seals are located on the main brush door and on corresponding portions of the main frame.

Check the seals for wear or damage every 100 hours of operation.

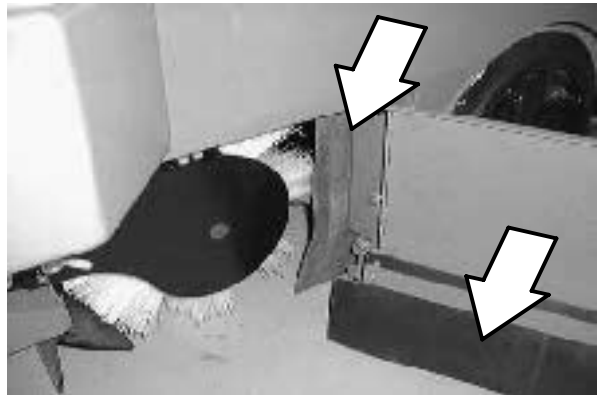


### HOPPER LIP SKIRTS

The hopper lip skirts are located on the bottom rear of the hopper. The skirts float over debris and help deflect that debris into the hopper. The hopper lip skirts consist of five bottom lip segments and two additional side lip segments.

Check the hopper lip skirts for wear or damage daily.

Replace the hopper lip skirts when they no longer touch the floor.

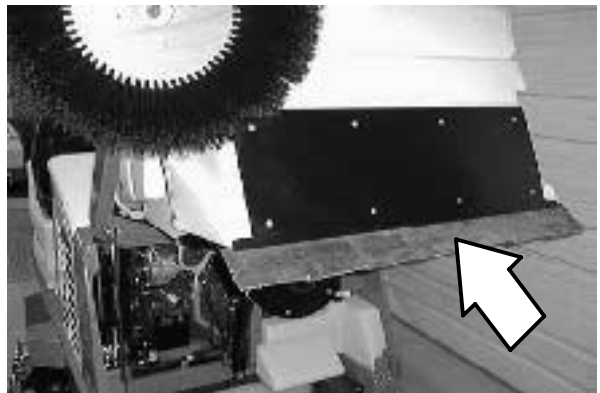


**HOPPER SEALS**

The hopper seals are located on the top and side portions of the machine frame that contact the hopper.


Check the seals for wear or damage every 100 hours of operation.

 **WARNING: Raised hopper may fall. Engage hopper support bar.**

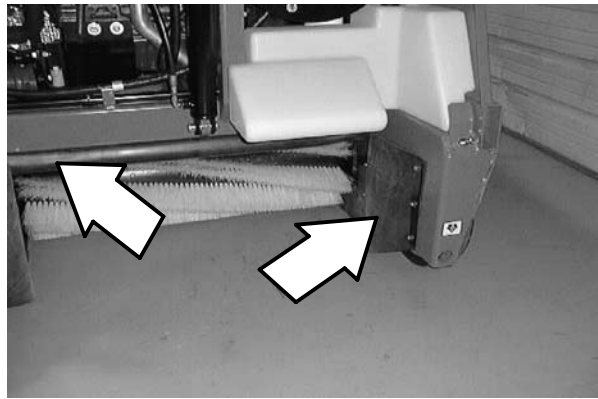**HOPPER DOOR SEALS**

There are hopper door seals located on three sides of the hopper door. They seal the hopper when the hopper door is closed.

Check the seals for wear or damage every 100 hours of operation.

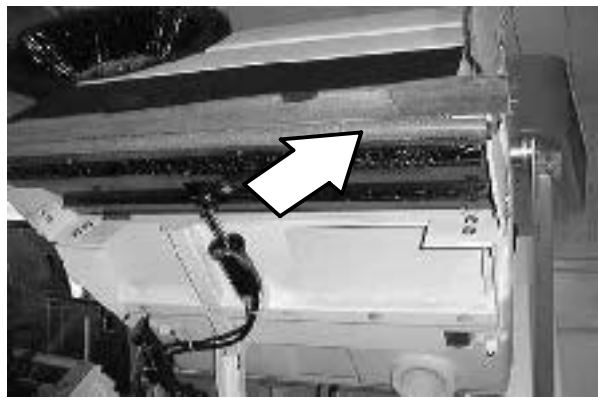**HOPPER FILTER SEALS**

The filter seals are located on both sides of the dust filter. They seal the hopper filter to the cover and hopper.

Check the seal for wear or damage every 100 hours of operation.




## MAINTENANCE

### HOPPER VACUUM FAN SEAL

The hopper vacuum fan seal is mounted on the inside of the hopper around the vacuum fan inlet.

Check the seal for wear or damage every 100 hours of operation.

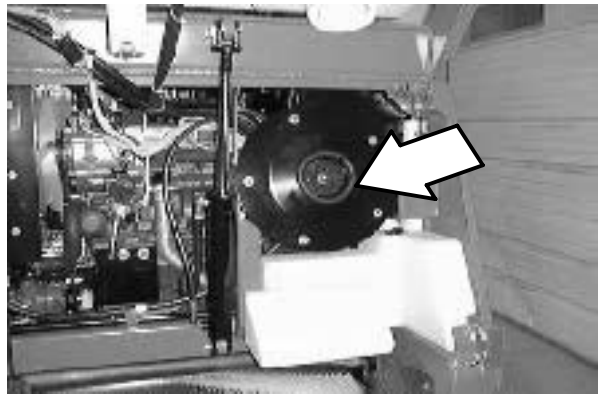

### TANK COVER SEALS

Seals are located on the inside of the recovery tank cover and the solution tank cover.

Check the seals for wear or damage every 100 hours of operation.



---

**BRAKES AND TIRES**

---

**SERVICE BRAKES**

The mechanical service brakes are located on the front wheels. The brakes are operated by the foot brake pedal and connecting cables.

Check the brake adjustment every 200 hours of operation.

**PARKING BRAKE**


The parking brake is set with a parking brake pedal that locks the brake pedal.

**TIRES**

The machine tires are solid. Check the tires every 100 hours of operation for damage and wear.

**REAR WHEEL**

Torque the rear wheel nuts twice in the pattern shown to 142 to 156 Nm (105 to 115 ft lb) after the first 50-hours of operation, and every 800 hours there after.

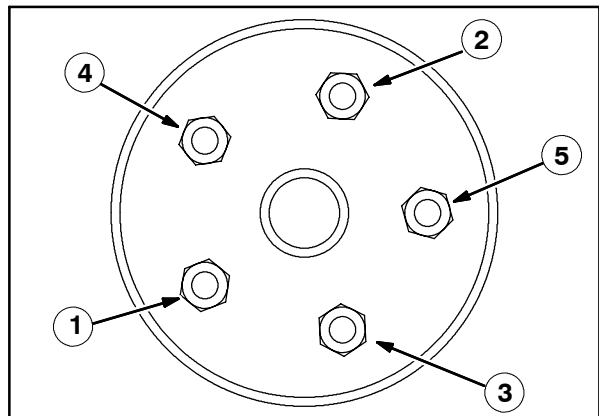

## PUSHING, TOWING, AND TRANSPORTING THE MACHINE



### PUSHING OR TOWING THE MACHINE

If the machine becomes disabled, it can be pushed from the front or rear, but towed only from the rear.

The propelling pump has a bypass valve to prevent damage to the hydraulic system when the machine is being pushed or towed. This valve allows a disabled machine to be moved for a *very short distance* and at a speed to not exceed 1.6 kp/h (1 mph). The machine is NOT intended to be pushed or towed a long distance or at a high speed.

**ATTENTION! Do not push or tow machine for a long distance and without using the bypass valve, or the machine hydraulic system may be damaged.**

Turn the bypass valve 90° from the normal position before pushing or towing the machine. **The illustration shows the bypass valve in the pushing or towing position.**

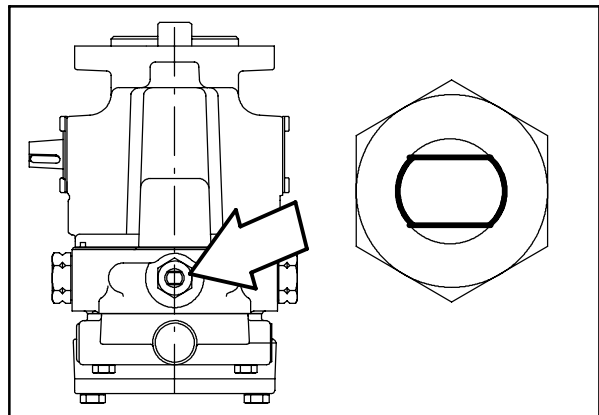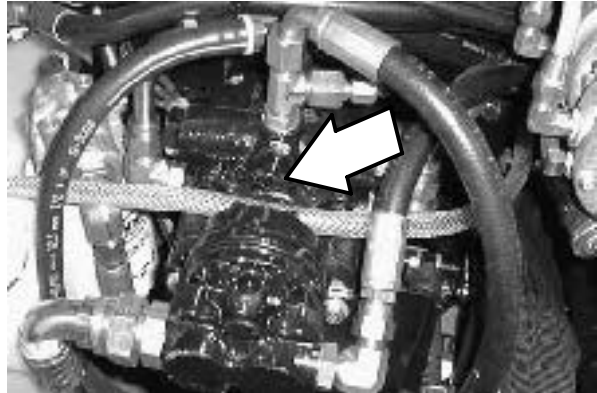

**TRANSPORTING THE MACHINE**

1. Position the rear of the machine at the loading edge of the truck or trailer.

**FOR SAFETY: Use truck or trailer that will support the weight of the machine.**

*NOTE: Empty the hopper, recovery tank, and solution tank before transporting the machine.*

2. If the loading surface is not horizontal or is higher than 380 mm (15 in) from the ground, use a winch to load machine.

If the loading surface is horizontal AND is 380 mm (15 in) or less from the ground, the machine may be driven onto the truck or trailer.




3. To winch the machine onto the truck or trailer, attach the winching chains to the rear tie down locations. The rear tie-down locations are the bottom lips at each corner of the rear bumper.



4. Turn the bypass valve 90° from the normal position before winching the machine onto the truck or trailer. See *PUSHING OR TOWING THE MACHINE* section of this manual. Make sure the machine is centered.

**FOR SAFETY: When loading machine onto truck or trailer, use winch. Do not drive the machine onto the truck or trailer unless the loading surface is horizontal AND is 380 mm (15 in) or less from the ground.**

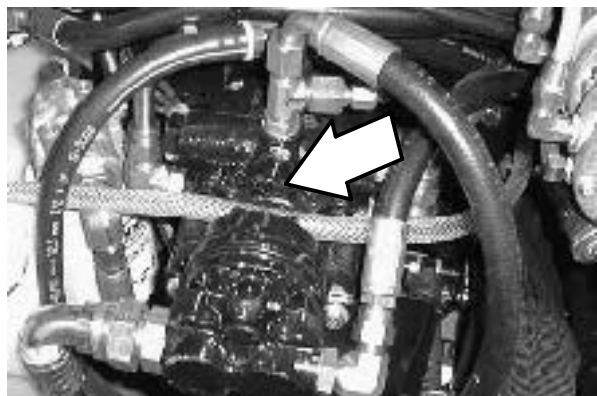


5. Position the machine onto the truck or trailer as far as possible. If the machine starts to veer off the centerline of the truck or trailer, stop and turn the steering wheel to center the machine.

## MAINTENANCE

6. Set the parking brake, lower the scrub head and block the machine tires. Tie down the machine to the truck or trailer before transporting.

The front tie-down locations are the holes in the wheel pockets at the front of the machine frame.

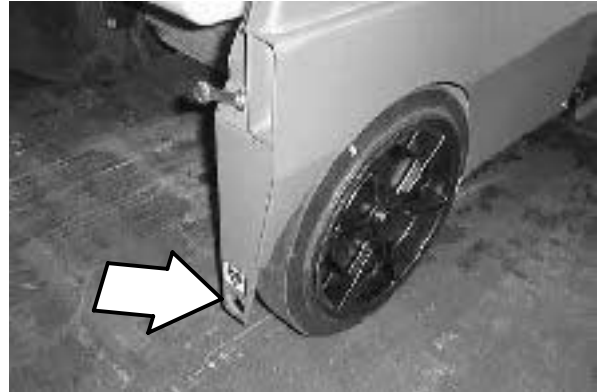

The rear tie-down locations are the bottom lips at each corner of the rear bumper.



7. If the loading surface is not horizontal or is higher than 380 mm (15 in) from the ground, use a winch to unload machine.

If the loading surface is horizontal AND is 380 mm (15 in) or less from the ground, the machine may be driven off the truck or trailer.

**FOR SAFETY: When unloading machine off truck or trailer, use winch. Do not drive the machine off the truck or trailer unless the loading surface is horizontal AND 380 mm (15 in) or less from the ground.**



---

**MACHINE JACKING**

---

Empty the hopper, recovery tank, and solution tank before jacking the machine. You can jack up the machine for service at the designated locations. Use a hoist or jack that will support the weight of the machine. Always stop the machine on a flat, level surface and block the tires before jacking the machine up.

**FOR SAFETY: Before leaving or servicing machine; stop on level surface, set parking brake, turn off machine and remove key.**

The front jacking locations are on the flat bottom edge of the front of the machine frame next to the front tires.



The rear jacking location is under the left side of the rear bumper.

**FOR SAFETY: When servicing machine, jack machine up at designated locations only. Block machine up with jack stands.**




---

**STORING MACHINE**

---

Before storing the machine for an extended time, the machine needs to be prepped to lessen the chance of rust, sludge, and other undesirable deposits from forming. Contact Tennant service personnel.

# SPECIFICATIONS

## SPECIFICATIONS

### GENERAL MACHINE DIMENSIONS/CAPACITIES

Item	Dimension/capacity
Length	2550 mm (100.5 in)
Width with side brush	1395 mm (55 in)
Width with Maxpath side brush	1475 mm (58 in)
Height	1475 mm (58 in)
Height with overhead guard	2080 mm (82 in)
Track	1083 mm (42.6 in)
Wheelbase	1511 mm (59.5 in)
Main sweeping brush diameter	355 mm (14 in)
Main sweeping brush length	915 mm (36 in)
Scrub brush diameter - 2 brushes	510 mm x 2 brushes (20 in x 2 brushes)
Scrub brush diameter - 3 brushes (option)	410 mm x 3 brushes (16 in x 3 brushes) (option)
Side brush diameter	585 mm (23 in)
Sweeping path width	915 mm (36 in)
Sweeping path width with side brush	1270 mm (50 in)
Squeegee width	1219 mm (48 in)
Scrubbing path width - two scrub brushes	1015 mm (40 in)
Scrubbing path width - three scrub brushes (option)	1220 mm (48 in)
Main sweeping brush pattern width	64 mm (2.5 in) - adjustable
Hopper weight capacity	160 kg (350 lb)
Hopper volume capacity	220 L (7.8 ft <sup>3</sup> )
Dust filter area	6 m <sup>2</sup> (63 sq ft)
Solution tank	197 L (52 gal)
Recovery tank	265 L (70 gal)
Detergent tank	17.8 L (4.7 gal)
Total capacity with ES (option)	300 L (80 gal)
GVWR	1935 kg (4270 lb)
Ceiling height minimum dumping clearance	2286 mm (90 in)

### GENERAL MACHINE PERFORMANCE

Item	Measure
Maximum forward speed	10.0 kmh (6 mph)
Maximum reverse speed	4.8 kmh (3 mph)
Minimum aisle turn width, left	3.01 m (9 ft 9 in)
Minimum aisle turn width, right	4.3 m (14 ft 10 in)
Minimum turning radius, left	0.98 m (38.75 in)
Minimum turning radius, right	1.91 m (75.25 in)
Maximum rated incline for transport of machine	(8° - 14%)
Maximum rated incline for scrubbing/sweeping	(6° - 10.5%)

**POWER TYPE**

Engine	Type	Ignition	Cycle	Aspiration	Cylinders	Bore	Stroke
Ford VSG1.3 L	Piston	Distributorless-type spark	4	Natural	4	73.94 mm (2.91 in)	75.44 mm (2.97 in)
	Displacement		Net power, governed			Net power, maximum	
	1300 cc (79 cid)		23.2 kw (32 hp) @ 2400 rpm			39.5 kw (53 hp) @ 4000 rpm	
	Fuel		Cooling system			Electrical system	
	Gasoline, 87 octane minimum, unleaded. Fuel tank: 37.9 L (10 gal)		Water/ethylene glycol antifreeze			12 V nominal	
	LPG, Fuel tank: 15 kg (33 lb) 19.5 kg (43 lb)		Total: 16.7 L (4.4 gal) Radiator: 6 L (1.6 gal)			50 A alternator	
	Idle speed, no load		(Fast) governed speed, under load			Firing order	
	1200 ± 50 rpm		2400 ± 50 rpm			1-2-4-3	
	Spark plug gap		Valve clearance, cold			Engine lubricating oil with filter	
	1 mm (0.04 in)		0.020 mm (0.008 in) intake 0.050 mm (0.020 in) exhaust			3.7 L (4 qt) 10W30 SAE-SG/SH	

Engine	Type	Ignition	Cycle	Aspiration	Cylinders	Bore	Stroke
GM 1.6 L	Piston	Distributorless-type spark	4	Natural	4	79 mm (3.11 in)	81.5 mm (3.21 in)
	Displacement		Net power, governed			Net power, maximum	
	1600 cc (98 cu in)		27.75 kw (37 hp) @ 2400 rpm			41.25 kw (55 hp) @ 4000 rpm	
	Fuel		Cooling system			Electrical system	
	Gasoline, 87 octane minimum, unleaded. Fuel tank: 36 L (9.6 gal)		Water/ethylene glycol antifreeze			12 V nominal	
	LPG, Fuel tank: 15 kg (33 lb)		Total: 7.5 L (2 gal) Radiator: 3.8 L (1 gal)			55 A alternator	
	Idle speed, no load						
	950 ± 50 rpm						
	Governed speed, under load						
	2400 ± 50 rpm						
	Spark plug gap		Firing order			Valve clearance, cold	
	0.8-0.9 mm (0.032-0.036 in)		1-3-4-2, counterclockwise rotation			No adjustment	
	Engine lubricating oil with filter						
	3.3 L (3.7 qt) 10W-30 SAE-SG/SH 0° f						

**STEERING**

Type	Power source	Emergency steering
Rear wheel, hydraulic cylinder and rotary valve controlled	Hydraulic accessory pump	Manual

## SPECIFICATIONS

### HYDRAULIC SYSTEM



System	Capacity	Fluid Type
Hydraulic reservoir capacity	25.4 L (6.7 gal) Fill to FULL line only	TENNANT part no. 65869 - above 7° C (45° F) TENNANT part no. 65870 - below 7° C (45° F)
Hydraulic total (all components, plumbing)	28.4 L (7.5 gal)	

### BRAKING SYSTEM

Type	Operation
Service brakes	Mechanical drum brakes (2), one per front wheel, linkage actuated
Parking brake	Utilize service brakes, linkage actuated

### TIRES

Location	Type	Size	Pressure
Front (2)	Solid	405 x 90 x 308 mm (16x3.5 x12.125 in)	-
Rear (1)	Solid	405 x 150 mm (16 x 6 in)	-

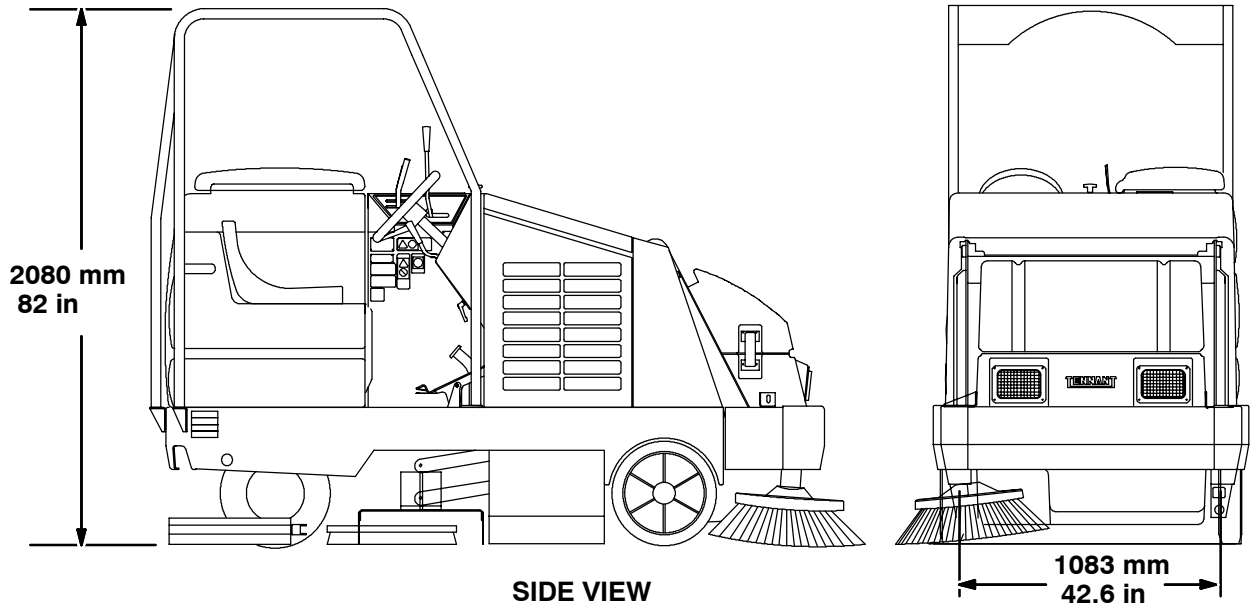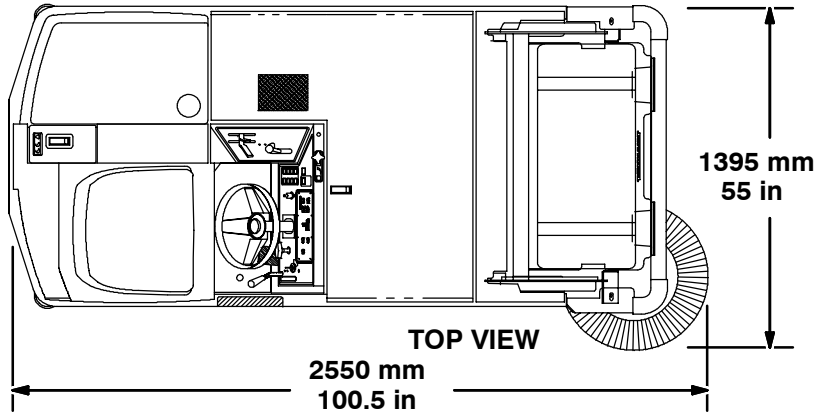

**MACHINE DIMENSIONS**

351664

**A**

- Adjusting blade deflection, 93–95
- Adjusting the side squeegees, 94–96
- Air filter, 75
  - element, 75
  - indicator (option), 75

**B**

- Battery, 77
  - Bearings, front wheel, 70
  - Belts
    - engine and accessory pump (FORD), 78
    - engine belt (GM), 78
  - Brake pedal, 13
  - Brakes, 37, 59, 99
    - parking, 99
    - service, 99
    - system specifications, 106
  - Brush pressure adjustment, scrubbing, 15
  - Brushes
    - main sweep brush, 82–86
    - main, taper adjustment, 86–90
  - Maintenance, 37, 59
  - Pattern adjustment, 37, 59
  - scrub brush replacement, 90–92
  - scrub brushes, 89–91
  - side brush replacement, 88–92
  - side sweep brush, 87–91
  - sweep pattern adjustment, 85–89
  - sweep, replacement, 83–87
- Bypass valve, 100

**C**

- Capacities, hopper & tanks, 104
- Chain, static drag, 79
- Charging system light, 30
- Check engine light (GM), 14
- Choke knob, engine (FORD), 25
- Circuit breakers, 33
- Clogged filter light (option), 31
- Control panel
  - detergent pump switch (option), 29
  - display clock setting & adjusting, 20
  - edge scrub switch, 27
  - engine speed switch, 29
  - ES (option), 28
  - filter shaker switch, 26
  - fuel level gauge, 17

- functions, 19
- hopper door switch, 26
- hourmeter, 17
- maintenance mode, 21, 22, 23
- operating lights switch, 24
- operating/hazard lights switch, 24
- scrub brush switch, 15
- side brush switch, 16
- solution flow switch, 24
- squeegee switch, 27
- sweep switch, 16
- sweeping vacuum fan switch, 25

**Controls**

- brake pedal, 13
  - check engine light (GM), 14
  - directional pedal, 12
- Fuses, 33
- hopper lever, 18
  - horn button, 32
  - ignition switch, 13
  - main sweep brush pressure knob, 18
  - parking brake pedal, 13
  - side sweep brush pressure handle, 19
  - steering column tilt lever, 14
  - steering wheel, 14

**Controls & instruments, 11**

- Cooling system, engine, 74
- Crankcase ventilation system, 76

**D**

- Detergent pump switch (option), 29
- Dimensions, overall machine, 104
- Directional pedal, 12
- Display clock, setting & adjusting, 20

**E**

- Edge scrub switch, 27
- Electrical, Fuses, 33
- Electrical system
  - battery, 77
  - circuit breakers, 33
- Engine
  - Air filter, 37, 59
  - air filter, 75
  - air filter indicator (option), 75
  - belt (GM), 78
  - choke knob (FORD), 25
  - Coolant level, 37, 59
  - cooling system, 74
  - crankcase ventilation system, 76
  - engine and accessory pump belt (FORD), 78

fuel filter, 76  
 fuel filter (GM LPG), 76  
 Fuel level, 37, 59  
 intake manifold (Ford), 76  
 Oil level, 37, 59  
 spark plugs, 76  
 specifications, 105  
 timing belt (GM), 76

Engine (FORD)  
 lubrication, 68  
 oil capacity, 68

Engine (GM)  
 lubrication, 68  
 oil capacity, 68

Engine cover gas spring, 35

Engine oil pressure light, 30

Engine speed switch, 29

Engine water temp light, 30

## ES

Clean tanks, 37, 59  
 Detergent level, 37, 59

ES filter, 90

ES switch (option), 28

## F

Filter, Vacuum fan inlet, 37, 59

Filter shaker switch, 26

## Filters

cleaning, hopper, 80–81  
 ES (Extended Scrub), 90  
 hopper, dust, 80–81  
 removing, hopper, 81–82

Fuel filter, 76

Fuel filter (GM LPG), 76

Fuel level gauge, 17

Fuel tank, LPG tank changing, 38–40

Fuses, 33

## G

Grease fittings, rear wheel support, 69

## H

Handle, side sweep brush pressure, 19

## Hopper

disengaging hopper support bar, 62–64  
 dust filter, 80–81  
 dust filter cleaning, 80–81  
 dust filter removal, 81–82  
 engaging hopper support bar, 60–62  
 lift arm pivots, 70  
 support bar, 35  
 Thermo Sentry, 81

Hopper door closed light (option), 32

Hopper door switch, 26

Hopper lever, 18

Hopper temp light - Thermo Sentry, 31

Horn button, 32

Hourmeter, 17

Hydraulic cooler, Fins, 37, 59

Hydraulic filter bypass light (option), 32

## Hydraulics

fluid, 72–74  
 fluid filter, 71  
 Fluid level, 37, 59  
 fluid level, 71  
 hoses, 73  
 propelling motor, 73  
 reservoir, 71  
 system specifications, 106

## I

Ignition switch, 13

## Indicators

charging system light, 30  
 clogged filter light (option), 31  
 engine oil pressure light, 30  
 engine water temp light, 30  
 hopper door closed light (option), 32  
 hopper temp light - Thermo Sentry, 31  
 hydraulic filter bypass light (option), 32

## Information

about brushes, 42–44  
 about scrub head, 82  
 about scrubbing, 42–44  
 about sweeping, 42–44

Intake manifold (Ford), 76

**J**

Jack points, 103–105

**K**

Knob, main sweep brush pressure, 18

**L**

Latches, 35

Leveling rear squeegee, 92–94

Levers

- hopper, 18
- steering column tilt, 14

Lights

- charging system, 30
- check engine light (GM), 14
- clogged filter (option), 31
- engine oil pressure, 30
- engine water temperature, 30
- hopper door closed (option), 32
- hopper temperature - Thermo Sentry, 31
- hydraulic filter bypass (option), 32

Lights switch

- operating, 24
- operating/hazard, 24

LPG fuel system, tank changing, 38–40

Lubrication

- engine (FORD), 68
- engine (GM), 68
- front wheel bearings, 70
- rear wheel support, 69
- scrub head drag link arms, 70

**M**

Machine capabilities

- aisle turn dimensions, 104
- operating incline rate, 104
- travelling speeds, 104

Machine components, 8

Machine dimensions, illustrations, 107

Machine jacking, 103–105

Machine storage, 103

Machine tie down location, 102

Machine transport, tie downs, 63

Machine troubleshooting, 64–66

Main sweep brush, 82–86

- pattern, checking & adjustment, 85–89
- replacement, 83–87
- taper adjustment, 86–90

Main sweep brush pressure knob, 18

Maintenance, intervals chart, 66–68

Maintenance mode

- definition, 21
- disabling, 23
- resetting timers, 22

Motors, propelling, hydraulic, 73

**O**

Operations

- control panel functions, 19
- disengaging hopper support bar, 62–64
- double-scrubbing, 53–55
- draining & cleaning tanks, 54–56
- emptying the hopper, 46–48
- engaging hopper support bar, 60–62
- filling the tanks, 48–50
- how the machine works, 36
- LPG tank changing, 38–40
- on inclines, 63
- post-operation checklist, 59–61
- pre-operation checklist, 37–39
- scrubbing, 50–52
- starting the machine, 40–42
- stop scrubbing, 53–55
- stop sweeping, 45–47
- stopping the machine, 57–59
- sweeping, 44–46
- sweeping, scrubbing & brush info, 42–44

Operator responsibility, 7–8

Operator seat, 34

- suspension (option), 34

**P**

Parking brake pedal, 13

Pedals

- brake, 13
- directional, 12
- parking brake, 13

Pushing machine, 100

Pushing or towing the machine, 100

Pushing, towing, and transporting machine, 100

**R**

Radiator, Fins, 37, 59

Rear squeegee, 91–93

- adjusting blade deflection, 93–95
- blades, 94–96
- blades, rotation & replacement, 94–96
- leveling, 92–94



- Rear wheel, 99
- Recovery tank, Drain and clean, 37, 59
- Recovery tank, 90
- S**
- Safety
- engine cover gas spring, 35
  - hopper support bar, 35
  - labels, 5–7
  - precautions, 3–5
- Scrub brush pressure adjustment, 15
- Scrub brush switch, 15
- Scrub brushes, 89–91
- replacement, 90–92
- Scrub functions
- double-scrubbing, 53–55
  - draining & cleaning tanks, 54–56
  - filling the tanks, 48–50
  - scrubbing, 50–52
  - stop scrubbing, 53–55
- Scrub head, 82
- Scrub head drag link arms, 70
- Seals, 96–100
- brush door, 96–100
  - hopper, 97–101
  - hopper door, 97–101
  - hopper filter, 97–101
  - hopper vacuum fan, 98–102
  - Tank Cover, 37, 59
  - tank covers, 98–102
- Seat, suspension, (option), 34
- Seat, operator, 34
- Service records, 37, 59
- Side brush switch, 16
- Side Squeegees, 94–98
- Side squeegees, 95–97
- Adjusting the side squeegees, 94–96
  - blade replacement, 95–97
- Side sweep brush, 87–91
- replacement, 88–92
- Side sweep brush pressure handle, 19
- Skirts, 96–98
- hopper lip, 96
  - rear, 96
- Skirts and seals, 37, 59
- Solution flow switch, 24
- Solution flow valve, manual, 25
- Solution tank, 91
- Spark plugs, 76
- Specifications
- braking system, 106
  - engine power type, 105
  - hydraulic system, 106
  - machine capacities, 104
  - machine dimensions, 104
  - machine performance, 104
  - machine weight, 104
  - steering, 105
  - tires, 106
- Squeegee, Adjustment, 37, 59
- Squeegee switch, 27
- Squeegees, 91–93
- leveling, 92–94
  - rear squeegee, 91–93
  - rear, blade deflection, 93–95
  - rear, blade rotation, 94–96
  - rear, blades, 94–96
  - side, 95–97
  - Side Squeegees, 94
  - side, blade replacement, 95–97
- Static drag chain, 79
- Steering, 37, 59
- specifications, 105
- Steering column tilt lever, 14
- Steering wheel, 14
- Storing machine, 103
- Super Scrub, 15, 51
- Sweep brush, main, 82–86
- pattern, checking & adjustment, 85–89
  - replacement, 83–87
  - taper adjustment, 86–90
- Sweep brush, side, 87–91
- replacement, 88–92
- Sweep functions
- emptying the hopper, 46–48
  - stop sweeping, 45–47
  - sweeping, 44–46
- Sweep switch, 16
- Switch
- detergent pump (option), 29
  - engine speed, 29
  - filter shaker, 26
  - hopper door, 26
  - operating lights, 24
  - operating/hazard lights, 24
  - solution flow, 24
  - vacuum fan, sweeping, 25

## Switches

- edge scrub, 27
- ES (option), 28
- ignition, 13
- scrub brush, 15
- side brush, 16
- squeegee, 27
- sweeping, 16

Symbol definitions, 9–11

## T

### Tanks

- recovery tank, 90
- solution, 91

Thermo Sentry, 81

Tie down location, 102

Tie downs, 63

Timing Belt (GM), 76

### Tires, 99

- rear wheel torque nuts, 99
- specifications, 106

Towing machine, 100

Transporting machine, 100

Transporting the machine, 101

Troubleshooting, 64–66

## V

Vacuum fan switch, sweeping, 25

Valve, solution flow, 25