



Ride On Scrubbers

Operator's Manual

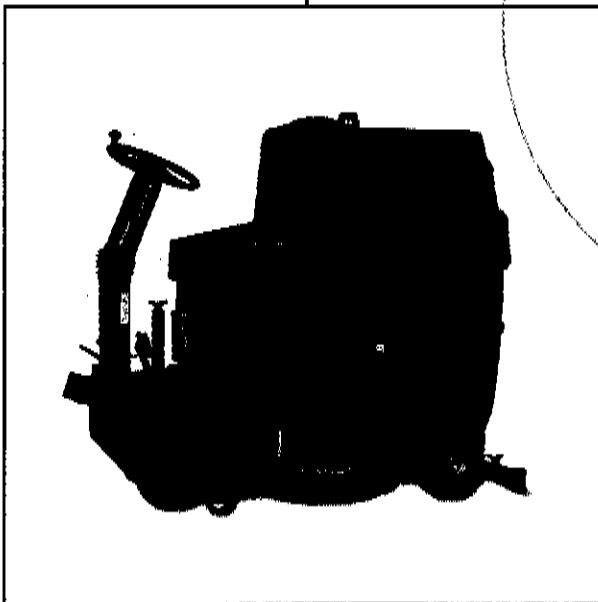

AS30RIDER
AS36RIDER

Item #86004
Item #86005

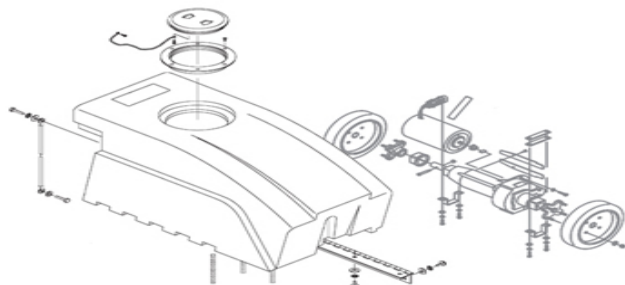

FLOOR EQUIPMENT PARTS.COM

Better Resources. Better Results.
BETCO®

1	GENERAL INFORMATION.....	page 4
1.1.	PURPOSE OF THE MANUAL	page 4
1.2.	IDENTIFICATION OF THE MACHINE MANUFACTURER	page 5
1.3.	DOCUMENTATION ENCLOSED WITH THE MACHINE	page 5
 2	 TECHNICAL INFORMATION.....	 page 6
2.1.	GENERAL DESCRIPTION	page 6
2.2.	PRINCIPAL PARTS AND WORK CYCLES	page 6
2.3.	TECHNICAL SPECIFICATIONS	page 8
2.4.	DIMENSION	page 10
2.5.	DETERGENTS - ADVICE FOR USE	page 10
2.6.	SAFETY DEVICES	page 11
2.7.	DANGER ZONES	page 12
2.8.	OPTIONAL UNITS	page 12
2.9.	ACCESSORIES	page 13
 3	 SAFETY INFORMATION.....	 page 14
3.1.	SAFETY STANDARDS	page 14
 4	 HANDLING AND INSTALLATION	 page 16
4.1.	PACKING	page 16
4.2.	LIFTING AND TRANSPORT	page 16
4.3.	UNPACKING AND CLEANING	page 16
4.4.	SQUEEGEE - INSTALLATION	page 18
4.5.	FEEDING BATTERIES	page 18
4.5.1	Batteries - Use	page 19
4.5.2	Batteries - Installation	page 19
4.5.3	Connecting the batteries	page 20
4.6.	RECHARGING THE BATTERIES.....	page 20
4.6.1	Choosing the battery-charger.....	page 20
4.6.2	Batteries - Recharging procedure	page 21
4.7.	LIFTING AND HANDLING OF THE MACHINE	page 23
 5	 SETTING UP.....	 page 24

5.1.	SQUEEGEE - ADJUSTMENT.....	page 24
5.2.	STEERING COLUMN - REGULATION.....	page 24
5.3.	DRAINING OFF DIRTY WATER.....	page 25
5.4.	DRAINING AND FILLING WITH WATER AND DETERGENT SOLUTION.....	page 26
5.5.	DIRT COLLECTING BOX - REMOVING AND FITTING	page 27
5.6.	BRUSHES - INSTALLATION	page 28
5.7.	PREPARING THE MACHINE FOR WORK	page 29

6	USE.....	page 30
6.1.	DESCRIPTION OF THE CONTROLS	page 30
6.2.	SQUEEGEE - USE	page 32
6.3.	PARKING BRAKE - USE	page 32
6.4.	DRIVING THE MACHINE	page 33
6.5.	PROCEDURES FOR USING THE MACHINE	page 33
6.6.	EXTRACTABLE HEAD - USE.....	page 34
6.7.	RECYCLING SACK ACCESSORY - USE	page 35
6.8.	COMBI ACCESSORY - USE	page 36
6.9.	SWEEPING HEAD ACCESSORY - USE	page 37
6.10.	HOURLY METER ACCESSORY - USE	page 38
6.11.	ADVICE ON OPTIMUM USE OF THE MACHINE	page 38

7	MACHINE MAINTENANCE	page 39
7.1.	MAINTENANCE - GENERAL RULES	page 39
7.2.	ROUTINE MAINTENANCE	page 39
7.2.1	General cleaning	page 39
7.2.2	Suction filter - Cleaning	page 40
7.2.3	Cleaning liquid input hole - Cleaning	page 40
7.2.4	Squeegee blades - Replacement	page 40
7.2.5	FLAPS - Replacement	page 41
7.2.6	Dirt collecting scraper - Replacement	page 42
7.2.7	Diaphragm sack - Replacement.....	page 42
7.2.8	Recycle accessory - Cleaning and replacement	page 43
7.2.9	Float - Cleaning.....	page 43
7.2.10	Pump impeller - Cleaning	page 44
7.2.11	Fuses - Replacement	page 44
7.3.	PERIODIC MAINTENANCE.....	page 45
7.3.1	Daily maintenance.....	page 45
7.3.2	Weekly maintenance	page 45

7.3.3 Six-monthly maintenance	page 46
7.3.4 Preparing for long periods of inactivity	page 46

8 TROUBLESHOOTING	page 47
8.1. HOW TO OVERCOME ANY PROBLEMS	page 47

All rights reserved.

All duplication, even partial, of the contents of this manual is forbidden, unless authorized in writing by the Manufacturer.

GENERAL INFORMATION



Consult this manual carefully before carrying out any operations on the machine⁽¹⁾.

1.1. PURPOSE OF THE MANUAL

This manual has been drawn up by the Manufacturer and is an integral part of the machine equipment.

It defines the purpose for which the machine has been built and contains all the necessary information for operators⁽²⁾.

As well as this manual, which contains the information necessary for users, other publications have been prepared which supply the specific information for maintenance technicians⁽³⁾. Constant observation of the indications guarantees safety for both the operator and the machine, economic running, high quality results and a longer working life of the machine.

Failure to observe the advice may result in damage to persons, to machines, to the floor being washed and to the environment.

For a rapid search of the topics, see the descriptive index at the front of the manual.

Parts of the text that must not be overlooked are shown in bold print and preceded by symbols as illustrated and defined below.



DANGER

Indicates that care must be taken to avoid serious consequences which could even cause death of the operator or possible damage to health.



WARNING

Indicates that care must be taken to avoid serious consequences which could cause damage to the machine or to the environment in which it is working, or economic losses.



INFORMATION


Particularly important indications.

For the purpose of constant development and updating of the product, the manufacturer may make alterations without prior notice.

- (1) The definition "machine" substitutes the trade name to which this manual refers (see cover).
- (2) By this is meant the people whose job it is to use the machine without carrying out any operations that require precise technical skills.
- (3) These are people in possession of experience, technical preparation, knowledge of standards and legislation, who are able to perform the necessary activities and to recognize and avoid possible risks in handling, installation, use and maintenance of the machine.

Even if the machine in your possession is quite different from the illustrations in this document, their safety and the information herein are guaranteed.

1.2. IDENTIFICATION OF THE MACHINE MANUFACTURER (fig. 1)

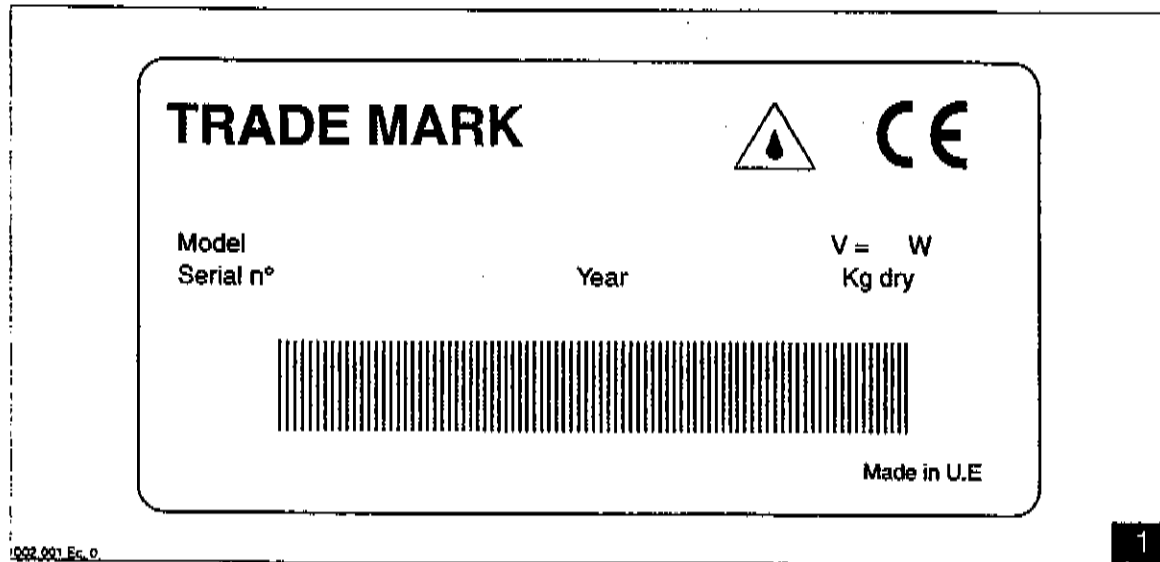

The data plate gives:

- The product code.
- The model.
- The voltage.
- Total rated power.
- Serial number.
- Year of manufacture.
- Dry weight.
- Maximum load weight.
- Maximum gradient.
- Bar code with serial number.
- Manufacturer identification.

1.3. DOCUMENTATION ENCLOSED WITH THE MACHINE

- Operator's manual.
- Guarantee certificate.
- Adhesive cards for ordering spare parts.
- Inspection sheet.
- CE conformity certificate.

2.1. GENERAL DESCRIPTION

The machine is used in civil and industrial areas for sweeping, washing and drying flat, horizontal, smooth and moderately rough floors, with even surfaces free from obstacles. When used with the Combi accessory, areas inaccessible to the machine may be washed and dried.


The power supply with storage batteries and the high capacity of the batteries that may be used allow **maximum freedom of movement** and independent work time to **suit all working conditions**.

A large tank, various high-power scrubbing and sweeping heads, a powerful drive motor allow maximum efficiency and effective washing to be combined with extreme simplicity of use.


With the electronically-controlled drive and forward and reverse gears, any path may be easily followed on the floor to be cleaned.

2.2. PRINCIPAL PARTS AND WORK CYCLES (fig. 1)

- A - Group of batteries.
Supplies energy for feeding the machine.
- B - Tank unit.
Contains the mixture of clean water and detergent and collects the dirty water lifted from the floor.
- C - Controls.
- D - Chassis.
- E - Scrubbing and sweeping head unit.
Distributes the detergent solution on the floor, removing the dirt and collecting refuse.
- F - Squeegee suction unit.
Collects and lifts the water, drying the floor.
- G - Drive unit.
This is composed of an electronically controlled geared motor which allows the machine to move backwards and forwards.
- H - Control drive unit.
- I - Sweeper head units.

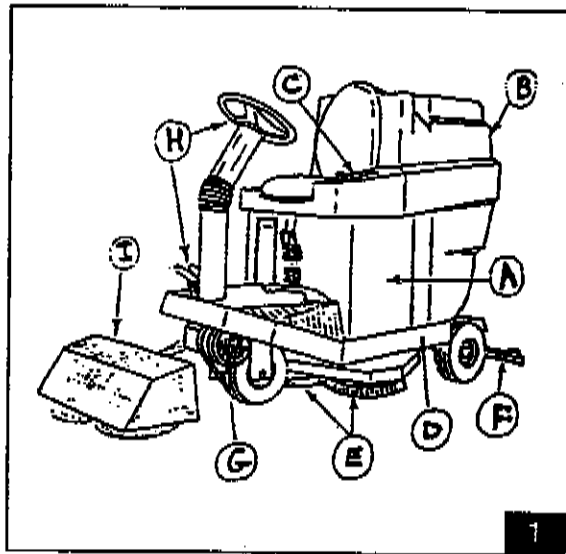

Operating cycle (fig. 2)

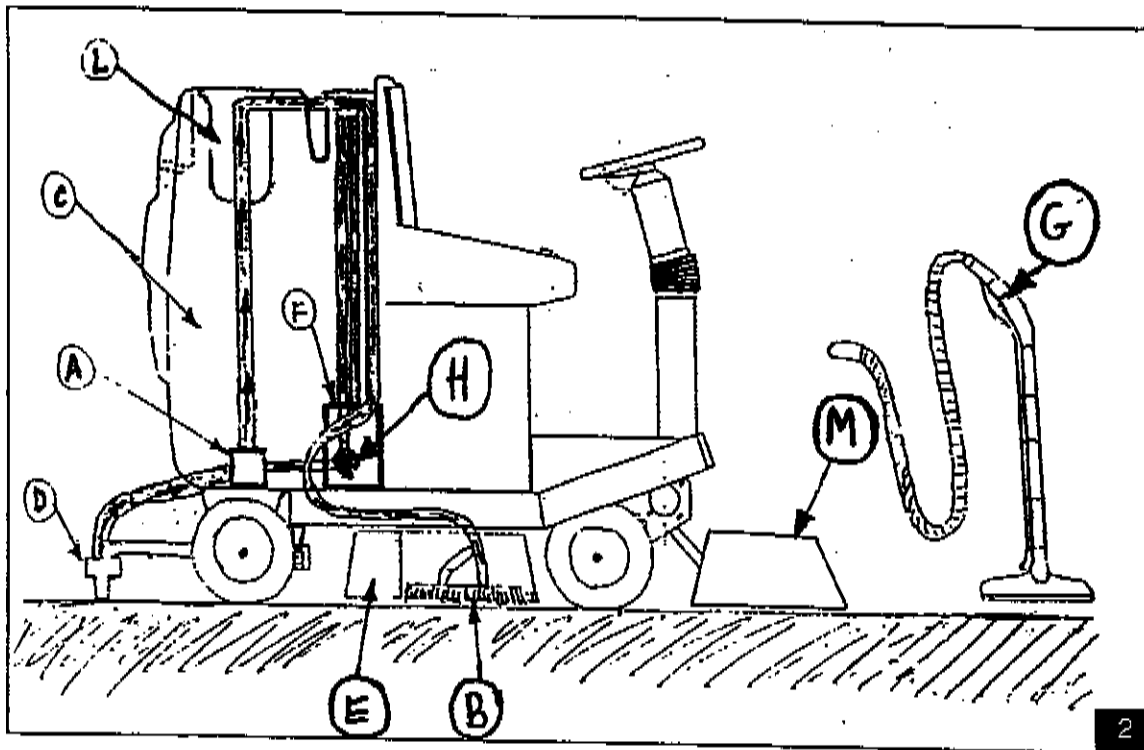

By means of the pump **A**, the machine sends a suitably dosed solution of water and detergent to the brushes **B**, from the tank **C**.

The rotation of the brushes distributes the solution, removes the dirt and lifts the refuse, depositing it in the collection box **E**.

After scrubbing, the floor is dried automatically by the squeegee **D**, using a suction system that sends the dirty water to the tank **C**.

A centrifugal compressor **F** (henceforward to be referred to as the suction device) sucks up the air from the tank **C**, creating a vacuum. The squeegee **D** is connected to the tank; it scrapes the dirty water up off the floor and collects it, allowing it to be sucked up into the tank.

The ability to sweep, the possibility of fitting brushes with different material fibres (or even abrasive discs on models with disc brushes), together with an accurate choice of detergent, allow the machine to adapt to the most varied combinations of floor and dirt.

Accessory Combi **G** (Optional), to insert in the corresponding socket **H** (off-the-shelf), allows the machine to wash in inaccessible positions such as corners, stairs, cluttered floor areas.

The accessory recycling sack **L** (Optional) allows to extend work autonomy and to reduce the consumption of detergent recovering, with an opportune filtering, the water intake from the floor and sending it again to the brushes.

The accessory sweeper head **M** (Optional) allows to remove coarse dirt.

2.3. TECHNICAL SPECIFICATIONS

MACHINE		AS 30R	AS 36R
Head lifting actuator rated load	daN (kg)	120	120
Adjustable vertical force on the head	daN (kg)	21/85	21/85
Suction motor rated power	W/HP	650/0.87	650/0.87
Max. suction vacuum	mm H ₂ O	1600	1600
Drive motor rated power	W/HP	750/1	750/1
Advance rated speed	km/h	6.5	6.6
Drive control		electronic with continuous speed variation (forward and reverse gear)	
Detergent solution pump rated power	W/HP	25/0.033	25/0.033
Water pump max. flow rate	l/min	21	21
Diaphragm tank capacity	l	300	300
Max. temperature water and detergent solution	°C	50	50
Drive wheels diameter	mm	308	308
Turning radius	mm	1450	1450
Rear brakes		drum brake	drum brake
Sound pressure level	dB (a)	68	68
Dry weight without batteries (body only)	kg	320	320
Usable batteries minimum capacity	Ah (5) Ah (20)	220 300	220 300
Installable batteries maximum capacity	Ah (5) Ah (20)	360 535	360 535
Installable batteries maximum weight	kg	410	410
RV battery max. dimensions (LxWxH)	mm	249x100x496	249x100x496
Clean track maximum width	mm	750	900
Swinging squeegee width		1000	1200
Hourly performance	m ² /h	4875	5850
Working environment temperature (min-max)	°C	4/35	4/35
Number of brushes		2	2
Brush rated diameter	mm/inch	380/16"	450/18"
Diameter of abrasive discs	mm/inch	380/15"	450/18"
Brush rotation speed	g/min	225	225
Number of washing head motors		1	1
Washing head motor rated power	W/HP	1500/2	1500/2
Accessory for side movement of head		available	available
Dirt collection basket capacity	l	5	5
Head weight	kg	40	50
Squeegee weight	kg	6.6	7.6
Length, width, height	mm	1800x810x1500	1800x970x1500

TECHNICAL INFORMATION

MACHINE		AS 30R	AS 36R
Weight with packing and pallet	kg	820	820
Dimensions of packing with pallet (LxWxH)	mm	1925x1105x1760	1925x1105x1760


ACCESSORY		HEAD SIDE MOVEMENT
Rated load of head side movement actuator	daN (kg)	90
Head side movement	mm	330

ACCESSORY		BATTERY ROOM
Weight	kg	65
Dimensions (LxWxH)	mm	892x740x376
Weight with packing	kg	80
Dimensions of packing (LxWxH)	mm	1470x810x1080

ACCESSORY		SWEEPING HEAD
Weight	kg	27
Dimensions (LxWxH)	mm	850x780x350
Weight with packing	kg	32
Dimensions of packing (LxWxH)	mm	1000x720x110

2.4. DIMENSION (fig. 3)

Head	B
30R	810
36R	970

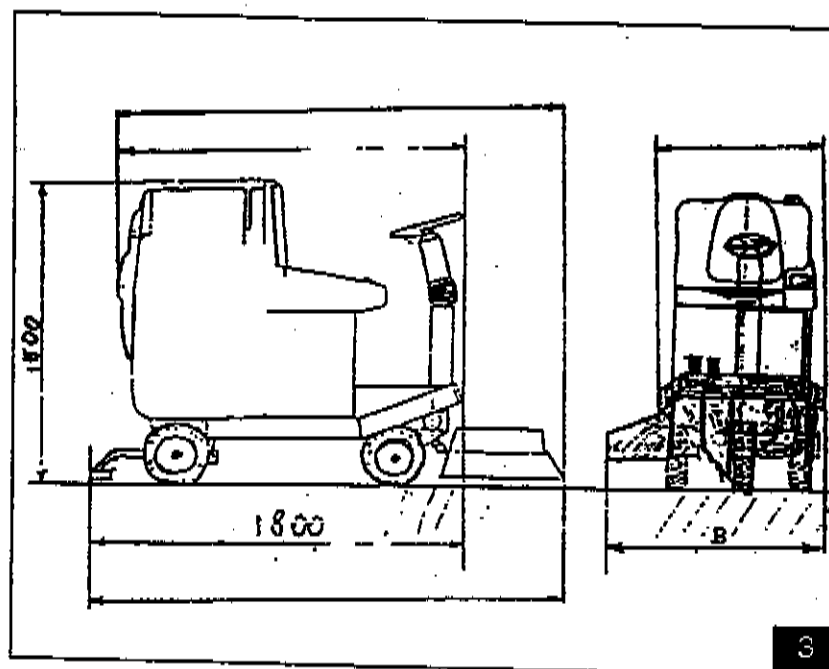

2.5. DETERGENTS - ADVICE FOR USE

The machine has been designed for use with specific detergents for floor sweeping and scrubbing machines.

Use only non foam-producing and biodegradable detergents, suitable for the type of floor and the dirt to be removed.

Follow the safety standards related to detergent use indicated in paragraph 3.1.


**WARNING**

Always dilute the detergents according to the manufacturer's instructions. Do not use sodium hypochloride (bleach) or other oxidizing agents, especially in high concentrations, and do not use solvents or hydrocarbons. The water and the detergent must be at temperatures no higher than the maximum value indicated in the technical data and they must be free from sand and/or other impurities.

**WARNING**

If you use particularly powerful detergent, pour first the water into the tank and thereafter the detergent in order to avoid damages in the pump or the diaphragm.

2.6. SAFETY DEVICES (fig. 4)

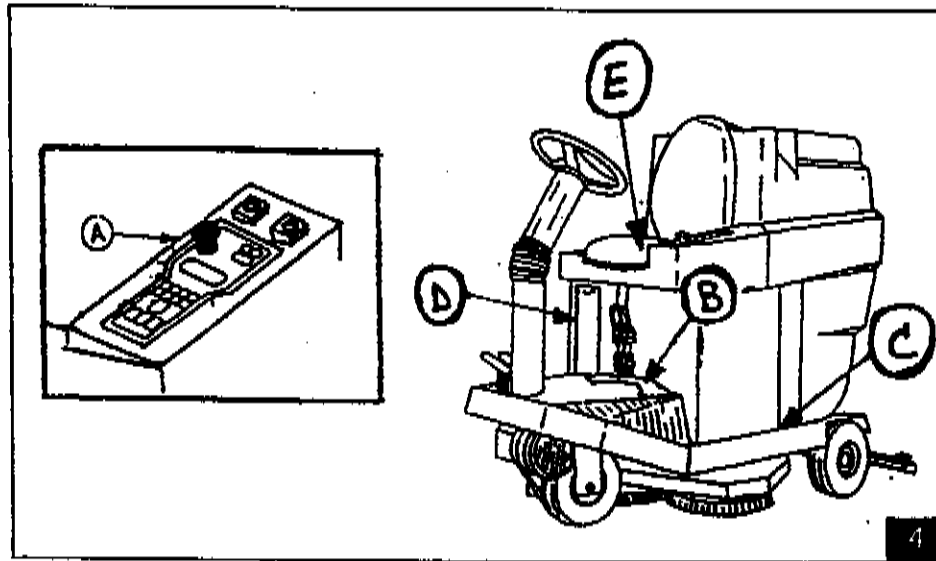

	Device	Activation	Function
A	Emergency button.	Activated when pressed.	Interrupts power supply.
-	Service brake.	Engages automatically when the accelerator is released.	The machine slows down gradually.
B	Hand brake.	Engages when the lever B is raised.	If it is pulled the drive is stopped (interrupted).
C	Battery box block lever.	Hook pulling the battery box to the bottom the seat locked under the operator seat.	If it is not hooked, interrupt the drive.
D	Tank blok lever.	Hook pulling up and insert on the spline located in the tank under the operator seat.	If it is not hooked, interrupt the drive.
E	Weight sensor.	Sense operator presence seated on the driving place.	Interrupt the drive if the operator is not seated and stop the machine.

2.7. DANGER ZONES (fig. 5)

A - Tank. In presence of certain detergents, danger of irritation for the eyes, skin, mucous membranes, respiratory system, danger of asphyxia.

Danger due to the dirt recovered from the environment (germs and chemical substances).

Danger of crushing between the tank and chassis during the tank lock-up operation.

B - Battery compartment. Danger of short circuits between the battery poles and presence of hydrogen during battery charging. Charge the batteries in a ventilated area, with the hood open.

C - Battery box. Danger of the machine turnover during the box take-out operation.

D - Head side movement actuator. Danger of crushing due to moving parts.

E - Top of the washing head. Danger of crushing between the top of the brush head and the chassis.

F - Dirt collecting basket compartment.


The brushes are accessible when the basket is not in position.

G - Bottom of the washing head.

Danger when lowering the head and brush rotation.

H - Electric components plate. Danger of short circuit.

I - Back wheels upper part. Danger of crushing between the wheel and chassis.

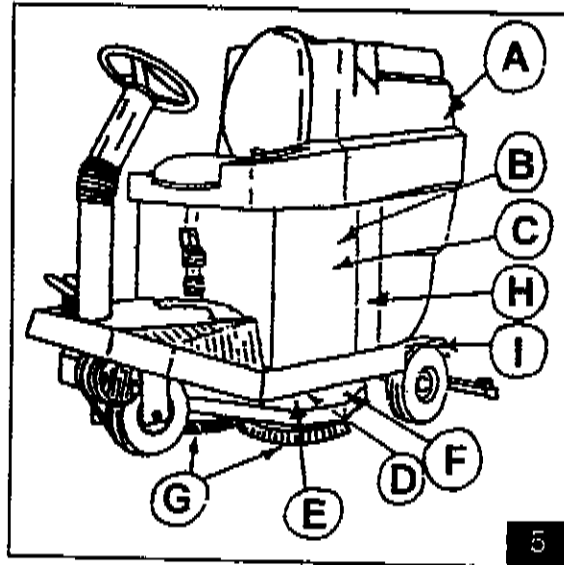

2.8. OPTIONAL UNITS

Recycling unit:

allows prolonged work time and reduction of detergent consumption by recovering the water taken up from the floor, by means of a suitable filtering system, and sending it back to the brushes.

Combi Set:

a quick coupling is fitted on the machine in the factory to allow the use of an accessory for washing and drying where the machine cannot do the job itself (stairs, under-stair area, inaccessible corners, etc).

Sweeping Head:

Placed in front of the anterior wheel allows to remove the coarse dirt.

2.9. ACCESSORIES

- Bristle brushes.
Used for washing delicate floors and for polishing.
- Polipropilene brushes.
Used for normal floor washing.
- Tynex brushes.
Used for accumulated stubborn dirt on resistant floors.
- Drive discs.
Allow the use of the discs described below:
 - Yellow discs.
Used for washing and polishing marble and similar surfaces.
 - Green discs.
Used for washing resistant floors.
 - Black discs.
Used for thorough washing of resistant floors, with stubborn dirt.
- Combi Set.
- Carpet head for Combi Set.
- Strip head for Combi Set.
- Sucker head for Combi Set.
- Recycling filter sack.

3

SAFETY INFORMATION

3.1. SAFETY STANDARDS



Read the instructions manual carefully before proceeding with the start-up operations, use, maintenance, routine maintenance or any other jobs on the machine.



WARNING

Scrupulously respect all the advice given in the manual (especially those concerning danger and special attention), and the safety plates applied directly on the machine. The Manufacturer declines all responsibility for damage to persons or things resulting from failure to respect the safety indications.

The machine may only be used by trained personnel that has demonstrated its own capacity and that has been explicitly assigned to the use of it.

Use of the machine is forbidden for minors.

Do not use this machine for purposes other than those for which it is intended. Consider the type of building that you are working in (e.g. pharmaceutical, chemical industries, etc.) and scrupulously respect the standards and safety conditions in force there.

Do not use this machine in places inadequately illuminated, explosive environment, public roads, in the presence of noxious dirt and in insanitary environments.

On high speed danger of turnover in a curve. With empty tank the danger increases.

Do not inhale flammable or explosive liquids (ex. gasoline, combustible oil, etc.), flammable gas, dry dust, acids and solvents (ex. thinner, acetone, etc.) even if diluted.

Do not inhale steam from burning or boiling objects.

Do not use the machine on slopes with a gradient of more than 2%. When transporting the machine or ramps or higher slopes, use the maximum care to avoid overturning and uncontrolled acceleration. Overcome ramps and steps always by lifting brushes head and squeegee. Never park the machine on a slope.

Do not leave the machine unguarded when the engine is on. Leave the machine only after you have switched off the engine, insured the machine against accidental movements, pulled the hand break and pulled out the ignition key.

Do not use the machine to transport person/things or to tow things.

Never lean weights on the machine for any reason.

Never block the ventilation and heat dispersion openings.

Do not remove, modify or avoid the safety devices.

Many unpleasant experiences have shown that various parts of people's clothing may cause severe accidents: before starting work, remove any jewelry, watches, ties or other accessories.

Always use the individual protections for operator safety recommended by the Manufacturer: protective overalls or apron, no-slip waterproof shoes, rubber gloves, protective eye-glasses and a mask to protect the respiratory organs.

Do not put your hands close to the moving parts.

Do not use detergents different from the recommended ones and follow their related safety instructions.

We recommend you to keep detergents out of reach of children and in case of contact with the eyes rinse immediately with water and in case of consumption contact immediately a doctor.

It is indispensable to observe the battery manufacturer's instructions and observe the directions of the legislation.

Always keep the batteries clean and dry in order to avoid superficial dispersion of currents. Protect the batteries from impurity, for example metal dust. Do not lean tools against the batteries, danger of short circuit and explosion.

Be attentive when using battery acid. Observe the related safety instructions.

In the presence of particularly high magnetic fields, consider their possible effect on the control electronics.

Do not wash the machine with jet of water.

In the event of breakdown and/or bad operation of the machine, switch it off immediately (disconnecting it from the power mains or from the batteries) and do not tamper with it.

Contact one of the Manufacturer's technical service centres.

All operations on the electrical system and all maintenance and repair jobs not explicitly described in this manual must be performed by specialized technical personnel, experts in the sector.

Only accessories and spare parts sold by the manufacturer are allowed since only these can assure that the machine works safely and without inconvenience.

Do not use parts taken from other machine.

This machine has been projected and constructed for a service length of ten years from the date of manufacture stamped on the data plate. At the end of this period the machine has to be destroyed or go through a complete revision by the manufacturer.

If it is decided not use the machine any longer we recommend you to take out the batteries and leave them for recycling. We also recommend you to empty the tank and to destroy the parts that can be of danger, for example for children that could use a machine that is not in use as a toy.

4

HANDLING AND INSTALLATION


4.1. PACKING (fig. 1)

The machine body is packed and fixed onto a wooden pallet with anchoring brackets; it is covered with a cardboard box closed with strapping.

The head and the squeegees are packed in cardboard boxes without a pallet.

4.2. LIFTING AND TRANSPORT (fig. 1)

When packed the machine body may be lifted only with a fork lift truck. The heads may also be lifted by hand.

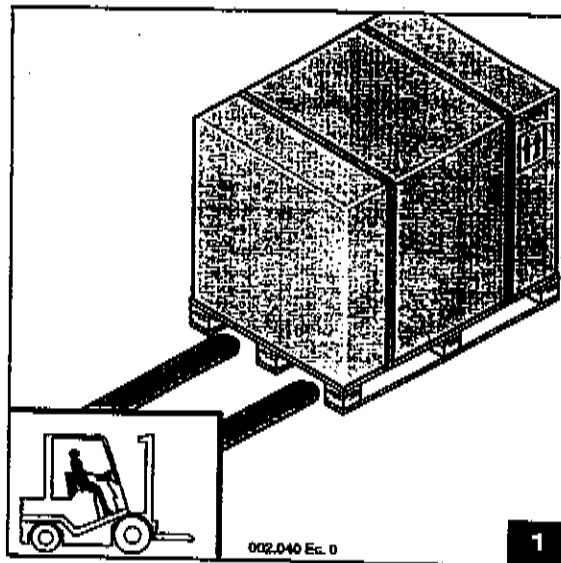


INFORMATION

Handle with care, avoiding jolts, and without overturning.

4.3. UNPACKING AND CLEANING

On delivery, check that the machine is unbroken. If you find it has suffered any damage, report this to the carrier and accept the goods only with your written reserve to present a claim for the refund of damage.

- Cut the strapping **A** (fig. 2).
- Remove the cardboard **B** (fig. 2).
- Remove scaffold **C** (fig. 3).
- Take out the instruction manual, the inspection sheet, the guarantee card, the cards with serial number for ordering spare parts and the envelope inside the battery compartment **D** (fig. 3).
- Check the contents of the envelope:
 - 1 battery cable;
 - 5 bridges with clamps;
 - 1 connector for the battery charger;

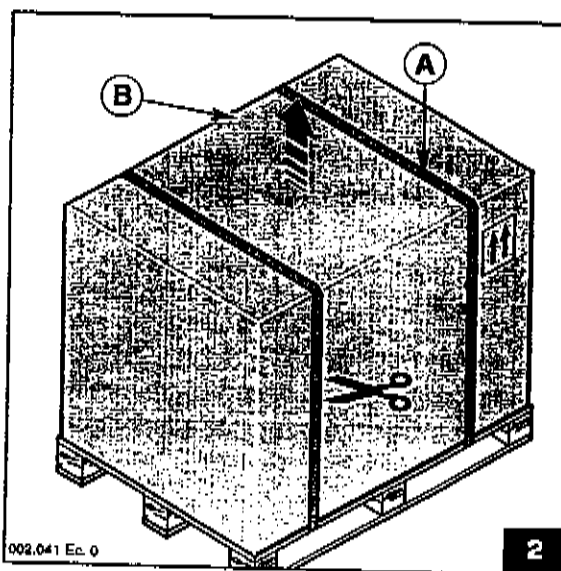


- Two copies of the ignition key.



INFORMATION


Put one of the two keys in a safe place so that it can be located in case the other one is lost; the other key is to be inserted in the lock on the mushroom switch.

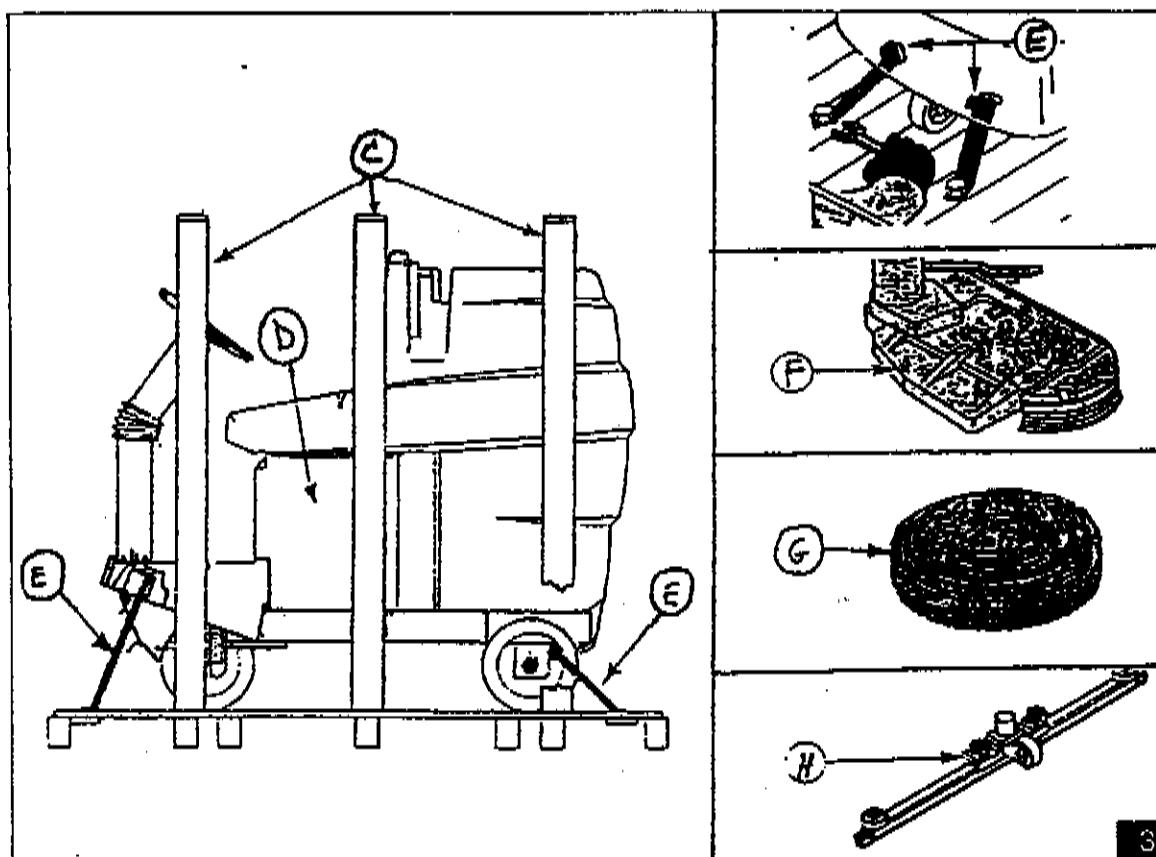

- Unscrew the bolts and remove the brackets E (fig. 3).
- Free the head F, the brushes G, the squeegee H from their packing.
- Have the head fitted by an authorized service centre.
- Clean the outside of the machine, following the instructions in paragraph 7.2.1.
- Eliminate the packing material, using containers for separate refuse collection.

4.4. SQUEEGEE - INSTALLATION (fig. 4)

- Lift the squeegee D, operating the pedal D (§ 6.2., fig. 2);
- Slacken the knobs C.
- Insert the squeegee D in the slots in the support A and tighten the knobs C.
- Firmly push down the sleeve of the suction tube E.

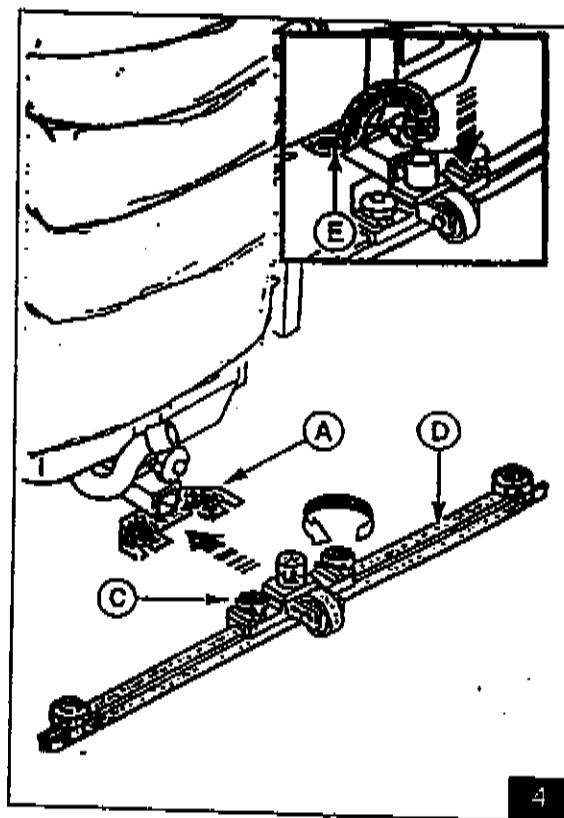

4.5. FEEDING BATTERIES



DANGER


During any kind of battery maintenance follow the related safety instructions for batteries indicated in paragraph 3.1. Besides that:

- wear rubber gloves.
- use an apron or protective overalls.
- use protective eye-glasses.
- wear non-slip waterproof shoes.
- keep away from any naked flames.
- do not short-circuit the battery poles.
- do not cause sparks.
- do not smoke.

Two different types of batteries may be fitted on this machine; their characteristics must correspond with those indicated in (§ 2.3.). They must be kept charged, dry and clean, with their connections tight.

Tubular armored batteries.

The level of the electrolyte in these batteries must be checked periodically. When necessary, top up with distilled water alone until the plates are covered; do not overfill (max. 5 mm above the plates).

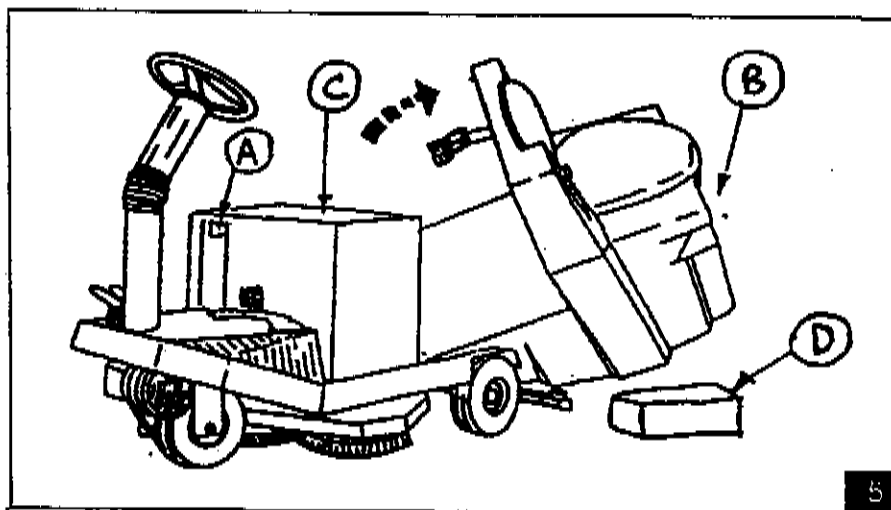

Gel batteries

This kind of batteries do not require maintenance and it is recognized by the machine because of the Anderson connector.


4.5.1 Batteries - Use

When supplied the batteries are normally filled with acid and ready for use. However, before starting the machine it is advisable to recharge them.

Proceed as indicated, see "Batteries - Recharging procedure" (§ 4.6.2.).

4.5.2 Batteries - Installation

- Be sure that the tank is empty and eventually drain it (§ 5.3.).
- Remove the suction tube E (§ 4.4., fig. 4).
- Remove the squeegee D (§ 4.4., fig. 4).
- Press the emergency mushroom A (§ 6.1., fig. 1).
- Disconnect the connector A (fig. 7) from B (fig. 7).
- Release the tank block lever A (fig. 5).
- Lift the tank B (fig. 5), lay it on the block D (fig. 5) of dimensions 300x300x150mm. In this way one has access (from the upper side) to the battery box C (fig. 5).
- Insert the battery on the box: first the lateral ones A (fig. 6) and then the central ones B (fig. 6).

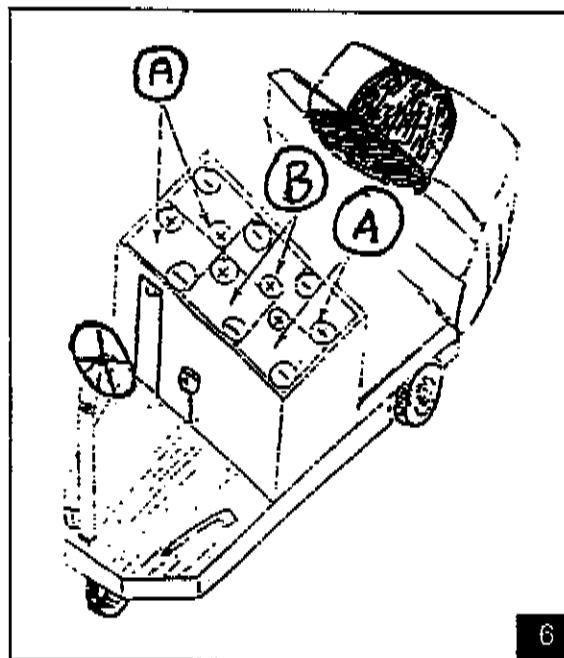

WARNING

When lifting the batteries, remember that they weigh up to 46 kg each.

4.5.3 Connecting the batteries (fig. 7)

**DANGER**


Scrupulously follow the indications described below, as short-circuit of the battery may cause them to explode.

Before fitting a clamp finally onto a pole, touch it against the pole for a moment. If there are any sparks the connection is wrong.

The positive and negative poles have different diameters; fit the clamp marked with the respective polarity onto each pole.

When connecting the batteries, fit the cables as shown in the figure.

- Tighten the bolts on the clamps and cover them with grease.
- Insert back the tank in its work position and hook the tank lever block A (fig. 5).
- Connect the connector A to the one on the machine B.

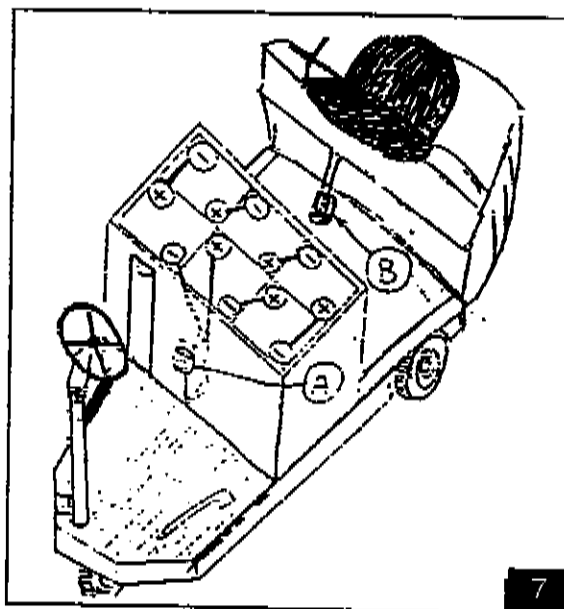

4.6. RECHARGING THE BATTERIES

**WARNING**

If the warning lamp D (§ 6.1., fig. 1) is flashing proceed immediately to recharge the batteries, so that they will not be irreparably damaged.

4.6.1 Choosing the battery-charger

Check that the battery-charger is compatible with the batteries to be charged:


Tubular lead batteries.

The battery-charger must have a maximum initial current of 16 A (with the DIN Wa method) or from 20 to 50 A (with the DIN Wo Wa two-stage method) for each 100 Ah (5) of the battery.

To confirm your choice, consult the Manufacturer and the manual of the battery-charger.

Gel batteries.

Use a battery-charger specifically intended for this type of battery.

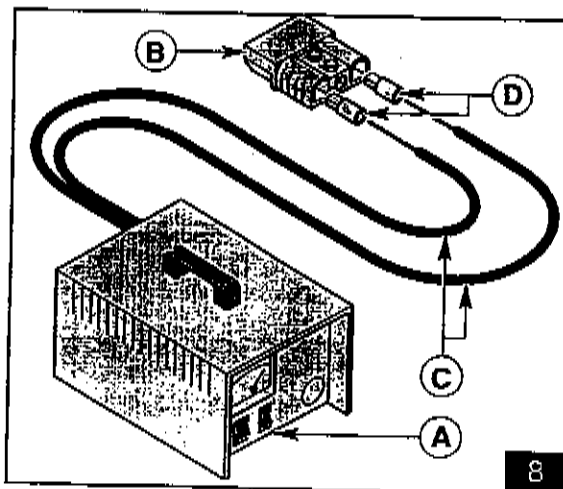

Installing the battery-charger (fig. 8)

Following the instructions enclosed with the connector B:

- remove about 13 mm of sheath from the black and the red cable C;
- clip the connector terminals D onto the cables C;
- Insert the terminals in the connector B, respecting the polarity: red cable +, black cable-.



DANGER

Incorrect connection of the battery-charger may cause severe damage to the batteries and, in some cases, may even cause them to explode.


4.6.2 Batteries - Recharging procedure

a) Recharging with the machine switched off:

- Disconnect the connector A (fig. 7) from B (fig. 7).
- Proceed as indicated on point c) or d).

b) Recharging with the help of a second battery box and of a battery locker (fig. 9):

- Position the machine beside the battery locker (as closed as possible), respecting the alignment between the yellow labels A and B (located respectively on the machine chassis and on the battery locker).
- Disconnect the connector A (fig. 7) from B (fig. 7).
- Verify that the level of the battery locker and the level of the battery box coincide with each other; otherwise operate the battery box level regulation turning the nut C.
- Turn clockwise the lever D, in order to unblock the battery box.
- Extract the battery box E and bring it slowly in position F.

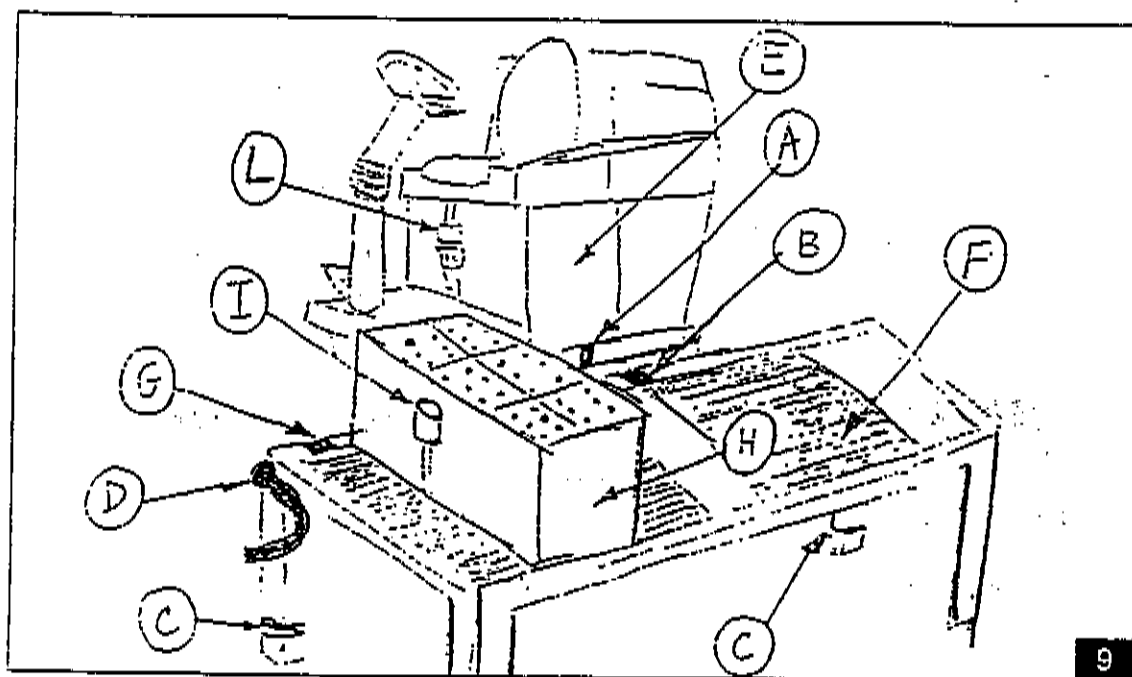

- Turn anticlockwise the lever D.
- Push forward the machine until obtaining the alignment between the yellow labels A and G (located respectively on the machine chassis and on the battery locker).
- Turn clockwise the lever D.
- Push slowly the box G inside the machine.
- Turn anticlockwise the lever D.
- Connect the connector I and L.
- For recharging the battery on the box left on the battery locker, proceed as indicated on point c) or d).


c) Lead batteries with liquid electrolyte (fig. 10)



WARNING

Perform the operations described below only after having taken the machine into a ventilated environment, far from fires, sparks, lit cigarettes ...

- Connect the connector E to the connector B on the battery-charger.
- Recharge following the indications in the manual of the battery-charger.

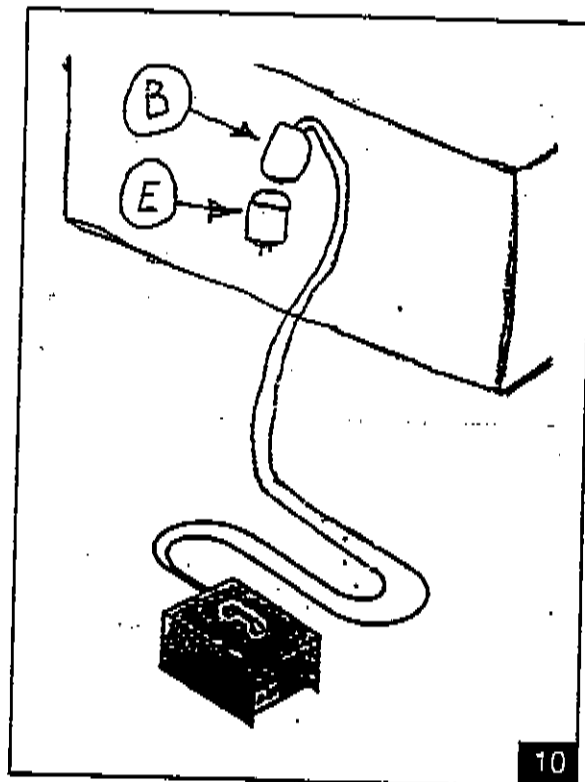


WARNING

Do not let the temperature of the electrolyte exceed 45° during recharging.

- At the end of the recharging time, check the intensity with a densimeter. If one or more elements is flat and the remaining ones are completely charged, the battery is damaged and must be replaced.
- Check the electrolyte level and top up with distilled water if necessary.

- Connect the connector **E** to the one on the machine **L** (fig. 9).
- d) Gel batteries (fig. 10)**
- Connect the connector **E** to the connector **B** on the battery-charger.
 - Recharge following the indications supplied with the battery-charger.
 - At the end of the recharging time, disconnect the connector **E** (fig. 10) and reconnect it to the one on the machine **L** (fig. 9).

4.7. LIFTING AND HANDLING OF THE MACHINE (fig. 11)

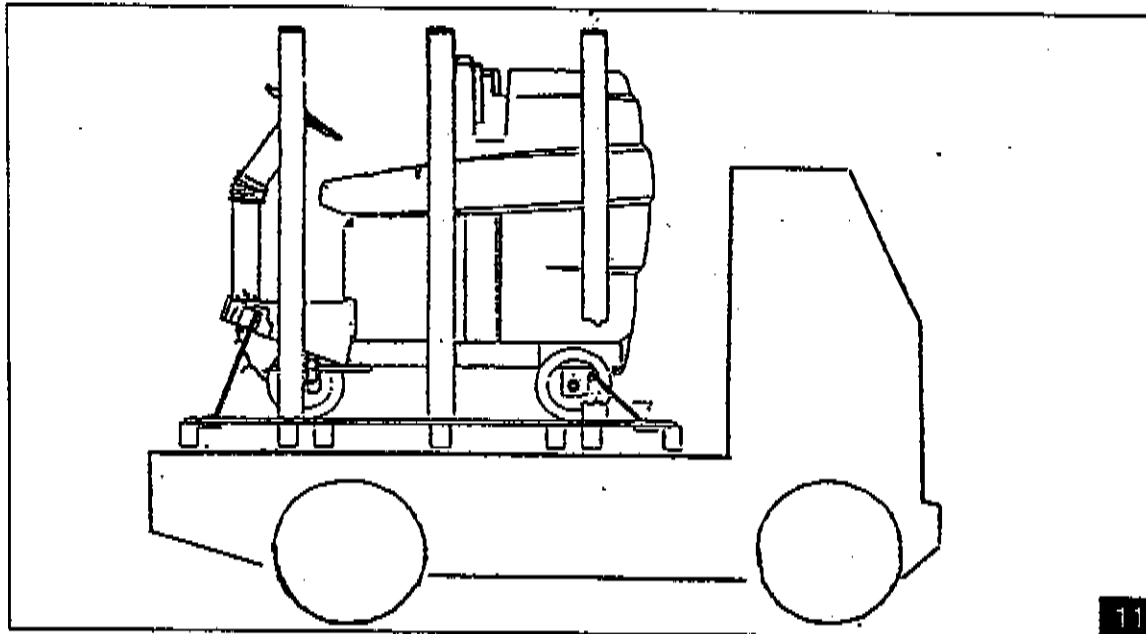

WARNING



The machine weighs about 320 kg.

The loading of the machine onto a vehicle must be done as follows:

- remove the batteries.
- empty the tank and the dirt collecting box.
- remove the squeegee.
- put the machine on the pallet and pull the hand brake.
- fix the machine on the pallet with a bracket (§ 4.3., fig. 3).
- Lift the pallet (with the machine) by means of a fork lift truck, and load it on the way of transportation.
- Anchor the machine to the way of transportation with ropes connected to the pallet and to the own chassis of the machine.
- Loading and unloading of the machine from the way of transportation must be carried out in a suitably lit environment.

5

SETTING UP

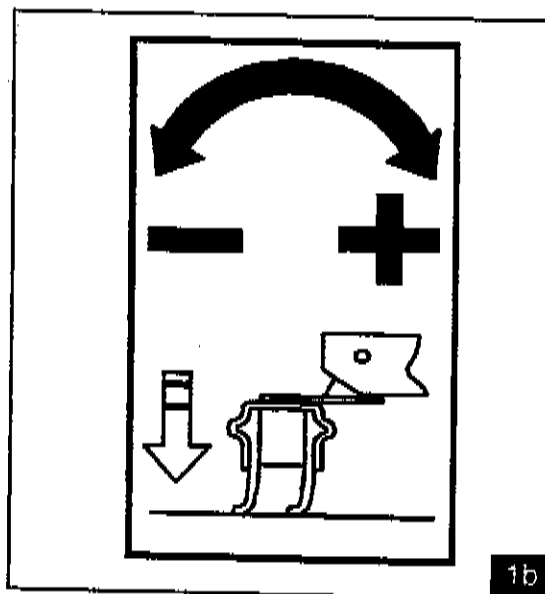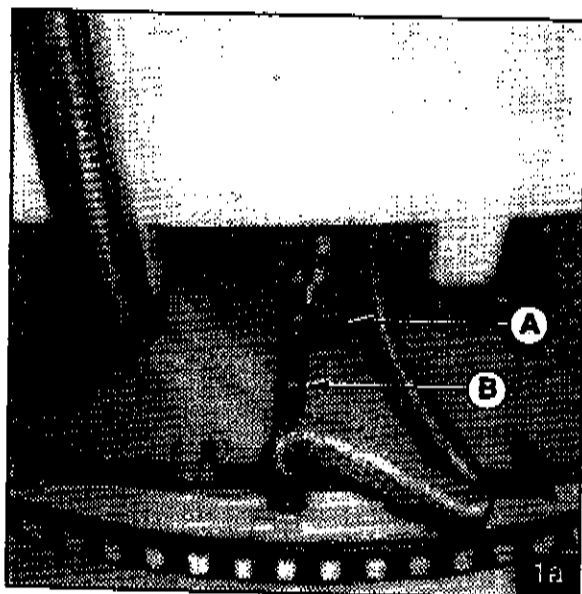


5.1. SQUEEGEE - ADJUSTMENT (fig. 1a and fig. 1b)

To obtain perfect drying, the squeegee must be adjusted so that during operation the rear blade inner lip F (§ 7.2.4., fig. 4) flexes by about 45° compared to the floor.

- A - Pressure adjusting lever (fig. 1a, rif. A): turning it to the right increases the pressure, turning to the left decreases the pressure (fig. 1b);
- B - Inclination adjustment screw (fig. 1a, rif. B): keep the nut locking the screw B still with a 13 mm spanner and turn the screw itself with another 13 mm spanner; turning the spanner clockwise increases the inclination of the blades at the centre of the squeegee and decreases at the sides; instead, when it is turned anti-clockwise, blade inclination increases at the sides of the squeegee and decreases at the centre.

5.2. STEERING COLUMN - REGULATION (fig. 2)

- Slacken the inclination column regulation lever A.
- Regulate the steering B, to have a comfortable drive position.
- Block the inclination column regulation lever A.

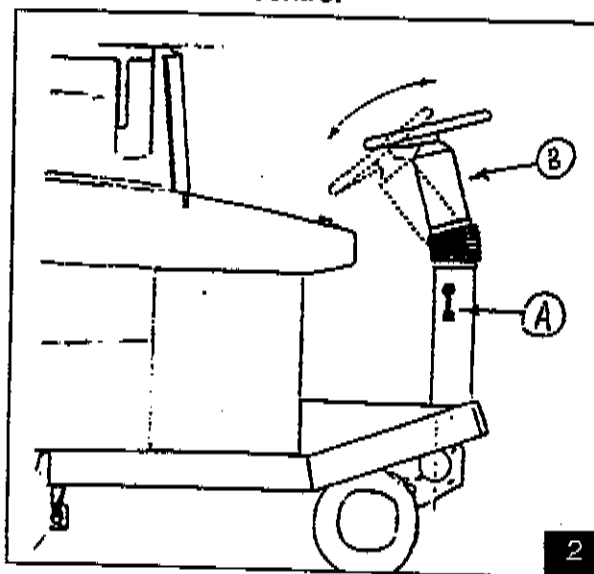

5.3. DRAINING OFF DIRTY WATER (fig. 3)



WARNING

The fluids recovered contain detergents, disinfectants, water, organic and inorganic material recovered during operation; they must be disposed of according to the laws in force in the areas concerned.




DANGER

Use the individual protection devices listed in § 5.7.

- Take the machine next to a drain.
- Detach the drain hose A from its seat and position the cock over the drain.
- Remove the drain cock B unscrewing.
- Once all the contents of the tank have been drained off, turn off the cock and put the hose back in position.

For complete cleaning, before closing the cock B:

- Remove the tank cover C.
- Release the tank block lever A (§ 4.5., fig. 5).
- Lift the tank B (§ 4.5., fig. 5).
- Wash the inside of the tank.
- Insert back the tank in its work position.
- Hook the tank block lever.
- Put back the tank cover.

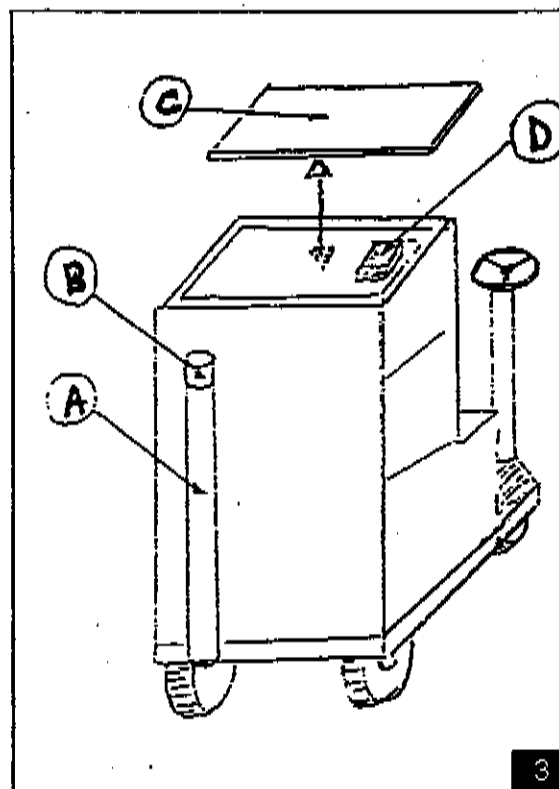

WARNING

During the washing do not remove the filter detergent solution D (fig. 3) and do not direct the water-jet towards the filter itself.


5.4. DRAINING AND FILLING WITH WATER AND DETERGENT SOLUTION

**DANGER**

Use the individual protection devices listed in § 5.7.


Drainage (fig. 4)

- Go to the area in which you want to empty the liquid.
- Remove the cover A.
- Detach the hose B and position it over the drain.
- Turn on the scrubber and turn to "1" the accessory Combi switch X (§ 6.1, fig.1). When the solution is ended turn to "0" the Combi accessory (§ 6.1, fig. 1);
- Put hose B back in position and put back the cover A.
- The water and detergent solution may also be used for washing the dirty water tank.

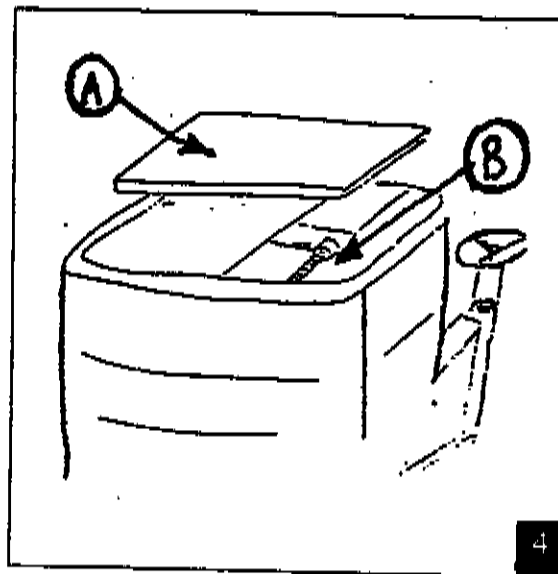**Filling (fig. 5)**

To fill the diaphragm tank:

- Remove the cover A.
- Check that the recovery tank is empty; if it is not, empty it (§ 5.3.).
- Enlarge the diaphragm sack if it does not adhere properly to the tank.
- Fill the sack with the solution of water and detergent, without exceeding the maximum level indicated by the mark D.
- Replace the cover A.

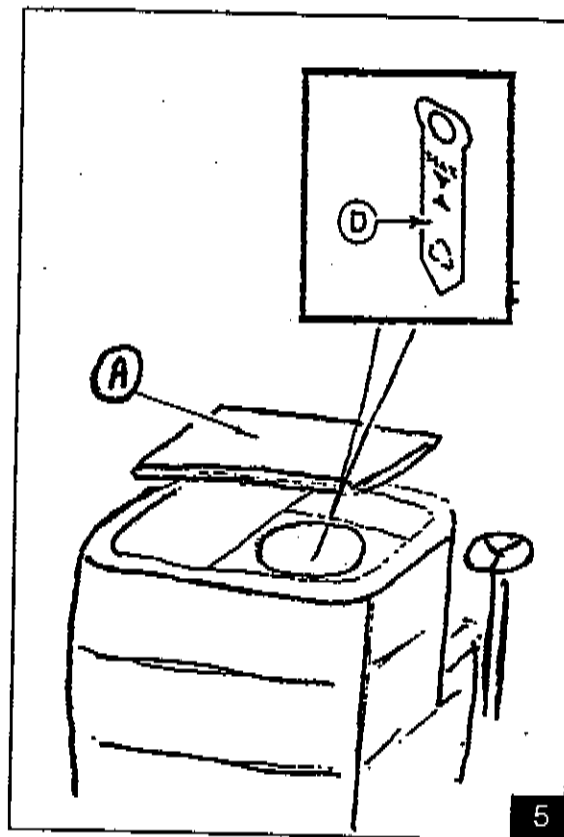


5.5. DIRT COLLECTING BOX - REMOVING AND FITTING (fig. 6)



WARNING

Do not work unless the box is perfectly installed.

Before removing the box, stop the machine, wait until the head has come all the way up and the brushes have stopped; then press the emergency button.

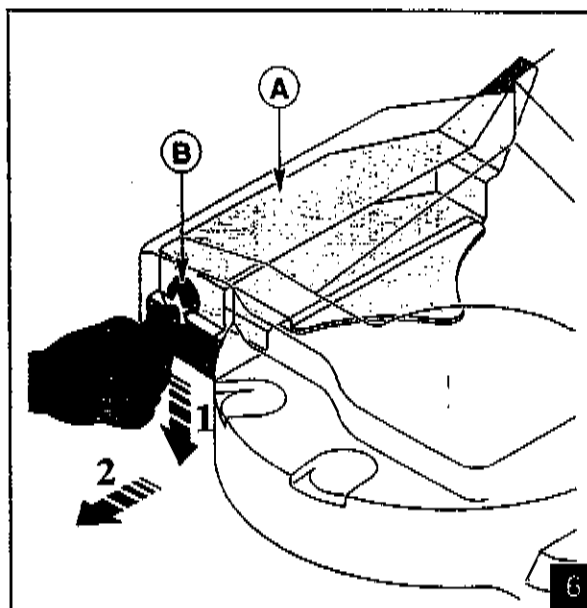

- Press the release button **B**.
- Lower and remove the box **A**.


To fit the box, repeat the operations described for removal in inverse order.

5.6. BRUSHES - INSTALLATION



WARNING

Do not work unless the brushes are perfectly in place.

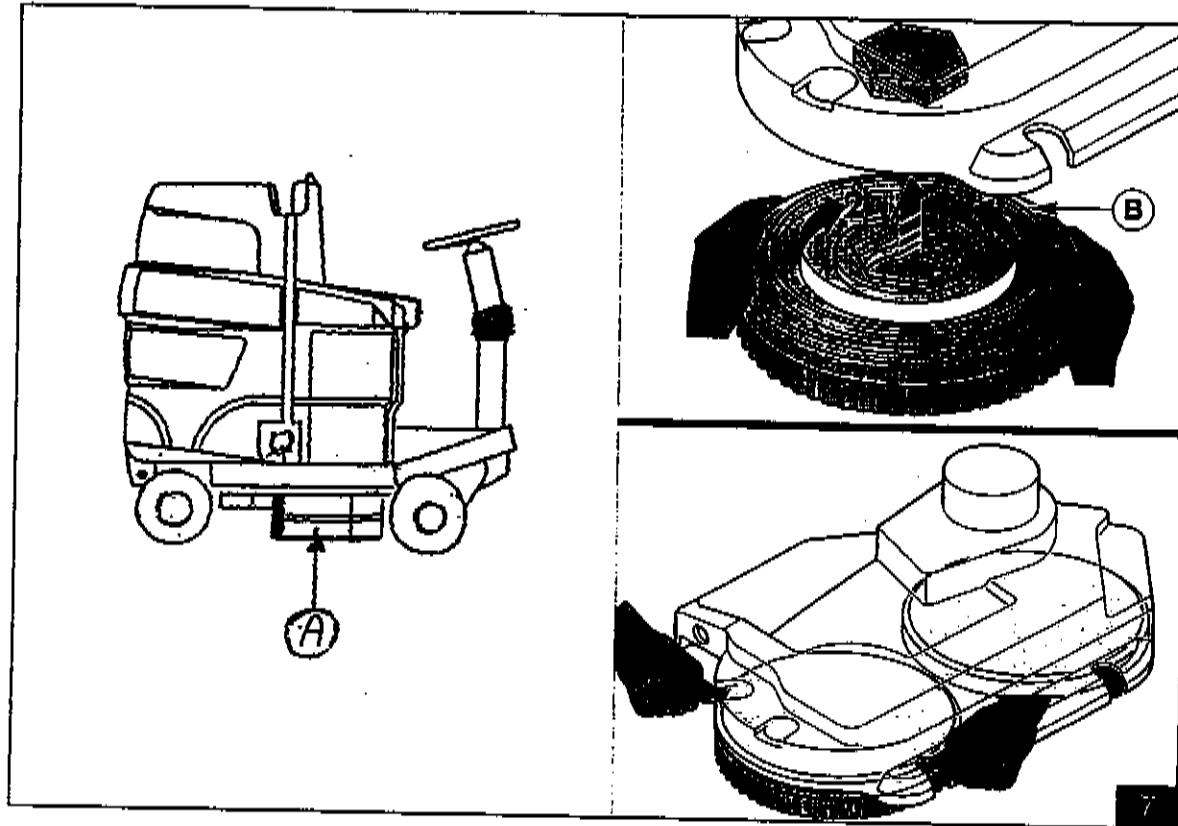

Before removing the brushes, switch off the machine, wait until the head has come all the way up and the brushes have stopped; then press the emergency button and disconnect the battery connector A (§ 4.5.3, fig. 7).

Removing

- Watch out: Open the side right door A to better disassemble the right brush.
- Press the top of the edge of the brush B down with both hands.

Fitting

- Grip the brush B at the sides with both hands.
- Centre the hexagonal socket on the brush with the outline of the brush cover.
- Press upward and turn gently until the brush makes connection.
- To use the abrasive disc, preassemble the drive disc and then fit it on the machine.

5.7. PREPARING THE MACHINE FOR WORK**DANGER****During machine preparation, wear:**

- **non-slip waterproof shoes;**
- **a mask to protect your breathing;**
- **overalls;**
- **waterproof gloves;**
- **any other form of protection recommended by the supplier of the detergent or necessary for the environment you are working in.**

Before starting work, perform the following operations:


- check the level of the battery charge and recharge if necessary;
- check that the battery connector is connected;
- check the contents of the recovery tank and drain it if necessary;
- if necessary, empty the dirt collecting box;
- pour clean water and detergent in a suitable concentration into the detergent solution sack (do not pour water into the recovery tank);
- check that the tank cover is perfectly closed (imperfect closing may considerably reduce the machine's drying power);
- fit brushes, drive discs of a suitable type for the floor and the job to be done;
- check that the squeegee is firmly fixed, connected to the suction hose and correctly adjusted;
- ensure that the rear blade of the squeegee is not worn.

6

USE

6.1. DESCRIPTION OF THE CONTROLS

— Control panel. (fig. 1)

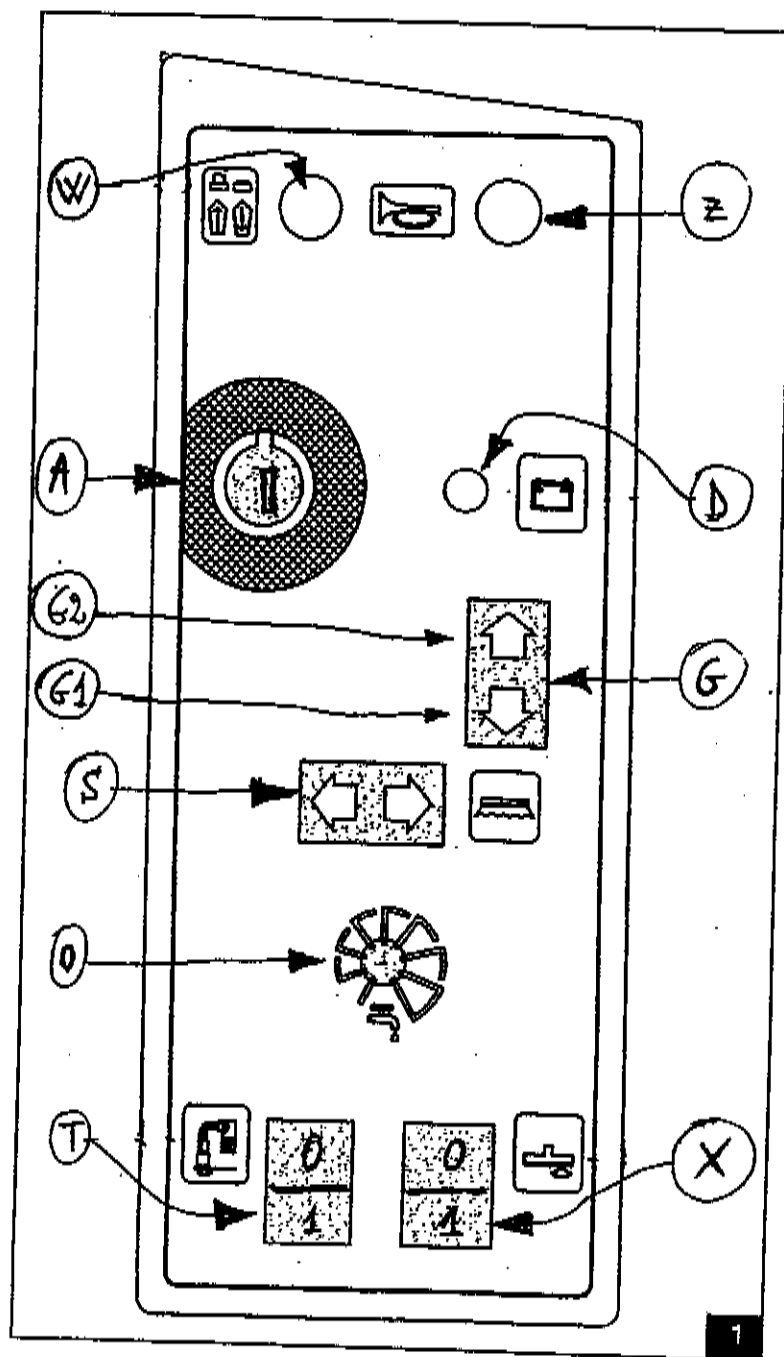

A - Main switch - emergency button with key

Switches on and off the electric power supply to the machine.

- Press the button to stop the machine. Use the ignition key to restart the machine.

D - Warning light (red).

Shows that the power supply has been activated and indicates the level of the battery charge:

off: the machine is off;

flashing at a steady frequency: the machine is on but the batteries are almost flat and must be recharged immediately because they may be irreparably damaged if you keep working with the machine.

lit: the machine is switched on.

G - Lifting - Lowering of brushes button:

- the "G1" position: operates the lowering of head in working conditions and the rotation of brushes .
- the "G2" position: stops the brushes and lifts the head in a standing position.

O - Potentiometer of solution pump.

Adjusts the flow of solution (clean water and detergent). By rotating clockwise, it increases the flow of solution .

S - Button lateral shifting of sweeping head.

It works only when the lateral device is installed in the machine.

- by pushing it on the right, the head comes out;
- by pushing it on the left, , the head comes in again;

T - Vacuum button with warning light.

Turns on and off the vacuum motor, which dries the floor on which the operator works. The warning light is active if the vacuum motor is fed.

W - Forward/reverse running selection button.

- With key released the light (on the key) is off and the forward running is activated.
- With key pressed the light (on the key) is off and the reverse running is activated.

X - Switch of Combi accessory with warning light:



- "1":it commutates the scrubber to the accessory;the brushes are stopped (if the same were running)and the solution pump starts;
- "O": it puts off both the vacuum motor and the solution pump.

Z - Button of acoustic horn.

- the horn gives out continous spound, whem the botton Z is pushed ;
- the horn gives out a sequence of short sounds (0,5 sec. ON, 0,5 sec. OFF) when the scrubber is on reverse;
- the horn gives out a continous sound , when the manual brake is "on" (with the machine operating) .

6.2. SQUEEGEE - USE

- Push "1" on the switch T (§ 6.1, fig.1), to operate the vacuum motor .
- Operate the pedal B (fig. 2) to lower the squeegee A (fig. 3).
- If during the work, with the squeegee down , the operator wants to go reverse, first he must stop and then he must lift the squeegee. On the contrary, the horn gives out a continuous sound and the driving T is prohibited (§ 6.1, fig. 1).
- At the end of work, operate on pedal B (fig. 2) to lift the squeegee A (fig. 3).
- Push "0" on the switch T (§ 6.1, fig. 1) to lower the vacuum motor.

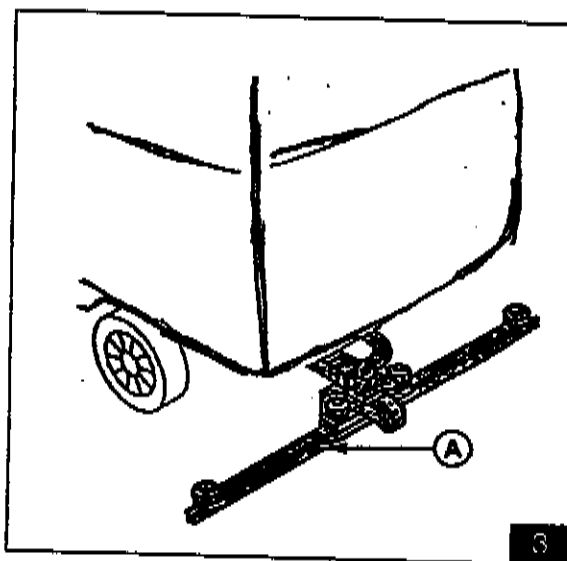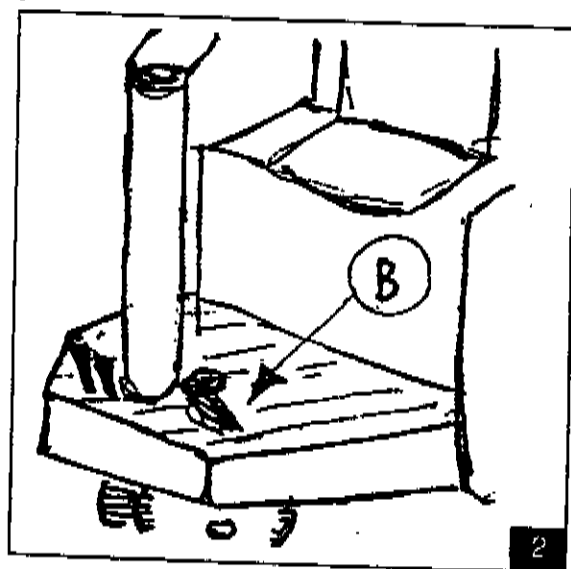

6.3. PARKING BRAKE - USE



WARNING

Do not leave the machine unattended with the parking brake disengaged. Do not engage the parking brake when the machine is moving.

To engage the parking brake:

- ensure that the machine is standing still;
- raise the lever B (§ 2.6., fig. 4);

To disengage the parking brake:

- press the button on the hand brake lever extremity and lowering the lever.

If the accelerator is pressed with the hand brake on, the horn warning produces an intermittent sound.

6.4. DRIVING THE MACHINE

- After being seated on the driver seat, move the machine and regulate the speed act on the accelerator.
- To insert the reverse driving, first stop, make the squeegee lift up, by operating the pedal B (§ 6.2., fig. 2) and then push the button W (§ 6.1., fig. 1).
- To decelerate release the accelerator: the motor works as an electromagnetic brake speeding down the machine with a graduate braking; to emphasize the braking act on the pedal.

6.5. PROCEDURES FOR USING THE MACHINE



DANGER

Before starting work you are advised to wear:

- overalls;
- non-slip waterproof shoes;
- a mask to protect your breathing;
- waterproof gloves;
- any other form of protection recommended by the supplier of the detergent used or necessary for the environment you are working in.

After having prepared the machine as described (§ 5.7.), proceed as follows:

- insert and turn the key to release the mushroom button, remove the key and place it in the compartment on the arm rest on the left of the operator;
- rotate the solution pump potentiometer O (§ 6.1., fig. 1) to the minimum position (solution minimum flowing);
- push "1" on the switch T (§ 6.1., fig.1), to start the vacuum motor;
- lower the squeegee with the pedal B (§ 6.2, fig. 2) and, when necessary, adjust it (§ 5.1.);
- press the up/down brushes button G (§ 6.1., fig. 1), on the position G1. The brushes lower and begin turning, while the pump spreads detergent solution on the floor;



WARNING

the set pressure must be suitable for the type of floor you are working on; too high a pressure could damage the floor;

- release the parking brake (if it is on);
- adjust the traction speed acting on the accelerator ;
- while working with the squeegee down, if the operator wants to put the machine in reverse, it's necessary first to stop and then lift the squeegee;
- check periodically that the solution arrives to the brushes, and fill the tank when empty;
- while working, check the cleaning quality and, when necessary, adjust the flow of the detergent solution by rotating the potentiometer O (§ 6.1, fig. 1);

- stop to adjust, if necessary, the squeegee inclination;

**WARNING**

never leave the machine standing still with the head down and the brushes moving: you could damage the floor.

- when the warning light D (§ 6.1., fig.1) on the control panel begins blinking, the batteries are near to be discharged, and therefore their recharge is necessary, because, in this case, there's no device which stops the complete functioning of the machine;
- when the warning light D (§ 6.1., fig.1) sends sequences of blinkings with pauses of about 2 sec., the floating is closing the vacuuming. It is necessary to empty the recovery tank (§ 5.3.);

After finished work:

- stop the machine and switch on the hand brake;
- press the "brush up" button G (§ 6.1., fig. 1) in the position G2 so to stop and lift the brushes;
- leave the suction motor on for at least two minutes with the tank cover open, to make sure that the suction device is dry;
- press the main switch A (§ 6.1., fig. 1) to switch of the power supply to the machine.

6.6. EXTRACTABLE HEAD - USE

When this accessory is fitted, start the machine and proceed as follows:


- lower the head;
- press the "head side movement" button S (§ 6.1.);
- when working, be careful not to bump hard against the feet of shelves or other furniture to avoid overturning them; the head comes in when it meets obstacles and comes out again automatically when they are passed.
- to guarantee a correct drying by the squeegee, avoid (if possible) sudden turnings on the left.
- to bring inside the head press again the "head side movement" button S.

6.7. RECYCLING SACK ACCESSORY - USE (fig. 4)


The accessory recycling sack allows to extend work to autonomy and to reduce the consumption of detergent recovering, with an opportune filtering, the water intake from the floor and sending it again to the brushes.

To install the accessory, consisting of a frame **A** and of a recycling filter sack **B**, proceed as follows:

- if the diaphragm sack is present in the tank, remove the pump **A** (§ 7.2.7, fig. 7) from the sack and take out the diaphragm sack **B** (§ 7.2.7, fig. 8) from the tank;
- dress the frame **A** with the recycling sack **B**;
- tie the strings **C** to the frame **A** to fasten the sack to the frame;
- put the frame and the sack **D** inside the tank;
- hook the frame in the adapt holds inside the tank;
- put the pump inside the filter.

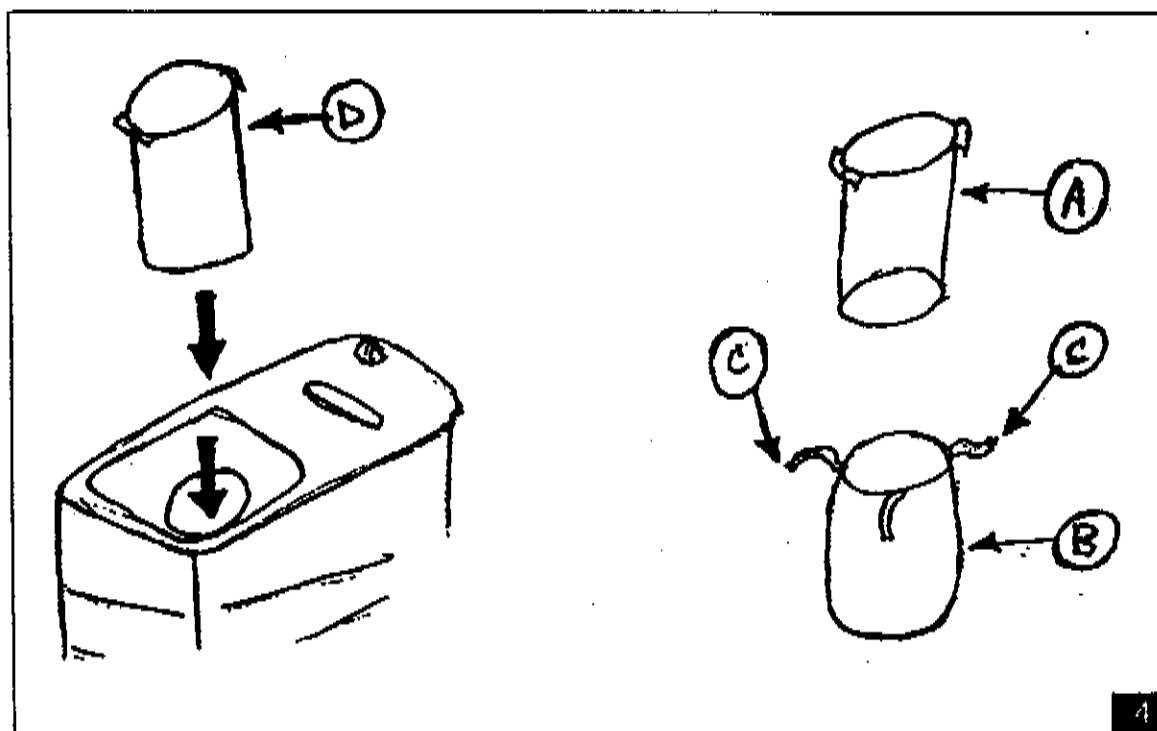

6.8. COMBI ACCESSORY - USE (fig. 5)

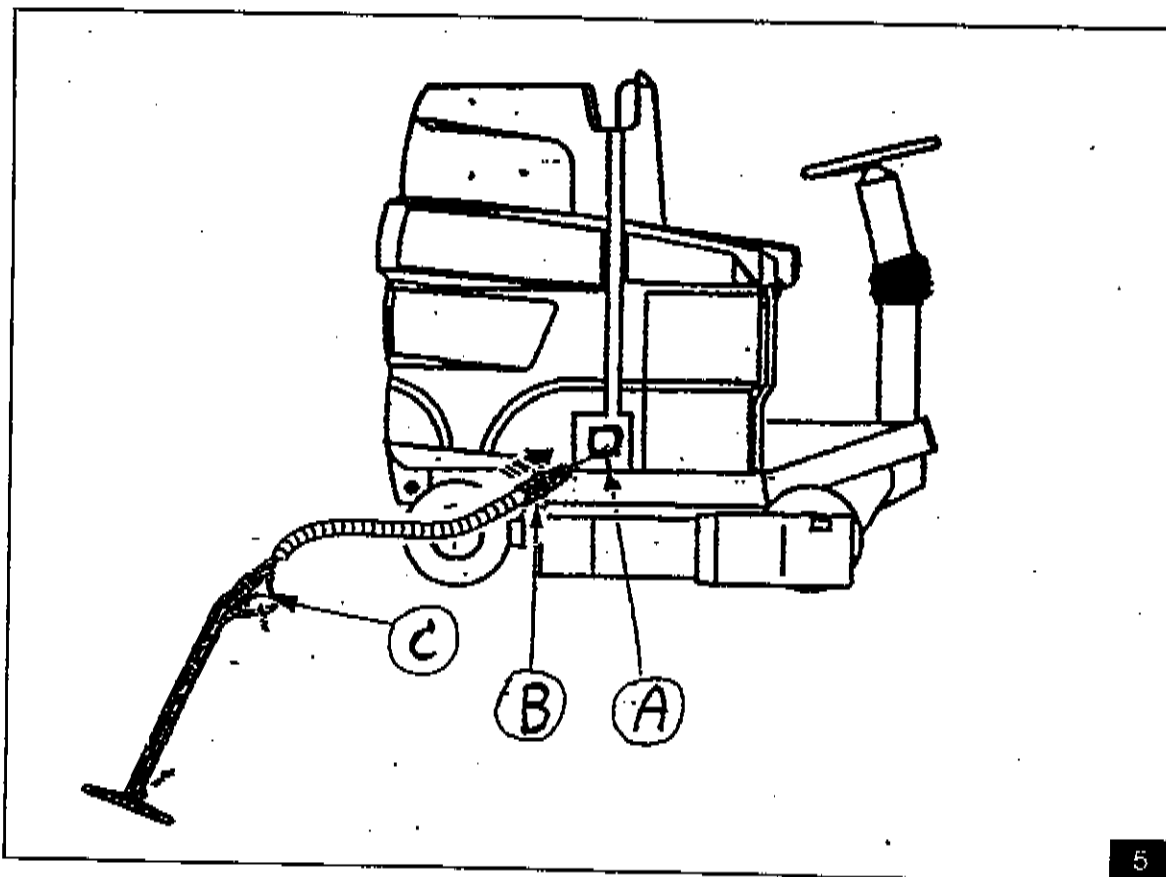

This accessory allows the machine to wash in inaccessible positions such as corners, stairs, cluttered floor areas.

Use the accessory as follows:

- stop the machine and apply the parking brake;
- when brushes are running, push the button G (§ 6.1., fig.1), in the position G2, to turn off the brush motor and lift the head;
- lift the cover A and insert the coupling B as far as possible with the air passage hole facing upwards;
- close the cover A on the coupling B;
- ensure that the diaphragm sack for the solution of water and detergent is not empty;
- push "1" on the accessory Combi X (§ 6.1., fig.1);
- spray on the detergent solution, pulling the lever C and rub the floor with the bristles to remove the dirt;
- suck up the dirty water, sliding the squeegee over the floor and using the part with rubber blades;
- after finishing the cleaning, push "0" on the switch of Combi accessory X (§ 6.1., fig.1)

**WARNING**

Never leave the machine unattended with the pump and/or the suction unit operating.

6.9. SWEEPING HEAD ACCESSORY - USE

The sweeping head accessory is ahead of the front wheel and collects the coarse dirty.


Assemble the accessory as follows:

- place the sweeping head on the front of the machine (fig. 6);
- set in line the hinges A e B set respectively on the frame and on the accessory, as shown on tab. 6.
- fix the accessory to the machine through the pivots C (fig. 6).

To disassemble the sweeping drawer E (fig. 6):

- stop the machine;
- lift the head, if the same is working;
- push "O" on the switch D;
- wait that the brushes are motionless;
- push the emergency button;
- lift the sweeping drawer E using the handle F.


You can adjust the height of brushes on the the floor by adjusting the position of screws G (fig. 6) referred to the button-holes H (fig. 6).

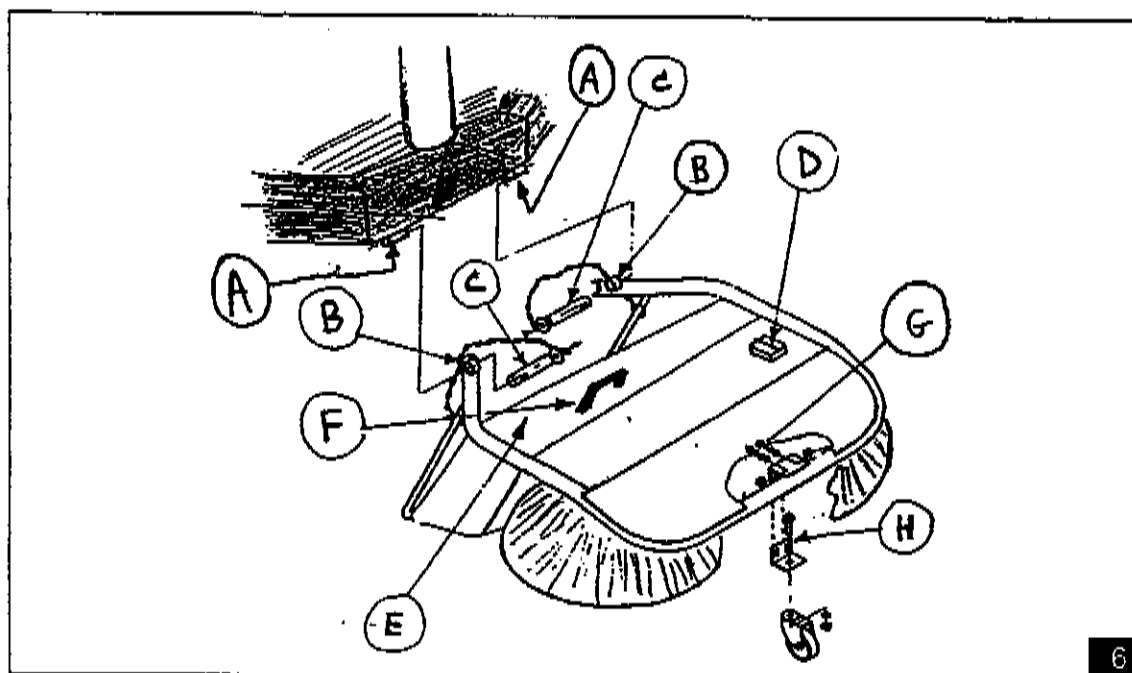

6

6.10. HOURMETER ACCESSORY - USE

The hourmeter accessory **A** (fig. 7) is set on the cover of electrical plates room **B** (fig. 7) and shows the operational hours of brushes.

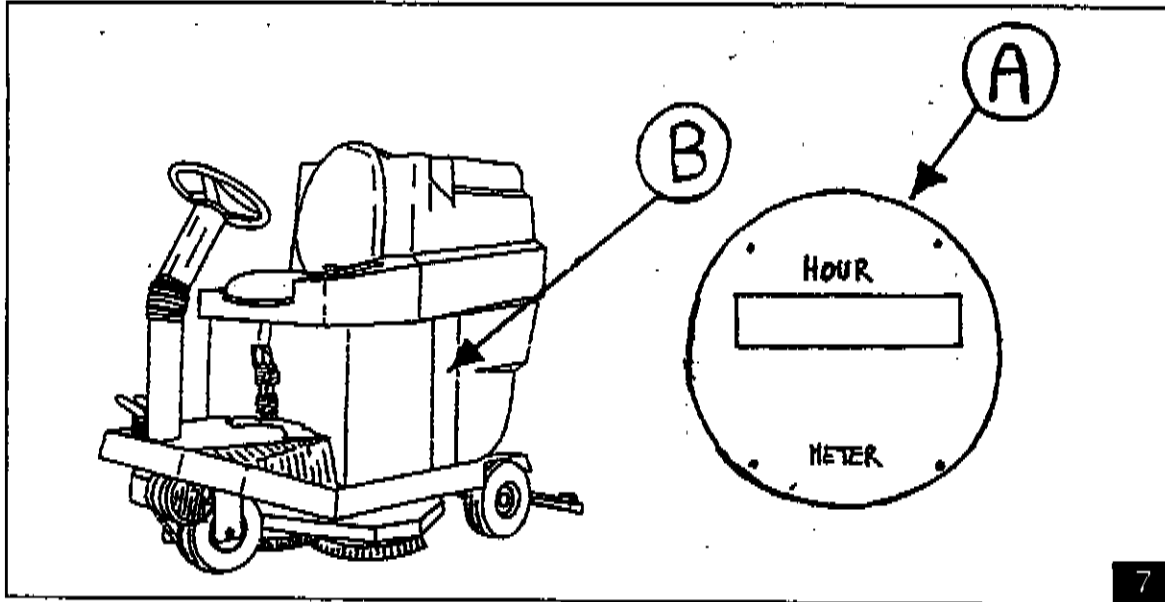

6.11. ADVICE ON OPTIMUM USE OF THE MACHINE

If the floor presents a particularly difficult type of dirt, you are advised to wash and dry it in separate stages:

- start washing with the suction unit off and the squeegee raised, insisting particularly on the dirtiest areas;
- go over the floor a second time, after having lowered the squeegee and switched on suction.

For easy use and maximum performance, we advise following work paths that are as straight as possible, eventually finishing off quickly with a mop or cloth or, better still, with the Combi.

7

MACHINE MAINTENANCE

7.1. MAINTENANCE - GENERAL RULES


Regular maintenance, performed according to the Manufacturer's indications, guarantees better performance and longer machine life.



DANGER

Before carrying out any maintenance job, disconnect the battery connector (A) (fig. 1).

The maintenance operations on the electric system, and all those not explicitly described in this operator's manual, must be performed only by skilled technical personnel, in conformity with the safety regulations in force and with the recommendations in the maintenance manual.

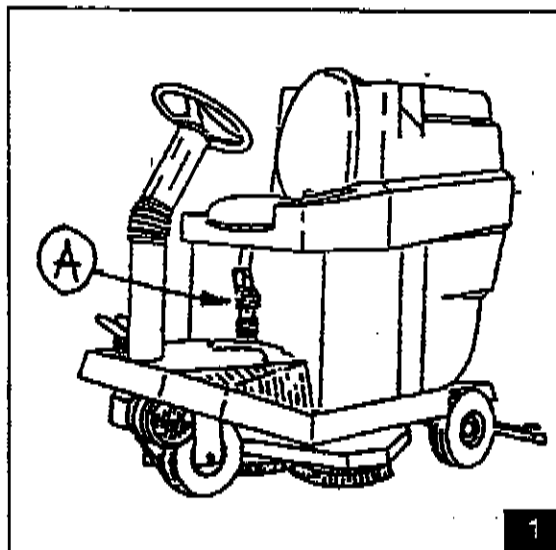

7.2. ROUTINE MAINTENANCE

7.2.1 General cleaning

Clean the machine, avoiding the use of:

- **high-pressure cleaners and jets of water**, which could cause water to get into the electric components, damaging them;
- **steam**, which could cause heat damage to the plastic parts;
- **solvents or hydrocarbons**, which could damage the hoods or the rubber parts.



INFORMATION

Do not use water on the motors or on the electric parts.



Wash periodically (§ 7.3.1) the diaphragm by hand with a brush with soft bristles and water and detergent. The usage of other mechanical (ex. electric brushes, cleaning machines, mechanical brushes) or chemical means (ex. solvents) may damage the sack.

7.2.2 Suction filter - Cleaning (fig. 2)

- Remove the tank cover C.
- Remove the filter D and clean it with water or with the detergent used in the machine.
- Dry it well before replacing it.

**WARNING**

Do not pour liquids or throw objects into the nozzle E; you could damage the suction unit.

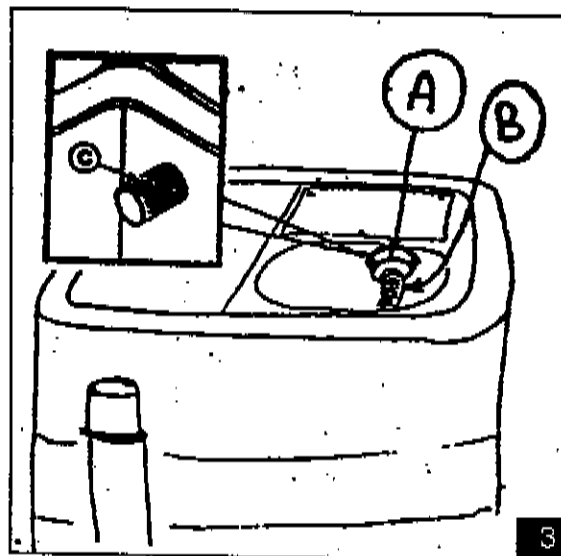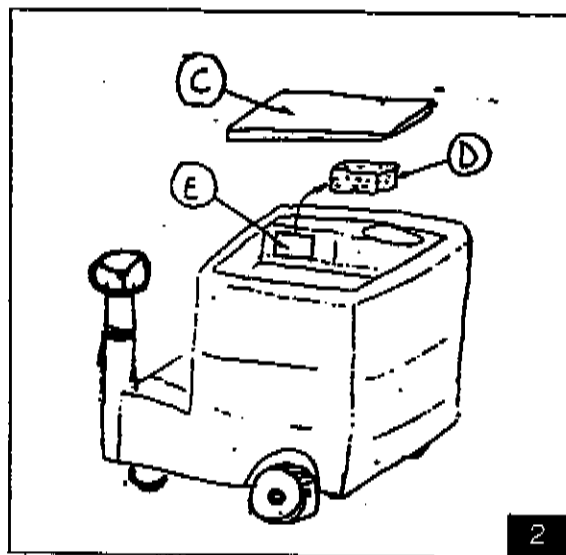**7.2.3 Cleaning liquid input hole - Cleaning (fig. 3)**

- Press the white button A, extract the hose B, clean the input hole C.

7.2.4 Squeegee blades - Replacement (fig. 4)

The squeegee is fitted with two blades (fig. 4, F and H). Both blades are subject to wear and the replacement of them is performed in the following manner:


Exchanging the blades

- Unscrew the knobs C.
- Disconnect the sleeve from the mouth D.
- Remove the squeegee.
- Unscrew the knobs A.
- Extract the bumpers B.
- Release the reinforcing blades E (a/o I) to remove the blades F (a/o H).
- Extract the blade F (a/o H) from the body G.

Squeegee reassembly


- Refit the blade F (a/o H) to the squeegee body G.
- Refit the reinforcing blades E (a/o I).

- Put the bumpers **B** back and fix them with the knobs **A**.
- Insert the squeegee on the support slots and tighten the knobs.
- Finally connect the sleeve to the mouth **D**.

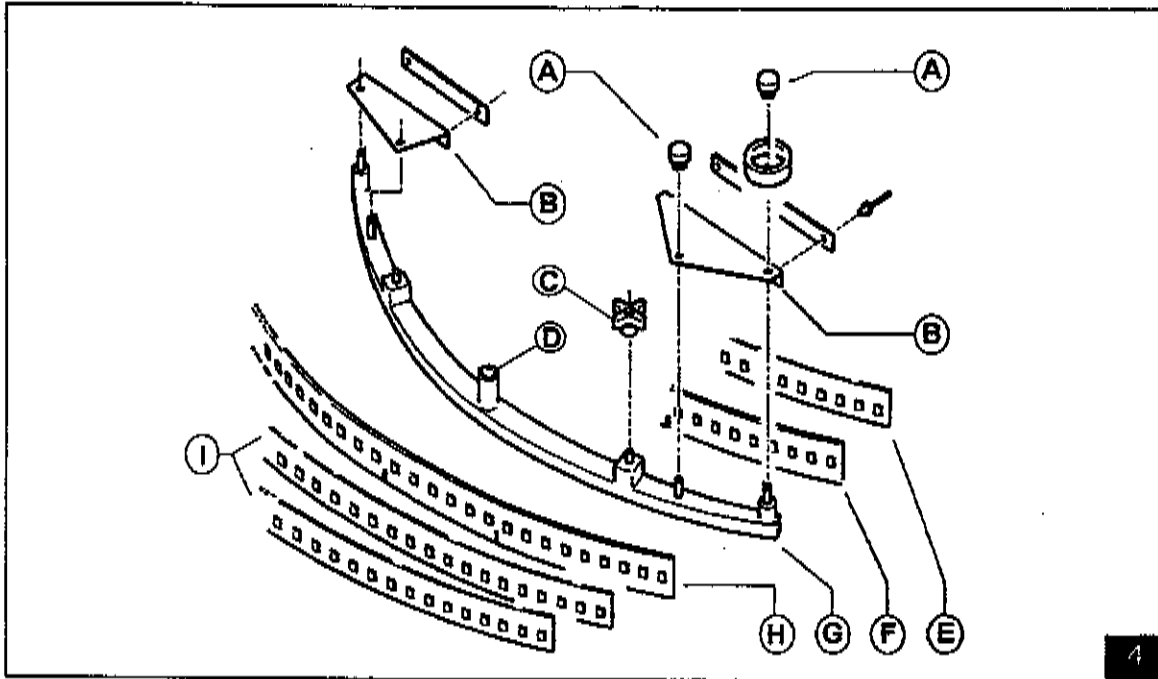

7.2.5 FLAPS - Replacement (fig. 5)

This operation must be performed when the flaps on the head are worn or damaged, proceeding as follows:

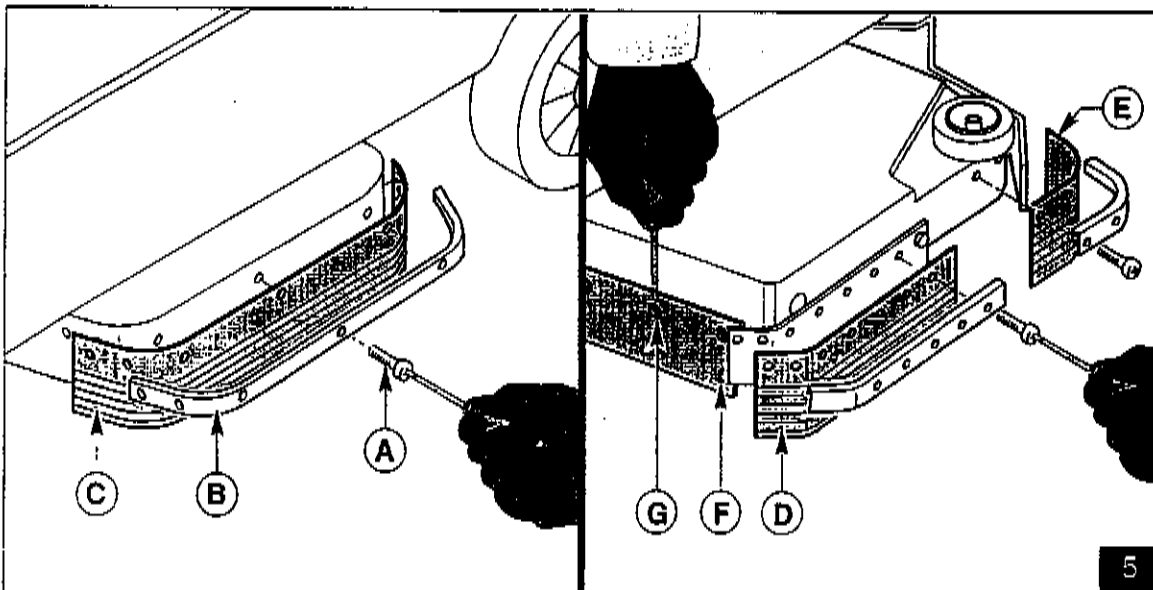

- Unscrew the screws **A**.
- Remove the flap-pressers **B**.



- Change flap **C** and put the flap-presser **B** back in place.
- Bring out the head by pressing the button **S** (§ 6.1.) and press the emergency button.
- Change flap **D** and **E** as described above.
- Change flap **F** after having released the clips **G**.
- Use new clips to fix the flap.

7.2.6 Dirt collecting scraper - Replacement (fig. 6)

The dirt collecting scraper enables the dirt carried along by the brushes to be guided into the collecting box.

If it is damaged, replace it as described below:


- slip out the dirt collecting box **A**.
- replace the damaged scraper with a new one **B** positioning the latter with the wide end **D** towards the machine and the narrow end **C** outwards.

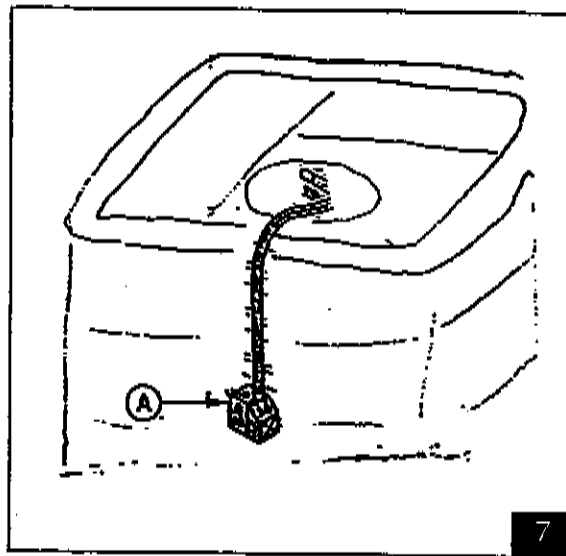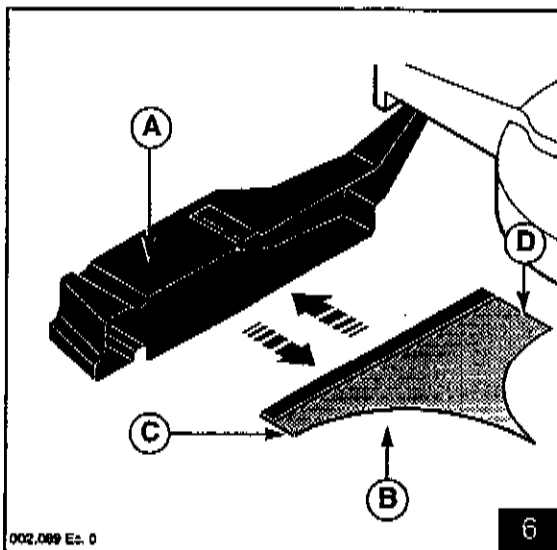

7.2.7 Diaphragm sack - Replacement

In the event of breakage of the diaphragm sack, replace it as follows:

- remove the pump **A** (fig. 7) from the diaphragm sack;
- unhook the frame **C** (fig. 8) and slip out the diaphragm sack **D** (fig. 8);

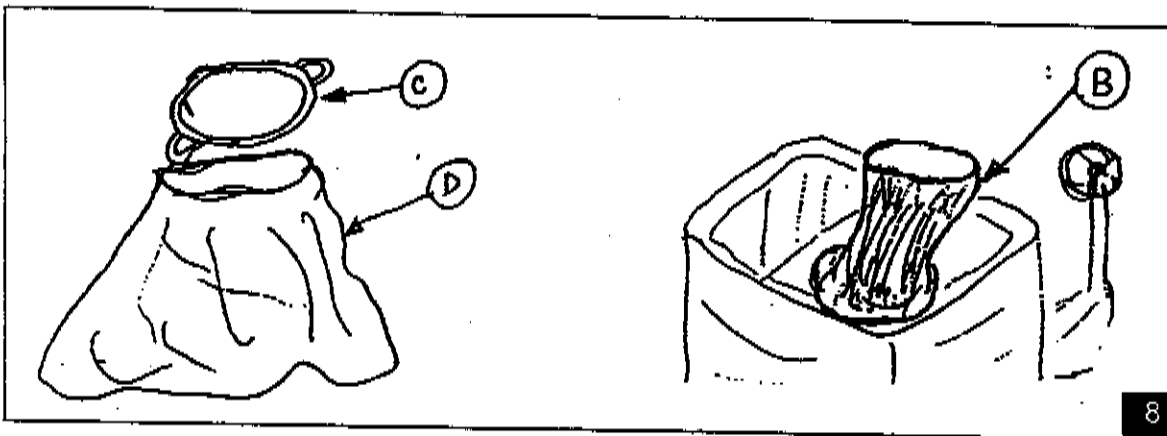

- fit the frame **C** in the new diaphragm sack **D** as in fig. 8 (alternatively, a diaphragm sack with pre-fitted frame is available as spare);
- insert the diaphragm sack, ensuring that it opens up to fill the tank;



WARNING

**Perform this operation accurately!
Otherwise the sack could be irreparably damaged.**

- Hook the frame **C** onto the tank;
- insert the pump in the diaphragm sack, ensuring that it reaches the bottom.

7.2.8 Recycle accessory - Cleaning and replacement


Periodically, when necessary, clean the recycle filter sack, proceeding as follows:

- remove the pump **A** (fig. 7) from the filter sack.
- remove the filter sack **D** (§ 6.7, fig. 4) from the tank and wash it running water.

Whenever the filtering capacity of the filter sack diminishes, proceed to the replacement of the filtering element (§ 6.7).


7.2.9 Float - Cleaning (fig. 9)

- Empty the tank. Remove the tank cover **A**.
- Remove the suction compartment cover **C** and check that the float **B** moves freely.
- If necessary, remove and clean the float.

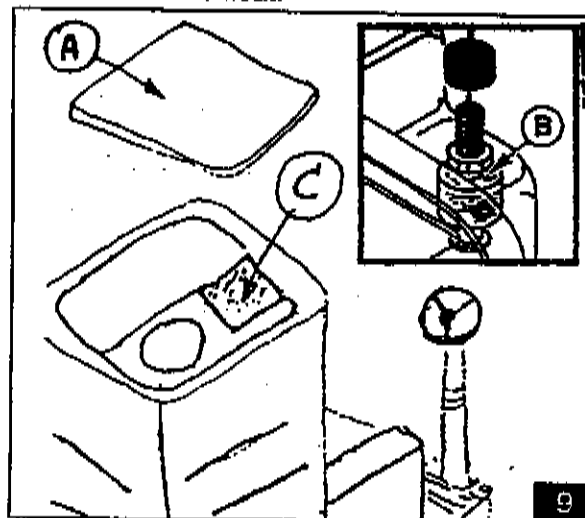

7.2.10 Pump impeller - Cleaning (fig. 10)

- Extract the pump A (fig. 7) from the diaphragm sack.
- Unscrew the screw A and remove the washer B.
- Remove the cover C.
- Extract the filter-impeller unit G from the pump casing F, turning it anticlockwise.
- Clean the impeller E.

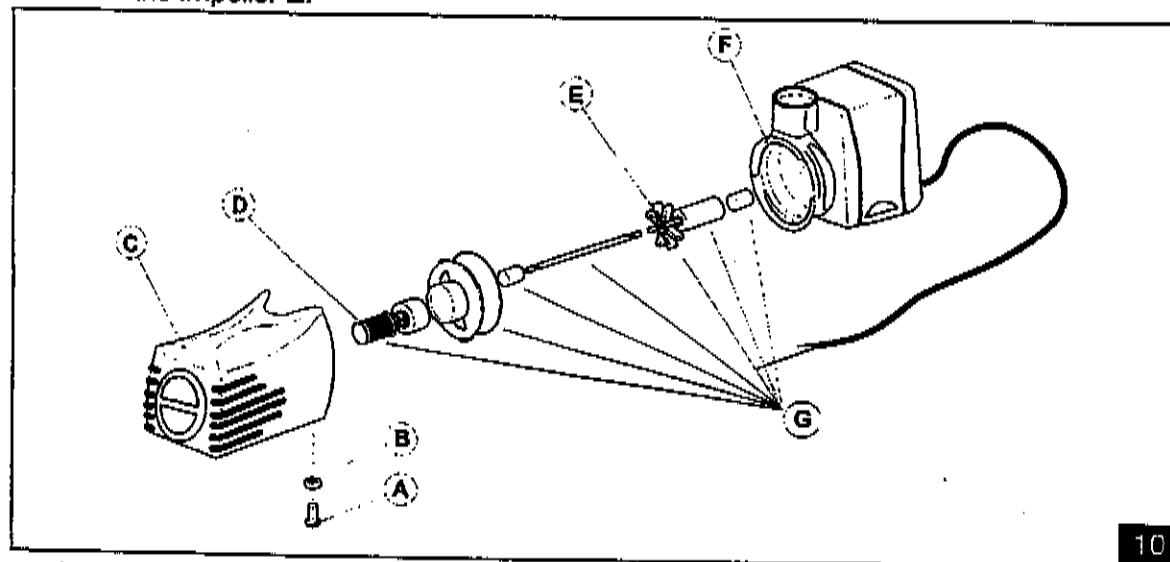

- Clean the filter D.


**WARNING**

Do not spoil the internal surface of the motor winding.

Reassemble, repeating the operations described in inverse order.


7.2.11 Fuses - Replacement (fig. 11)

- Remove the electronic plate compartment cover A.
- Extract, pulling it out, the electric components plate.
- Replace the damaged fuse B (fig. 12).

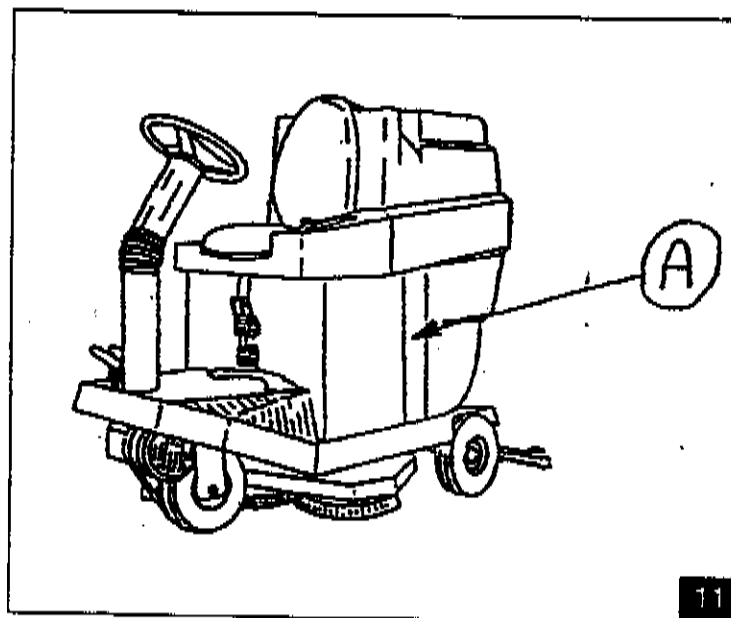

Replacing fuses B (fig. 12).

- Disconnect the connectors A (fig. 1).
- Remove the electric plates compartment A (fig. 11).
- Extract, pulling it out, the electric components plate (fig. 11).
- Replace the fuse B unscrewing the screws C.

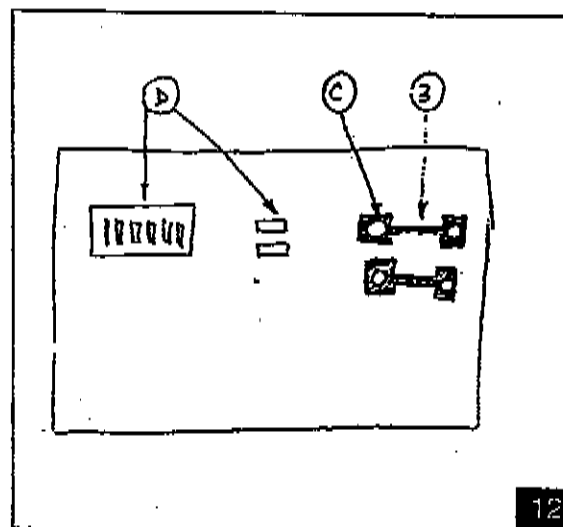

Fuse chart

For the fuse chart, see the Spare Parts Catalogue.

INFORMATION

Never fit a fuse with a higher Amp value than the intended one.

If a fuse keeps burning out once it has been replaced, it is necessary to identify and repair the causes in the machine, the cards, the motors or the electric cables.

7.3. PERIODIC MAINTENANCE

7.3.1 Daily maintenance

Every day, at the end of work, perform the following operations:

- press the emergency button on the control panel to switch off the machine.
- check that the recovery tank is clean;
- check that the inside of the Combi accessory notch is clean, in particular the zone corresponding to the spherical valve.
- check that the dirt collecting box is empty and clean the water drainage holes;
- check that the dirt collecting scraper is not torn or bent;
- clean the suction motor filter and check that it is undamaged and, if necessary, replace it;
- clean the squeegee blades, checking that they are not excessively worn and are not torn;
- recharge the batteries;
- when putting away the machine, engage the hand brake, press down the emergency mushroom button and put the key in a safe place.

7.3.2 Weekly maintenance

- Check the level of the electrolyte in the batteries and top up with distilled water if necessary.
- Check and clean the cleaning liquid input hole.

- Ensure that the squeegee suction hole is not blocked, freeing it from any encrusted dirt.
- Clean the suction hose.
- Clean the float and check that it is working correctly.
- Verify that the pump and the filter positioned inside it are clean.
- Clean the diaphragm.
- Clean the inside of the Combi accessory notch corresponding to the spherical valve, using a small brush or pointed tool.

7.3.3 Six-monthly maintenance

Have the electric system and calibrations checked by skilled personnel.

7.3.4 Preparing for long periods of inactivity

If the machine is to remain unused for a long time, perform the following operations:

- remove the squeegee, wash it and wrap in a bag or a sheet of plastic;
- remove and clean the brushes and the abrasive discs and put them in a dry place, away from dust;
- empty and thoroughly clean the tank and the sack;
- Remove the batteries and fully recharge the batteries before storing them. Recharge them from time to time (at least once every two months) to keep the batteries constantly at maximum charge.



WARNING

**If the batteries are not recharged periodically
there is a risk of irreparable damage.**

**If the batteries are left on the machine, disconnect the battery connector from
the machine.**

8

TROUBLESHOOTING

8.1. HOW TO OVERCOME ANY PROBLEMS

Possible faults affecting the whole machine.

FAULTS	CAUSES	REMEDIES
The machine does not work.	The battery connector is disconnected.	Connect the batteries to the machine.
	The emergency mushroom button is pressed or faulty.	Insert the key, turn and release the button or change it.
	The main fuse has burnt out.	Check and remove the causes for the burning of the fuse, then change it.
Water is leaking from the diaphragm sack into the tank.	The sack is broken.	Change the sack.

Possible faults affecting the washing and sweeping head.

FAULTS	CAUSES	REMEDIES
The brushes do not turn.	The brush motor remote control switch is faulty.	Change the switch.
The head does not go down on command.	The actuator is faulty.	Change it.
	The fuse F3 has burnt out.	Check and remove the causes for the burning of the fuse, then change it.
The machine does not wash evenly.	The brushes or abrasive discs are worn.	Change them.
The machine does not sweep correctly.	The dirt collecting box has not been fitted, or it is full.	Empty the dirt collecting box and put it in place.
	The dirt collecting scraper is deformed, damaged or missing.	Change the dirt collecting scraper.
The brushes keep turning even when the emergency button has been pressed.	The brush remote control switch is faulty.	Disconnect the battery connector and have the remote control switch replaced.

FAULTS	CAUSES	REMEDIES
The solution is not coming out.	The washing head is not working.	Start the washing head.
	The solution tank is empty.	Fill it.
	The detergent solution sleeve is disconnected.	Reconnect the sleeve.
	The built-in no-return valve in the pump does not close correctly.	Check to see if it is clogged, clean it.
	There is an obstruction in the pipes that carry the solution.	Remove the blockage and clean the pipes.
	The pump is faulty.	Repair or change it.
	The pump card is faulty.	Change it.
Water keeps coming to the brushes even when the machine is switched off	False contact on the pump card.	Repair it.
	The breather holes on the detergent solution sleeve are blocked.	Clean the holes.
The head does not come out at the side.	The head side movement accessory has not been installed.	If not fitted in the factory, this accessory may be installed at an authorized service centre.
	The side movement actuator is disconnected or faulty.	Have the actuator and its connection checked.
	The gas spring is faulty	Have the gas spring replaced.
	There is a mechanical fault in the head.	Have it repaired.
After side movement, the head does not come back into central position.	The side movement actuator is disconnected or faulty.	Have the actuator and its connection checked.
	An obstacle is preventing return.	Remove the obstacle
	There is a mechanical fault in the return mechanism.	Have it repaired.

Possible faults affecting drying.

FAULTS	CAUSES	REMEDIES
The suction motor does not work.	The floater in the tank intervened, is blocked by dirt or is faulty.	Check if the tank is full of dirty water (empty it) or opportunistically intervene in the floater.
	The suction motor does not work even if supplied directly with power.	Change the suction motor.
	The suction/pump card is faulty.	Change the F2 fuse or the pump card.
	The F4 fuse of the suction motor is burnt.	Change the fuse.
The squeegee leaves traces of dirty liquid on the floor.	The inclination and/or pressure of the squeegee is not correctly adjusted.	Adjust the squeegee following the specific instructions.
	The edge of the blade in contact with the floor is worn.	Change the blade.
	There is an obstruction or damage in the squeegee or in the pipe.	Remove the obstruction and have the damage repaired.

FAULTS	CAUSES	REMEDIES
The squeegee does not suck up the dirt.	The tank cover and/or the clean water cover are not perfectly closed.	Close the covers, ensuring that there is a pneumatic seal with the tank.
	The recovery tank is full and the suction unit is not working (intervention of the electronic float).	Empty the tank.
	The overflow float is blocked by encrustations and the suction unit is not working.	Remove encrustations.
	There is a blockage in the suction pipe.	Clear the pipe.
	The suction pipe is not connected to the squeegee.	Connect the pipe.
	Voltage is not reaching the suction motor.	Check the fuse and have the motor connections checked.
	Voltage is reaching the suction motor but the motor is not working.	Change the motor.

Possible faults affecting the drive system.

FAULTS	CAUSES	REMEDIES
The machine does not move forward.	The hand brake is engaged.	Release the brake.
	The drive fuse is burnt out.	Identify and remove the cause of the fault and change the fuse.
	The drive motor thermal protection has tripped.	Let it cool for at least half an hour.
	There is fault in the motor or in the control unit.	Have the faulty component identified and replaced.
	The micro switches and/or the potentiometer of the drive motor faulty or incorrectly adjusted.	Change or adjust them.

Possible faults affecting the batteries.

FAULTS	CAUSES	REMEDIES
The accumulator does not ensure the normal work time.	The accumulator poles and terminals are oxidised.	Clean and grease the poles and terminals.
	The electrolyte level is too low.	Add distilled water, topping up each element according to the instructions.
	The batter-charger is not working or insufficient.	See the battery charger instructions.
	Testing with a densimeter reveals considerable differences between the various elements in the same accumulator.	The accumulator has been damaged: change it.
	The machine is being used with too high pressure on the brushes.	Reduce the pressure on the brushes.
The accumulator discharges too fast during use, although it has been recharged according to instructions and when tested, at the end of recharging, with densimeter reveals fully charged.	The accumulator is new and does not give 100% of its expected capacity.	It is necessary to "run in" the accumulator by 20-30 complete charges and discharges to obtain maximum performance.
	The machine is used with maximum capacity for long, continuous periods and the autonomy is not sufficient.	Use, when possible, accumulators with larger capacity or change them after half the job done, with new, already charged ones.
	The electrolyte has evaporated and does not cover the cells completely.	Fill with distilled water, topping up the cells and recharge the accumulator.
The accumulator discharges too fast during use, the recharging with an electronic battery recharger is too fast and after the accumulator shows the correct tension (about 2.14V for each empty element) but reveals discharged when tested with densimeter.	The accumulator, already filled with acid by the manufacturer, has been stored too long before recharged and used the first time.	<p>If the recharging with a normal battery recharger is not efficient enough, a double recharging is needed, consisting of:</p> <ul style="list-style-type: none"> - one slow recharging of ten hours with a current equal to 1/10 of the nominal capacity expressed in 5 hours (for example for a battery of 100Ah(5) the current should be 10A). Use a manual battery recharger; - one hour break; - recharge with a normal recharger.

FAULTS	CAUSES	REMEDIES
After recharging with an electronic recharger the accumulator does not show the correct tension (about 2.14V for an empty element) and reveals discharged when tested with densimeter.	The accumulator has not been connected to the recharger (for example the low tension connector has been wrongly connected to the connector of the machine).	Connect the recharger to the accumulator.
	The recharger and the socket to which it is connected are not compatible.	Verify that the characteristics of the electric supply indicated on the data plate of the recharger are conform with the electric network.
	The recharger is not correctly installed.	Considering the effective tension available, verify that the connections of the primary of the transformer are correct (Consult the recharger's manual for this).
	The recharger does not work.	Verify that the recharger receives tension, that eventual fuses are not burnt and that the accumulator receives current, try also to charge with another rectifier: if the recharge actually does not work, contact a Technical Assistant, leaving the serial number of the recharger.
After recharging with an electronic recharger the accumulator does not show the correct tension (about 2.14V for an empty element) and when tested with a densimeter only one or a few of the elements are discharged.	One or more elements are damaged.	Change, if possible, the damaged elements. The 6V and 12V unicell accumulators must be changed entirely.
The electrolyte inside the accumulator has a turbid colour.	The accumulator has reached maximum amount or charge/discharge recommended by the manufacturer.	Change the accumulator.
	A too high current has been used when recharging the accumulator.	Change the accumulator.
	The accumulator has been discharged under the minimum level recommended by the manufacturer.	Change the accumulator.


WE RESERVE THE RIGHT TO MODIFY SPECIFICATIONS WITHOUT NOTICE OR OBLIGATION



BETCO
1001 Brown Avenue • Toledo, Ohio 43607 • 1-800-777-9343

Ride On Scrubbers

Parts Schematic

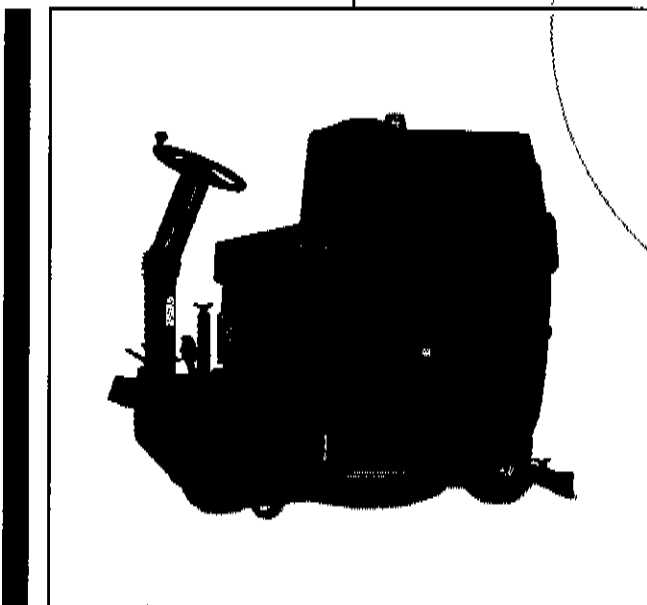

AS30RIDER
AS36RIDER

Item #86004
Item #86005

Better Resources. Better Results.
BETCO®


PF03027BC aa SN from 98L000

This diagram shows an exploded view of a power tool, likely a chainsaw or similar cutting device. The main body is shown with various components numbered 1 through 24. The components include:

- 1: Base plate / Guide bar
- 2: Trigger switch
- 3: Trigger switch guard
- 4: Trigger switch lever
- 5: Trigger switch cable
- 6: Top handle
- 7: Top handle guard
- 8: Top handle lock
- 9: Side handle
- 10: Side handle guard
- 11: Side handle lock
- 12: Side handle cable
- 13: Side handle lever
- 14: Side handle guard
- 15: Side handle lock
- 16: Side handle cable
- 17: Side handle lever
- 18: Side handle guard
- 19: Side handle lock
- 20: Side handle cable
- 21: Side handle lever
- 22: Side handle guard
- 23: Side handle lock
- 24: Side handle cable

REF	CODE	DESCRIPTION	QT
1	PL1045	WHEEL	
2	PL1060	CHASSIS	
3	PL1052	PEDAL BRAKE	
4	PL1051	DRIVE	
5	PL1044	STEERING COLUMN	
6	PL1040	TANK-HYDRAULIC UNIT	
7	PL1041	TANK-ACCESSORIES	
8	PL1017	PUMP	
9	PL1070	SQUEEGEE #5	
10	PL1069	SQUEEGEE LIFT	
11	PL1068	BATTERY CASE	
12	PL1071	HEAD 78: FLAP AND BOX	
13	PL1072	HEAD 78: PULLEY AXLE	
14	PL1073	HEAD 78: MOTOR	
15	PL1059	HEAD EXIT	
16	PL1047	REAR HEAD LIFTING	
17	PL1048	FRONT HEAD LIFTING	
19	PL1060BC	ELECTRIC UNIT 1	
20	PL1061	ELECTRIC UNIT 2	
21	PL1062	ELECTRIC UNIT 3	
22	PL1063	ELECTRIC UNIT 4	
23	PL1053	HAND BRAKE	
24	PL1066	SQUEEGEE PEDAL	
	PL1235	BRUSH # 380	
	PL1278BC	EXTERNAL PARTS	
	WD27126	WIRING DIAGRAM	
	WD27126-1	WIRING DIAGRAM	

PUMP

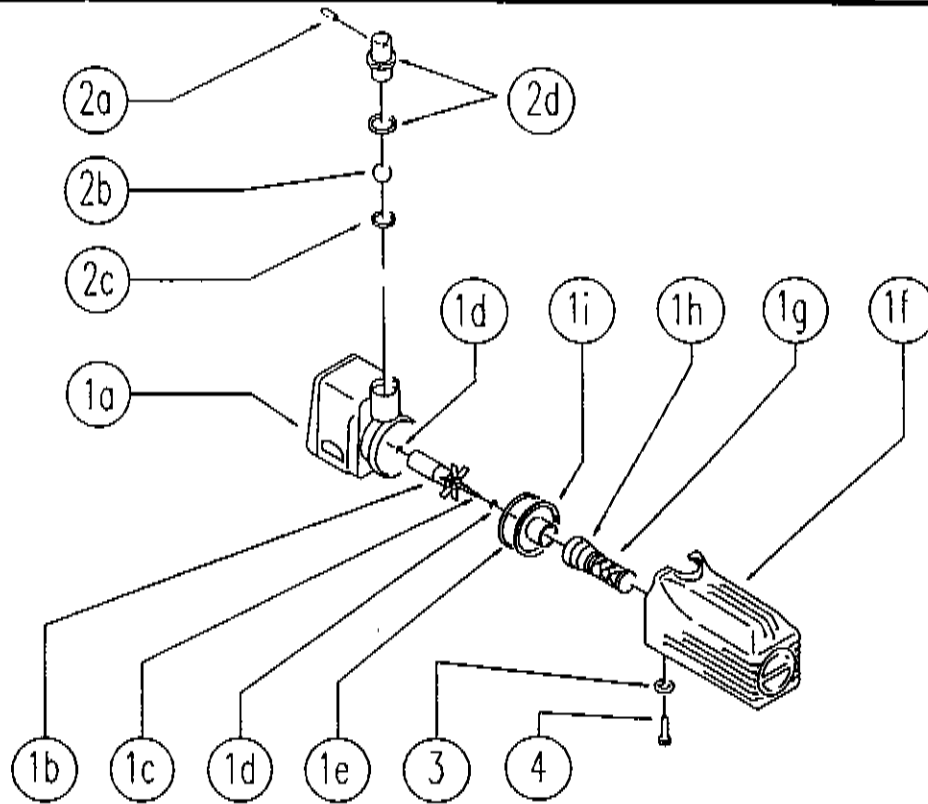


REF.	CODICE	DESCRIPTION	QT
1	SL02125	PUMP	1
18	SL02125-1	BODY	1
19	SL02125-2	ROTOR	1
16	SL02125-5	PIN	1
18	SL02125-4	SUPPORT	2
18	SL02125-3	GASKET	1
17	SL02125-9	HOLDER	1
18	SL18019	FILTER	1
18	SL18333	UNION / CONNECTOR	1
18	SL02125-7	CATCH / LOCK	1
28	SL11107	PIN / PLUG	1
28	SL14152	SPHERE / BALL	1
28	SL03188	GASKET	1
28	SL18250	NOZZLE	1
3	SL08032	WASHER	1
4	SL04325	SCREW	1

DESCRIPTION:

CODE:

pl1040 ab SN from 98L000

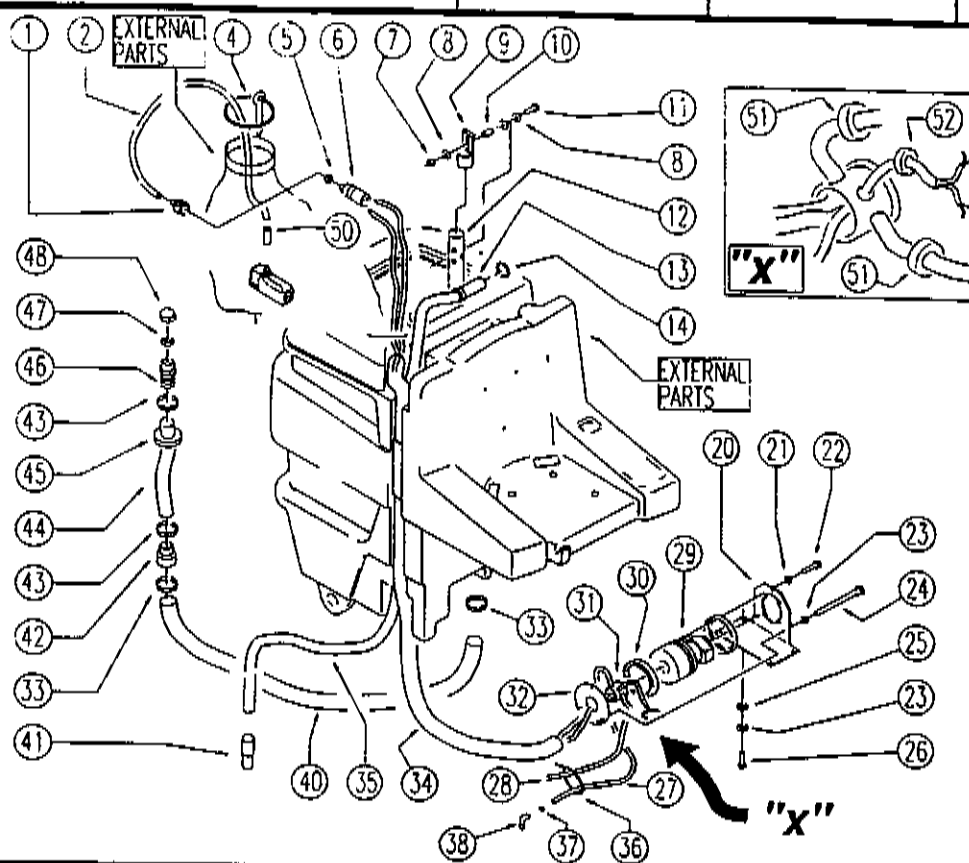


REF.	CODE	DESCRIPTION	QT			
1	SL17364	COUPLING / CLUTCH	1			
2	SL19219	HOSE	1			
3	ALD4714	DIAPHRAGM BAG	1			
4	SL09680	FRAME	1			
5	SL03208	GASKET	1			
6	SL17324	COUPLING / CLUTCH	1			
7	SL05039	NUT	1			
8	SL06041	WASHER	2			
9	SL09758	SUPPORT	1			
10	SL07112	SPACER	1			
11	SLD4127	SCREW	1			
12	SL07319	HOSE	1			
13	SL17362	SLEEVE	1			
14	SL03201	GASKET	1			
20	SL09684	SUPPORT	1			
21	SL06004	WASHER	4			
22	SL04223	SCREW	4			
23	SL06001	WASHER	7			
24	SLD4247	SCREW	3			
25	SL06004	WASHER	4			
26	SLD4010	SCREW	4			
27	SL18256	HOSE	1			
28	SL18257	HOSE	1			
29	MP02303-C	ASPIRATOR	1			
30	SL03159	GASKET	2			
31	SL07398	CONNECTOR	1			
32	SL09685	FLANGE	1			
33	SL14214	CLAMP	2			
34	SL19216	HOSE	1			
35	SL18253	HOSE	1			
36	SL14020	CLAMP	2			
37	SL14109	CLAMP	2			
38	SL18232	CONNECTOR	2			
40	SL19208	HOSE	1			
41	SL14003	SLEEVE	1			
42	SL07285	CONNECTOR	1			
43	SL14079	CLAMP	2			
44	SL18215	SHEATH	1			
45	SL07286	ADAPTOR	1			
46	SL18362	HOSE HOLDER	1			
47	SL03489	GASKET	1			
48	SL18363	CAP	1			
50	MP19140	SHEATH	1			
51	SL23116	FAIRLEAD	2			
52	SL23044	FAIRLEAD	1			

CODE:

pi1041 aa SN from 96D673

DESCRIPTION:

TANK-ACCESSORIES

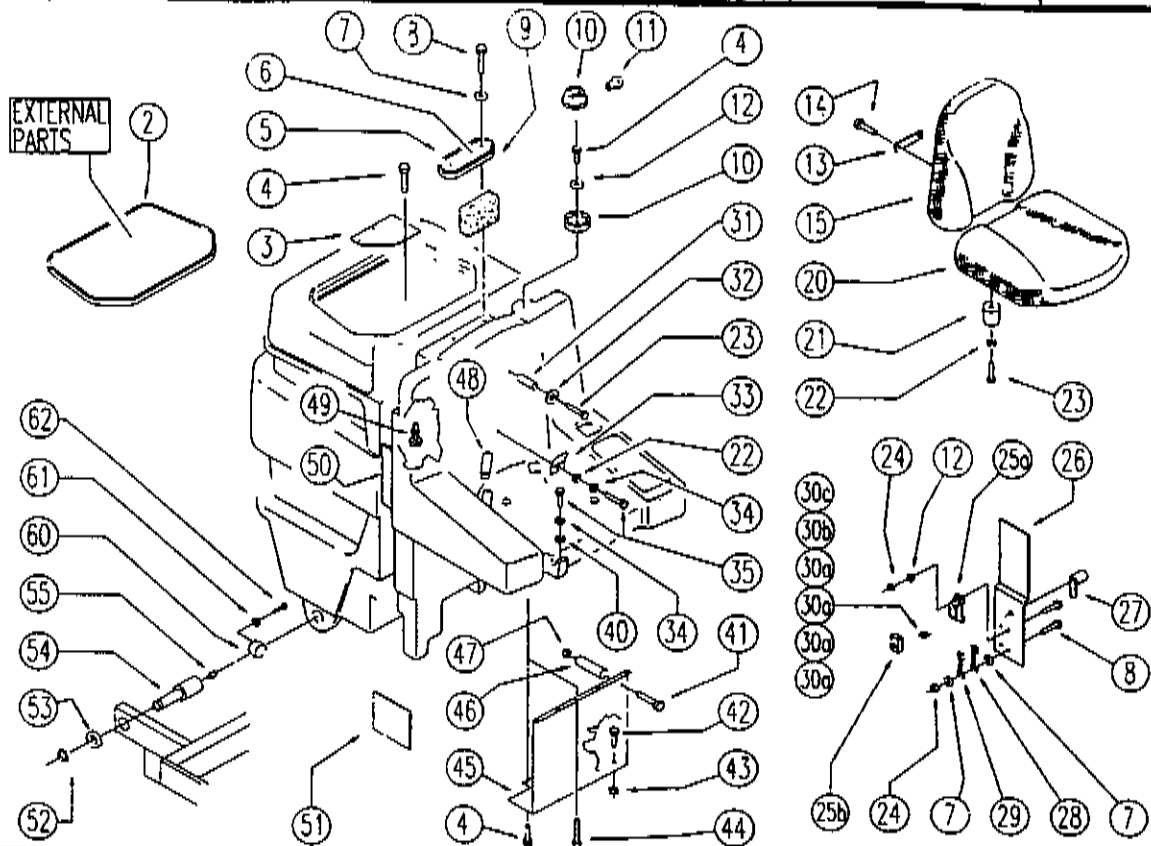


REF.	CODE	DESCRIPTION	QT
2	SL03274	GASKET	1
3	SL17363	LID	1
4	SL04173	GASKET	11
5	SL03275	SCREW	1
6	SL17379	LID	1
7	SL06031	WASHER	5
8	SL04068	SCREW	6
9	SL03241	FILTER	1
10	SL23464	FLASH LIGHT (N.)	1
11	SL23464-2	LAMP	1
12	SL06034	WASHER	3
13	SL09705	PLATE	1
14	SL04266	SCREW	1
15	SL14191-PL	SEAT BACK	1
20	SL14190-PL	SEAT	1
21	SL03103	PLUG / STOPPER	4
22	SL06004	WASHER	4
23	SL04006	SCREW	6
24	SL05012	NUT	4
25a	SL23884-1	FUSE HOLDERS	1
25b	SL23883-2	LID	1
26	SL09901	LID	1
27	SL20045	CATCH / LOCK	1
28	SL23889	FUSE	1
29	SL23606	FUSE	1
30a	SL23144	FUSE	4
30b	SL23147	FUSE	1
30c	SL23145	FUSE	1
31	SL07293	SPACER	2
32	SL06015	WASHER	2
33	SL09540	PLATE	1
34	SL06001	WASHER	1
35	SL04180	SCREW	2
40	SL06015	WASHER	1
41	SL04196	SCREW	1
42	SL04262	SCREW	1
43	SL05039	NUT	1
44	SL04223	SCREW	5
45	SL09594	PLATE	1
46	SL07337	SPACER	1
47	SL05011	NUT	1
48	SL14199	TERMINAL	2
49	SL23788	FLOAT	2
50	SL17395	REINFORCEMENT	1
51	SL17495	PANEL	1
52	SL11108	RING	2
53	SL06080	WASHER	2
54	SL07301	PIN	2
55	SL07150	BUSHING	2
60	SL07306	SUPPORT	2
61	SL06003	WASHER	1
62	SL04083	SCREW	1

pl1044 aa SN from 96D673

REF.	CODE	DESCRIPTION	QTY
1	SL14194	CAP	1
2	SL05037	NUT	1
3	SLD6029	WASHER	1
4	SL14195	STEERING WHEEL	1
5	SL14211	HANDLE	1
6	SL07269	CAP	1
7	SL07280	SHAFT	1
8	SL11010	KEY	1
10	SL12037	BEARING	3
11	SL07062	SPACER	2
12	SL04023	SCREW	2
13	SLD6003	WASHER	7
14	SL05001	NUT	2
15	SL03230	PROTECTIVE COVER	1
16	SLD6002	WASHER	4
17	SL04159	SCREW	4
18	SLD6006	WASHER	1
20	SL11026	TONGUE	1
21	SL10056	PINION	1
22	SL11048	GRAIN	1
23	SL11094	RING	2
24	SLD6074	WASHER	2
25	SL20044	LEVER	1
27	SL07259	SHAFT	1
28	SL07270	BLOCK / LOCK	1
30	SL12023	JOINT	1
31	SL25559	LABEL	1

pl1045 aa SN from 98D84

WHEEL

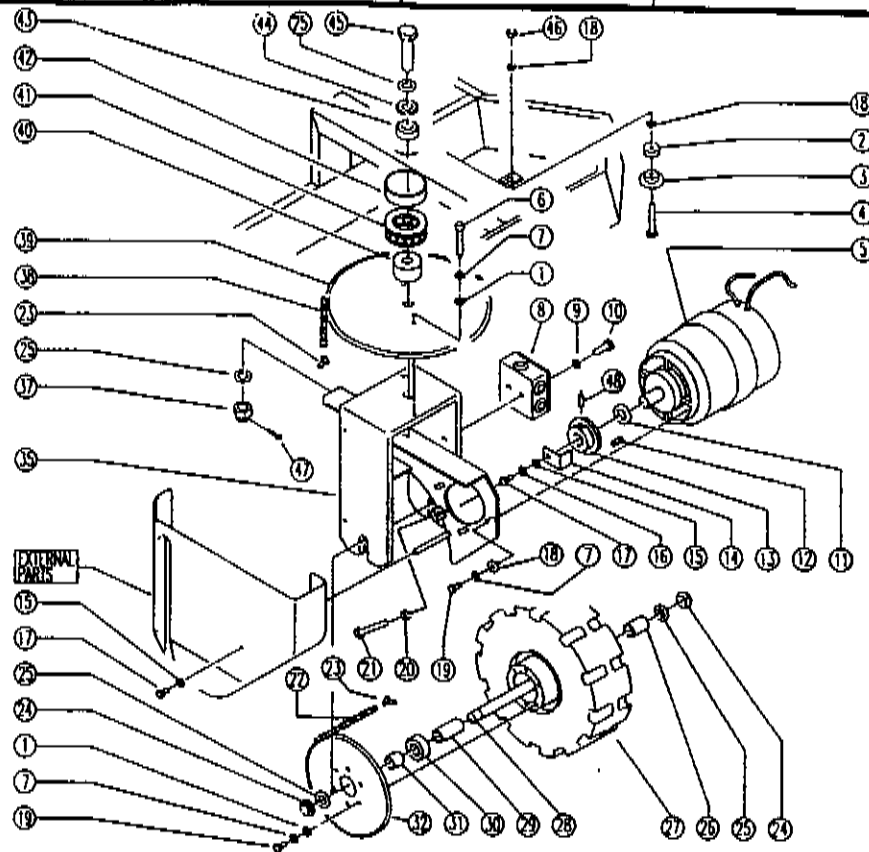


REF.	CODE	DESCRIPTION	QT
1	SLO6003	WASHER	14
2	SL07451	SPACER	1
3	SL10067	CHAIN TIGHTENER	1
4	SL04164	SCREW	1
5	SLD2112	GEARMOTOR	1
6	SL04192	SCREW	2
7	SL06002	WASHER	12
8	SL23488	ELECT. HOUSING	1
9	SL06019	WASHER	2
10	SL04079	SCREW	2
11	SL08066	WASHER	1
12	SL11010	TONGUE	1
13	SL10054	PINION	1
14	SL09706	PLATE	1
15	SL06004	WASHER	4
16	SL06001	WASHER	1
17	SLD4190	SCREW	3
18	SL06017	WASHER	5
19	SLD4023	SCREW	10
20	SL05004	NUT	1
21	SLD4186	SCREW	1
22	SL18023	CHAIN	1
23	SL16027	GRID	2
24	SL05062	NUT	2
26	SL06027	WASHER	4
26	SLD7265	SPACER	1
27	SL08031	WHEEL	1
29	SLD7263	PIN	1
29	SLD7268	SPACER	1
30	SL12038	BEARING	1
31	SLD7267	SPACER	1
32	SL10055	CROWN	1
35	SLD9687	FORK	1
37	SL05079	NUT	1
38	SL16028	CHAIN	1
39	SL10034	CROWN	1
40	SLD7096	SPACER	1
41	SL12014	BEARING	1
42	SLD3461	GUARD	1
43	SL12015	BEARING	1
44	SL12021	RING	1
45	SLD7450	SCREW	1
46	SL05001	NUT	1
47	SL11121	SPLIT PIN	1
48	SL11048	SPLIT PIN	1
	SLD7258	MOTOR DRUM	1

CODE:

DESCRIPTION:

REAR HEAD LIFT

pl1047 ab SN from 97F757

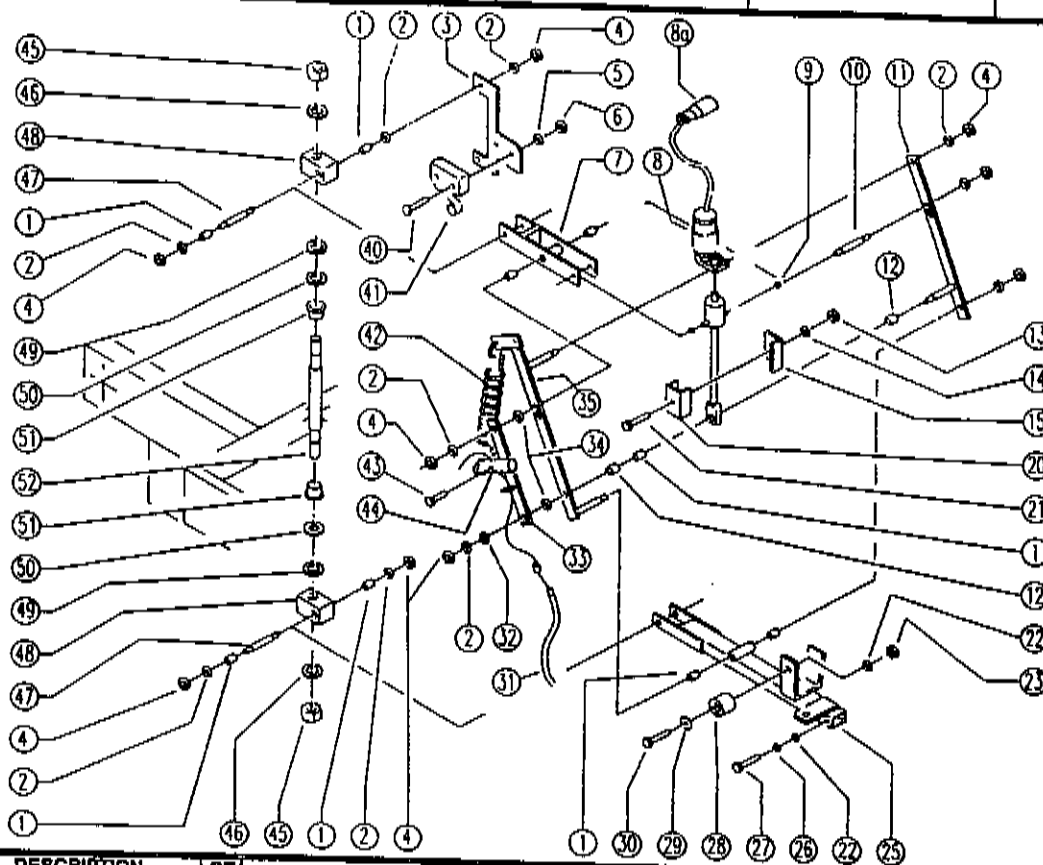

REF.	CODE	DESCRIPTION	QT
1	SL12036	BEARING	9
2	SL06003	WASHER	10
3	SL09852	SUPPORT	1
4	SL05039	NUT	10
5	SL06019	WASHER	2
6	SL05034	NUT	2
7	SL09820	LEVER	1
8	SL02111-1	ACTUATOR	1
8a	SL23971	WIRING UNIT	1
9	SL12040	BEARING	2
10	SL07312	PIN	1
11	SL09736	LEVER	1
12	SL07297	SPACER	2
13	SL06007	NUT	1
14	SL06016	WASHER	1
15	SL09734	SUPPORT	1
20	SL09743	SPACER	1
21	SL04013	SCREW	1
22	SL06004	WASHER	3
23	SL05058	NUT	1
25	SL09819	LEVER	1
26	SL06001	WASHER	2
27	SL04048	SCREW	2
28	SL03103	CAP	1
29	SL06039	WASHER	1
30	SL04073	SCREW	1
31	SL14225	CABLE	1
32	SL06054	WASHER	1
33	SL09749	PLATE	1
34	SL06062	WASHER	2
35	SL09735	PLATE	1
40	SL04107	SCREW	2
41	SL23200	MICROSWITCH	1
42	SL13078	SPRING	2
43	SL04180	SCREW	1
44	SL07314	PIN	1
45	SL05037	NUT	2
46	SL06029	WASHER	2
47	SL07272	PIN	2
48	SL07274	BLOCK / LOCK	2
49	SL06027	WASHER	2
50	SL06074	WASHER	2
51	SL12037	BUSHING	2
52	SL07273	PIN	1


pl1048 aa SN from 96D673

This diagram shows an exploded view of a mechanical assembly. The components are numbered 1 through 14. The assembly includes a base plate (1) with a central vertical post (2). A cylindrical component (3) is mounted on the post, with a cap (4) and a seal (5) on top. A long, thin rod (6) passes through the center. The base plate has several mounting holes (7, 8, 9, 10) and a central slot (11). A small rectangular component (12) is mounted on the post, with a wire (13) connected to it. A small circular component (14) is also shown near the base.

REF	CODE	DESCRIPTION	QT
1	SL20004	HANDLE	2
2	SL06081	WASHER	1
3	SL14300	CAP	2
4	SL04287	BAR	2
5	SL09746	STRUCTURAL	1
6	SL25903	ADHESIVE LABEL	1
7	SL04019	SCREW	2
8	SL04023	SCREW	1
9	SL06002	WASHER	2
10	SL06003	WASHER	1
11	SL07318	INDICATOR	1
12	SL09747	PLATE	1
13	SL05001	NUT	1
14	SL05004	NUT	2


pl1050 aa SN from 97F757

FRAME

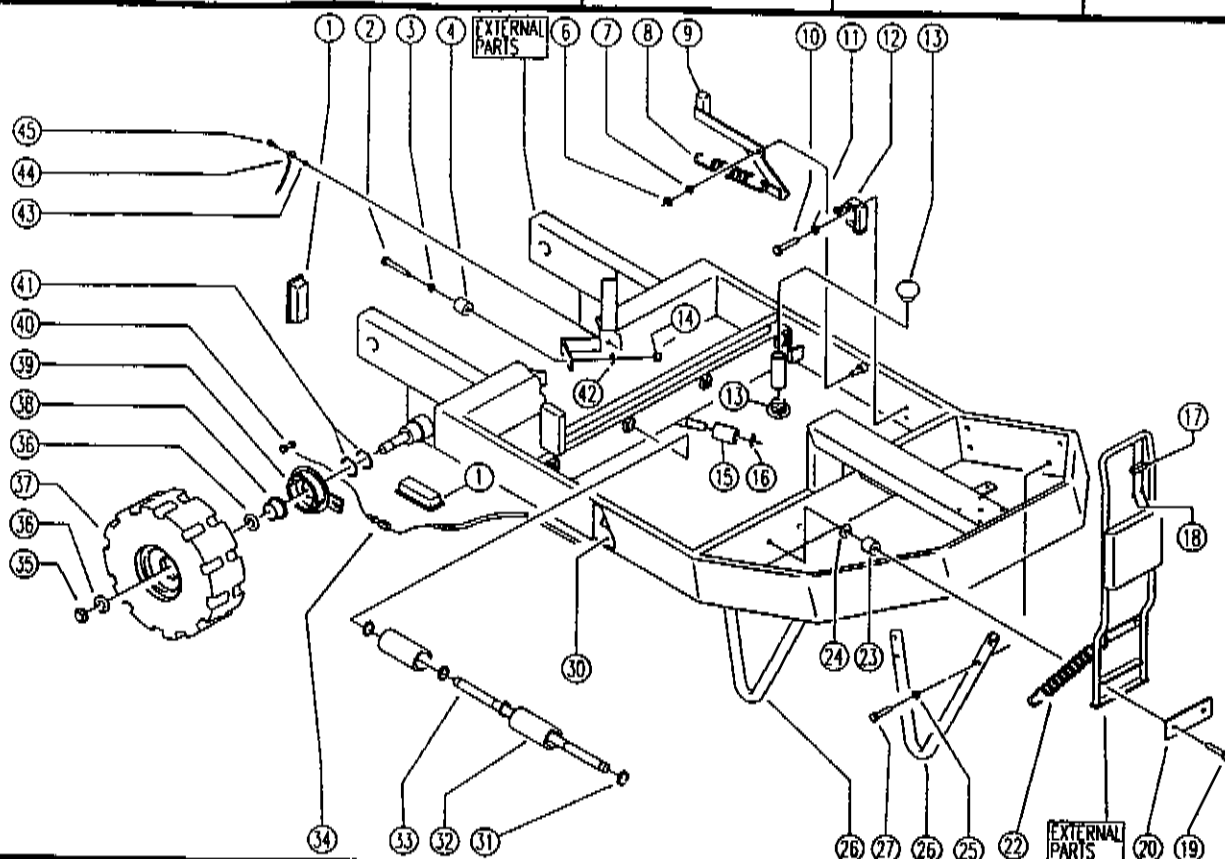

REF.	CODE	DESCRIPTION	QT
1	SL14188	TERMINAL	4
2	SL04073	SCREW	2
3	SL06039	WASHER	2
4	SLD3103	PLUG / STOPPER	2
6	SL05001	NUT	1
7	SL06003	WASHER	1
8	SL13011	SPRING	1
9	SL09098	LEVER	1
10	SL04107	SCREW	2
11	SL06018	WASHER	2
12	SL23200	MICROSWITCH	1
13	SL14217	PLUG	6
14	SLD8011	NUT	2
15	SLD7328	ROLLER	1
16	SL11067	SEEGER	1
17	SLD7336	CONNECTION	1
18	SL04231	SCREW	2
19	SL04198	SCREW	2
20	SL09529	PLATE	1
22	SL13013	SPRING	2
23	SL07067	SPACER	2
24	SL06071	WASHER	2
25	SL06002	WASHER	8
26	SL06789	HOSE	2
27	SLD4264	SCREW	8
28	SL06026	WASHER	1
29	SL04143	SCREW	1
30	SL25602	LABEL	1
31	SL11100	SEEGER	16
32	SLD7351	ROLLER	8
33	SL07300	PIN	4
34	SL14222	REGISTER	2
35	SL05052	NUT	2
36	SLD6027	WASHER	4
37	SL08030	WHEEL	2
38	SL07275	BUSHING	2
39	SL14192	BLOCK	2
40	SL14031	CLAMP	2
41	SL06075	WASHER	4
42	SL06004	WASHER	2
43	SL06083	WASHER	1
44	SL23893	CABLE	1
45	SL04010	SCREW	


DESCRIPTION:	HAND BRAKE
--------------	------------

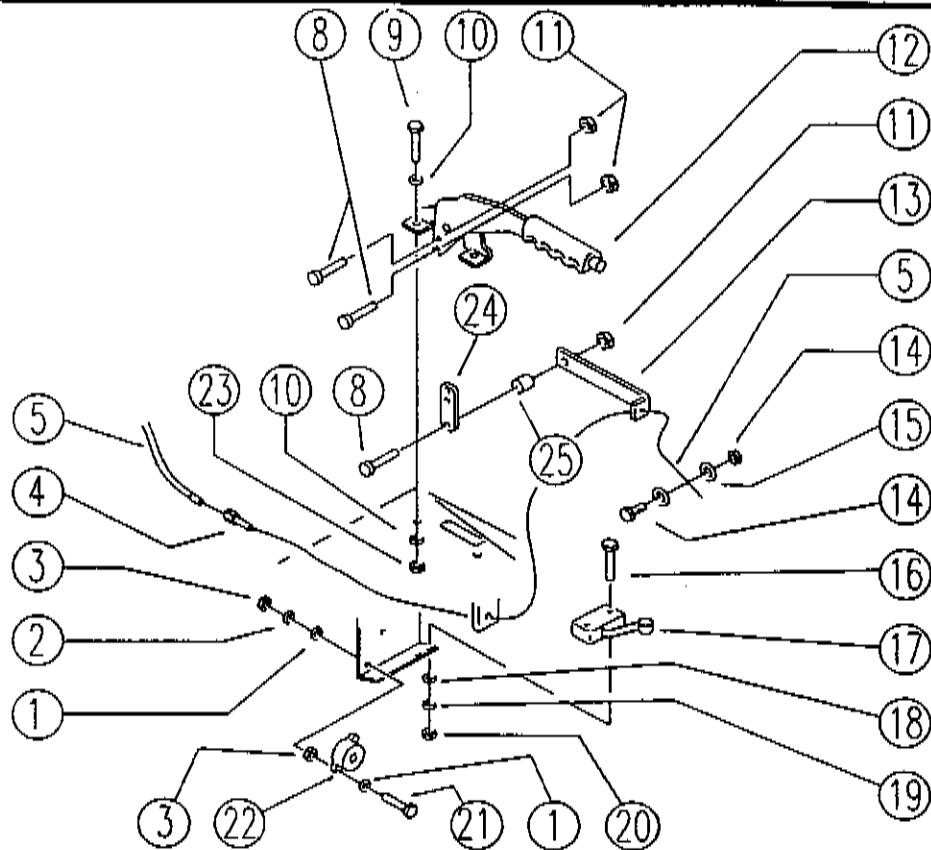

REF. CODE	DESCRIPTION	QT
1) SL08006	WASHER	4
2) SL08024	WASHER	2
3) SL05009	NUT	4
4) SL14222	REGISTER	1
5) SL14210	CABLE	1
6) SL04023	SCREW	3
9) SL04048	SCREW	2
10) SL08004	WASHER	4
11) SL08001	NUT	3
12) SL20042	LEVER	1
13) SL09731	SMALL BRACKET	1
14) SL14212	CLAMP	1
15) SL08011	WASHER	2
16) SL04197	SCREW	2
17) SL23206	MICROSWITCH	1
18) SL08019	WASHER	2
19) SL08033	WASHER	2
20) SL05012	NUT	2
21) SL04016	SCREW	2
22) SL23384	INDICATOR	1
23) SL05011	NUT	2
24) SL09722	BLOCK / LOCK	1
25) SL07062	SCREW	1

pl1058 aa SN from 96D673

BOX

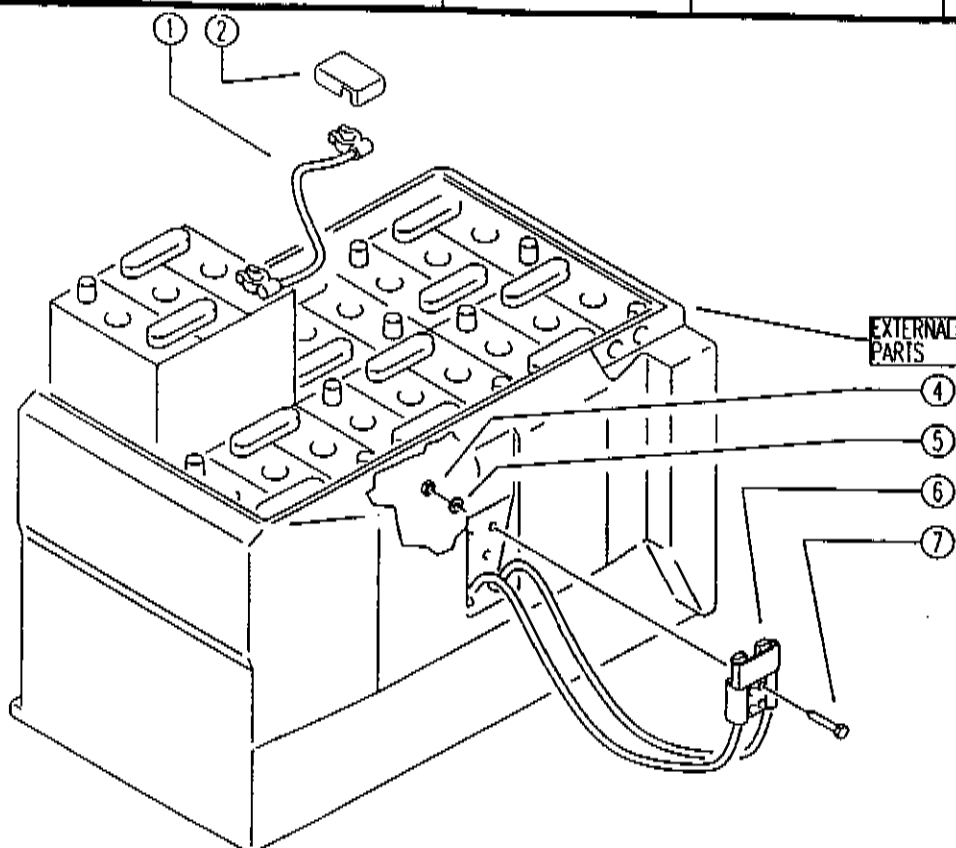


REF	CODE	DESCRIPTION	QT
1	SLE23940	BRIDGE / JUMPER	5
2	SLE23068	LID	12
4	SLE06011	NUT	4
6	SLE06004	WASHER	4
6	SLE23926	WIRING	1
7	SLE04009	SCREW	4

CODE:

p11059 aa SN from 96D673


DESCRIPTION:

HEAD EXIT

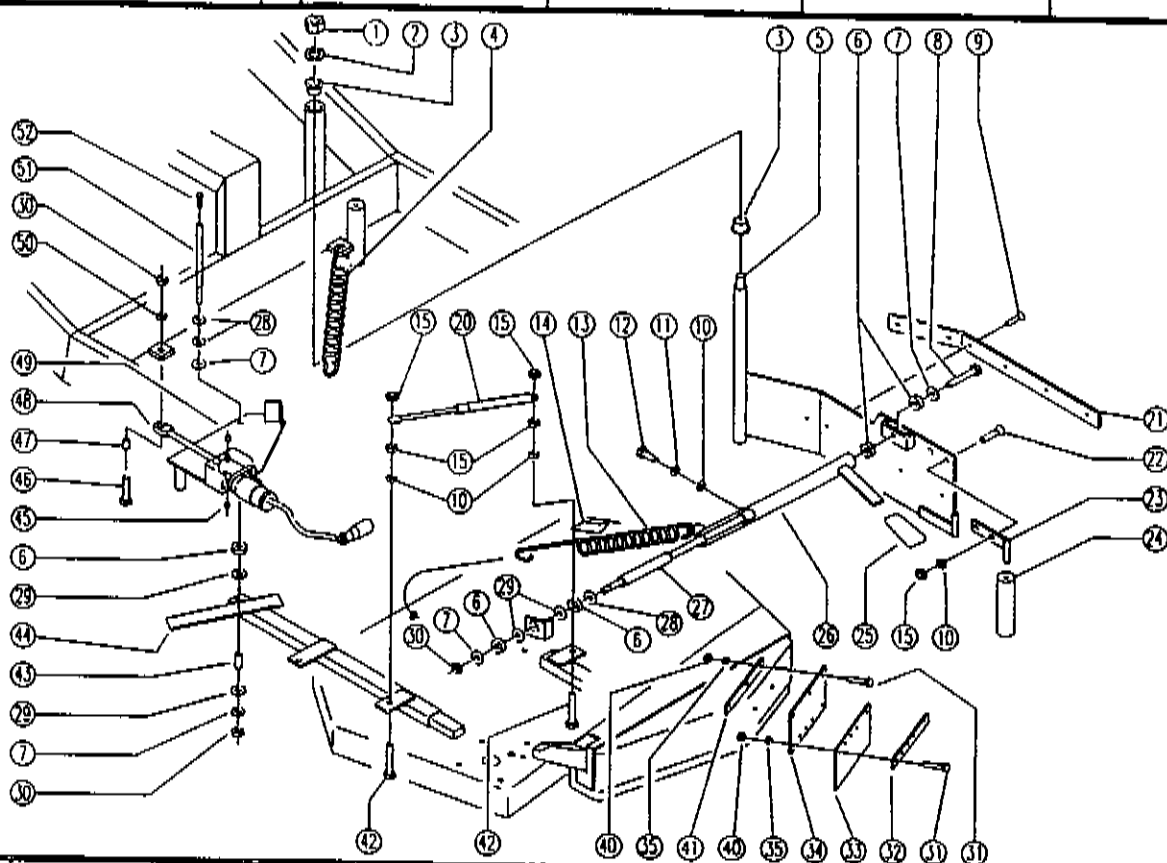

REF.	CODE	DESCRIPTION	QT
1	SL06032	NUT	1
2	SL06029	WASHER	1
3	SL12037	BEARING	2
4	SL13028	SPRING	1
5	SL06892	BUMPER	1
6	SL03209	RUBBER	1
7	SL06017	WASHER	8
8	SL04188	SCREW	4
9	SL04231	SCREW	1
10	SL06004	WASHER	6
11	SL06001	WASHER	7
12	SL04010	SCREW	1
13	SL13082	SPRING	1
14	SL25604	LABEL	1
15	SL05011	NUT	1
20	SL13068	SPRING	8
21	SL17378	STRIP / BAND	1
22	SL04259	SCREW	1
23	SL09707	PLATE	4
24	SL07295	ROLLER	2
25	SL20021	HANDLE	1
26	SL09525	LEVER	1
27	SL09524	LEVER	1
28	SL06011	WASHER	1
29	SL06062	WASHER	3
30	SL05001	NUT	4
31	SL04189	SCREW	3
32	SL17394	STRIP / BAND	8
33	SL03265	FLAP	1
34	SL09708	SUPPORT	1
35	SL06031	WASHER	1
40	SL05034	NUT	8
41	SL09710	PLATE	1
42	SL04073	SCREW	1
43	SL07232	SPACER	2
44	SL09517	LEVER	1
45	SL12040	BEARING	1
46	SL04127	SCREW	2
47	SL07082	SPACER	1
48	SL02111-1	ACTUATOR	1
49	SL09518	CRANK	1
50	SL06003	WASHER	1
51	SL07276	PIN	1
52	SL04101	SCREW	1



DESCRIPTION:	ELECTRIC UNIT 1
--------------	-----------------

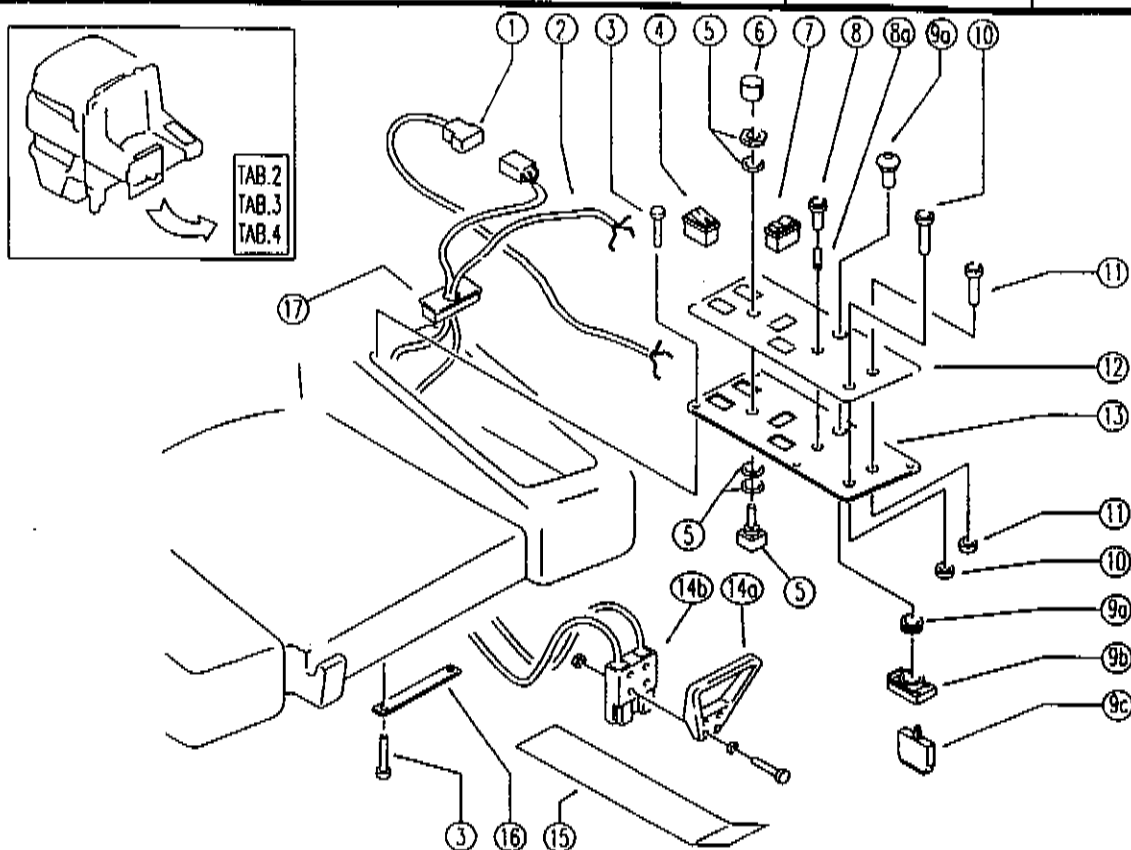

REF.	CODE	DESCRIPTION	QT
1	GR23478BC	CONTROL PANEL UNIT	1
2	GR23479	WIRING UNIT	1
3	SL04223	SCREW	10
4	SL23183	SWITCH	2
5	SL23872	POTENTIOMETER	1
6	SL23821	KNOB	1
7	SL23474	PUSH-BUTTON	2
8	SL23031-1	(RETRO)REFLECTOR / REFLEX R	1
8a	SL23413	LAMP	1
9a	SL23689	PUSH-BUTTON	1
9b	SL23955	PUSH-BUTTON	1
9c	SL23956	PUSH-BUTTON	2
	SL23461	PUSH-BUTTON	1
	SL23461-1	PUSH-BUTTON	1
10	SL23461-3	PILOT LIGHT	1
	SL23462-2	(RETRO)REFLECTOR / REFLEX R	1
	SL23462	PUSH-BUTTON	1
	SL23461-2	(RETRO)REFLECTOR / REFLEX R	1
11	SL23461-3	PILOT LIGHT	1
	SL23461-4	LAMP	1
	SL23462-1	PUSH-BUTTON	1
12	SL23902	ADESIVE LABEL	1
13	SL09750	PLATE	1
14a	SL09284	HANDLE	1
14b	SL23459	CONNECTOR	1
15	SL09917	PLATE	1
16	SL09528	SUPPORT	3
17	SL14230	TERMINA	1

pl1061 aa SN from 96D673

ELECTRIC UNIT 2

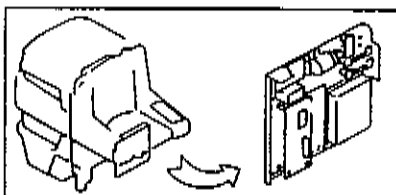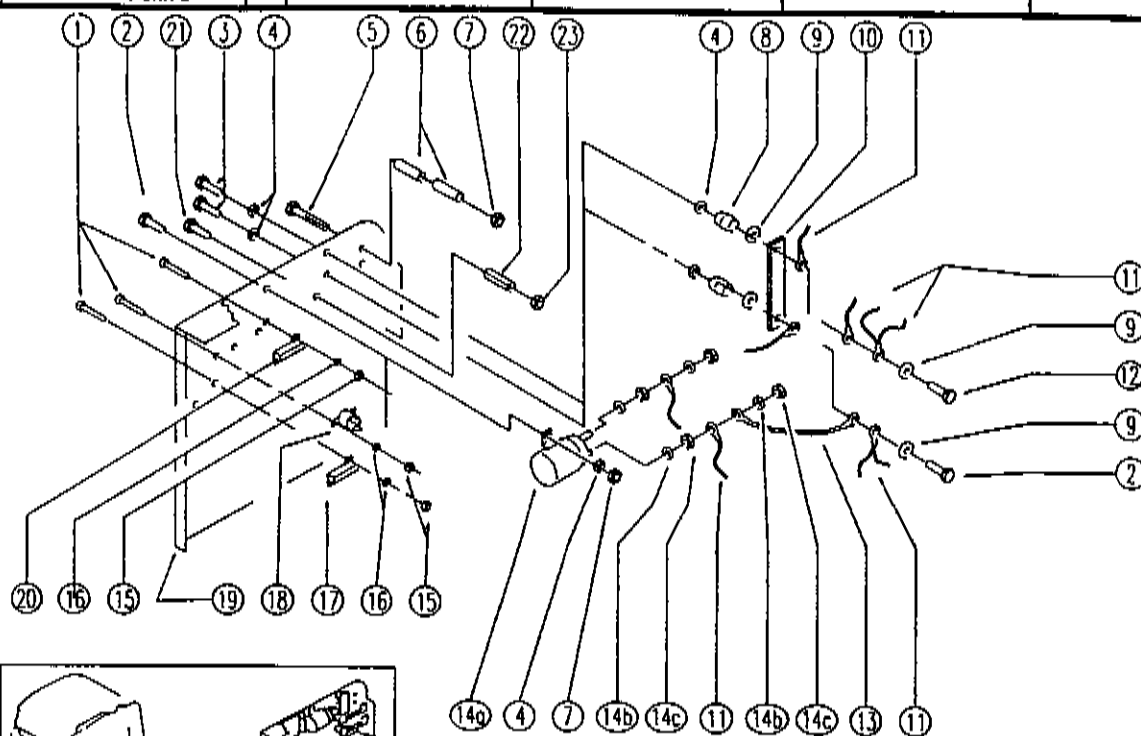

REF.	CODE	DESCRIPTION	QT
1	SL04179	SCREW	12
2	SL04082	SCREW	3
3	SL04010	SCREW	2
4	SL06004	WASHER	6
5	SL04196	SCREW	2
6	SL07176	SPACER	4
7	SL06058	NUT	4
8	SL23103	INSULATOR	2
9	SL06016	WASHER	4
10	SL23589	BRIDGE / JUMPER	1
11	GR23479	WIRING UNIT	1
12	SL04002	SCREW	1
13	SL23125	SHUNT	1
14A	SL23371	TELESWITCH	1
14B	SL06002	WASHER	4
14C	SL05004	NUT	4
15	SL05019	NUT	12
16	SL06002	WASHER	12
17	SL23957	RESISTANCE	1
18	SL23961	THERMOSTAT	2
19	SL09882	PLATE	1
20	SL23969	RESISTANCE	1
21	BL04047	SCREW	1
22	SL07337	SPACER	1
23	SL05039	NUT	1


REF.18
TAB.2

1 2 3 4 5 6 7 8 9 10 11 12 13 14

REF. CODE	DESCRIPTION	QT
1 SL04092	SCREW	6
2 SL08004	WASHER	8
3 SL23103	INSULATOR	4
4 SL08018	WASHER	9
5 SL23269	FUSE	1
6 CR2479	WIRING	1
7 SL04180	SCREW	2
8 SL23589	BRIDGE / JUMPER	1
9 SL08034	NUT	1
10 SL08019	WASHER	1
11 SL23081	BRIDGE / JUMPER	1
12 SL08032	WASHER	1
13 SL04088	SCREW	1
14 SL23606	FUSE	1


pl1063 aa SN from 96D673

ELECTRIC UNIT 4




REF.	CODE	DESCRIPTION	QT
1	SL04018	SCREW	12
2	SL04108	SCREW	8
3	SL14184	SPACER	12
4	SL23361	GEARCASE / BOARD	1
5	SL00009	WASHER	12
6	SL04009	SCREW	12
7	SL23571	GEARCASE / BOARD	1
8	SL23924	GEARCASE / BOARD	1
9	SL05034	NUT	8
10	GR23479	WIRING UNIT	2
11	SL23478	GEARCASE / BOARD	1
12	SL23884	FUSE CARRIER	2
12b	SL23883-2	LID	2
13	SL23144	FUSE	1
14	SL23144	FUSE	1
15	SL23144	FUSE	1
16	SL23144	FUSE	1
17	SL23147	FUSE	1
18	SL23145	FUSE	1
19	SL23144	FUSE	1

DESCRIPTION:	SQUEEGEE PEDAL
--------------	----------------

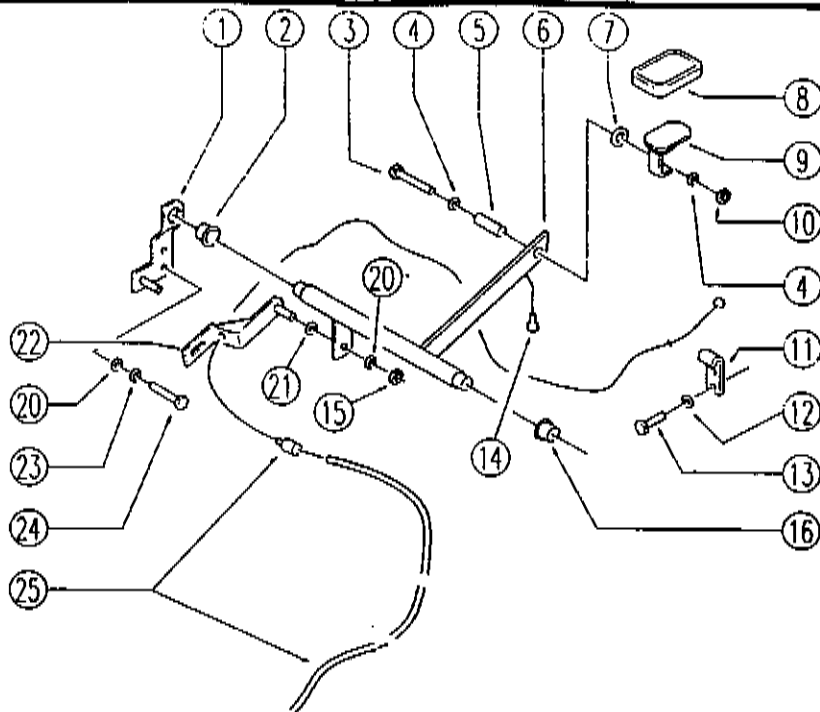


REF.	CODE	DESCRIPTION	QT
1	SL09738	PLATE	1
2	SL12037	BEARING	1
3	SL04073	SCREW	1
4	SL06004	WASHER	2
5	SL07311	SPACER	1
6	SL09738	LEVER	1
7	SL06068	WASHER	1
8	SL20013	RUBBER	1
9	SL09741	TREADLE	1
10	SL08041	NUT	1
11	SL09740	BLOCK	1
12	SL06016	WASHER	2
13	SL04223	SCREW	2
14	SL14309	RUBBER	1
15	SL06039	NUT	1
20	SL06003	WASHER	3
21	SL06064	WASHER	1
22	SL09766	PLATE	1
23	SL06002	WASHER	2
24	SL04004	SCREW	2
25	SL14224	CABLE	1
16	SL12035	BEARING	1

SQUEEGEE LIFT

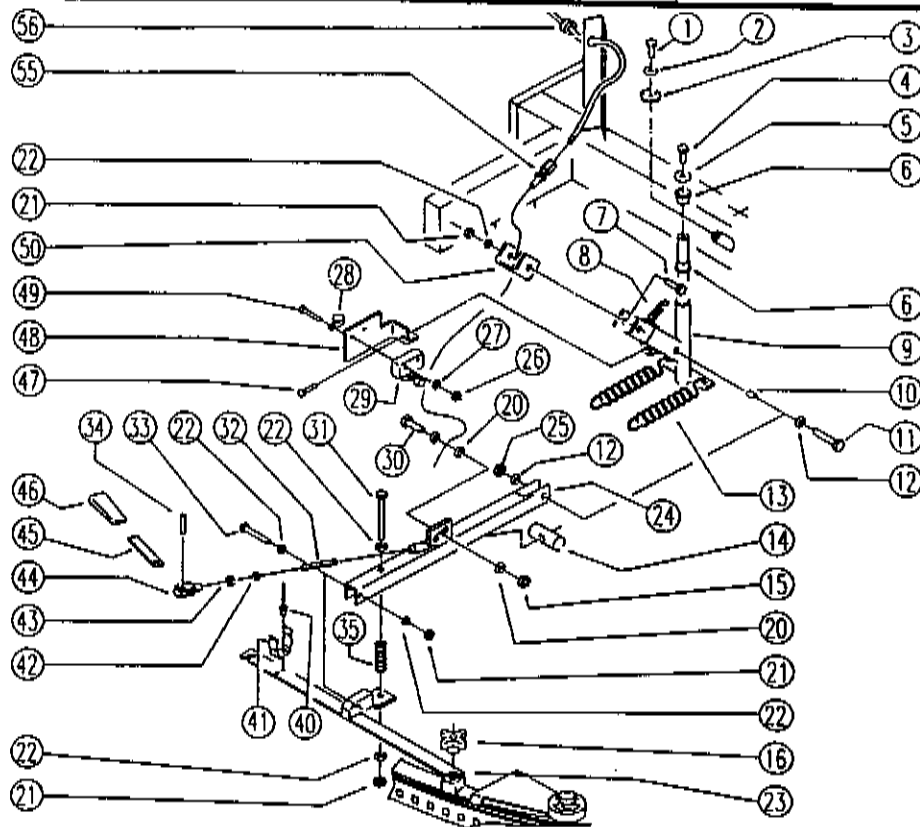


REF.	CODE	DESCRIPTION	QT
1	SL04180	SCREW	1
2	SL08039	WASHER	1
3	SL06092	WASHER	1
4	SL04010	SCREW	1
5	SL06068	WASHER	1
6	SL12035	BEARING	2
7	SL04024	SCREW	2
8	SL13016	SPRING	1
9	SL09789	BRACKET	1
10	SL12036	BEARING	2
11	SL04312	SCREW	1
12	SL08011	WASHER	2
13	SL13065	SPRING	2
14	SL09537	HOOKING	1
15	SL05019	NUT	1
16	SL20004	HANDLE	2
20	SL06005	WASHER	2
21	SL08039	NUT	4
22	SL06003	WASHER	6
23	SL09753	BRACKET	1
24	SL09657	LEVER	1
25	SL05032	NUT	1
26	SL05034	NUT	2
27	SL08019	WASHER	2
28	SL14180	CLAMP	1
29	SL23200	MICROSWITCH	1
30	SL07310	SCREW	1
31	SL04248	SCREW	1
32	SL04281	BAR	1
33	SL04164	SCREW	1
34	SL11083	PIN	1
35	SL13083	SPRING	1
40	SL14006	TEAR RIVET	2
41	SL09789	CLIP	1
42	SL08018	WASHER	1
43	SL05004	NUT	1
44	SL22001	FORK	1
45	SL09721	LEVER	1
46	SL20021	HANDLE	1
47	SL04079	SCREW	1
48	SL09742	SUPPORT	1
49	SL04107	SCREW	2
50	SL09737	SUPPORT	1
55	SL14222	REGISTER	1
56	SL23050	FAIRLEAD	1

pl1070 aa SN from 98L000

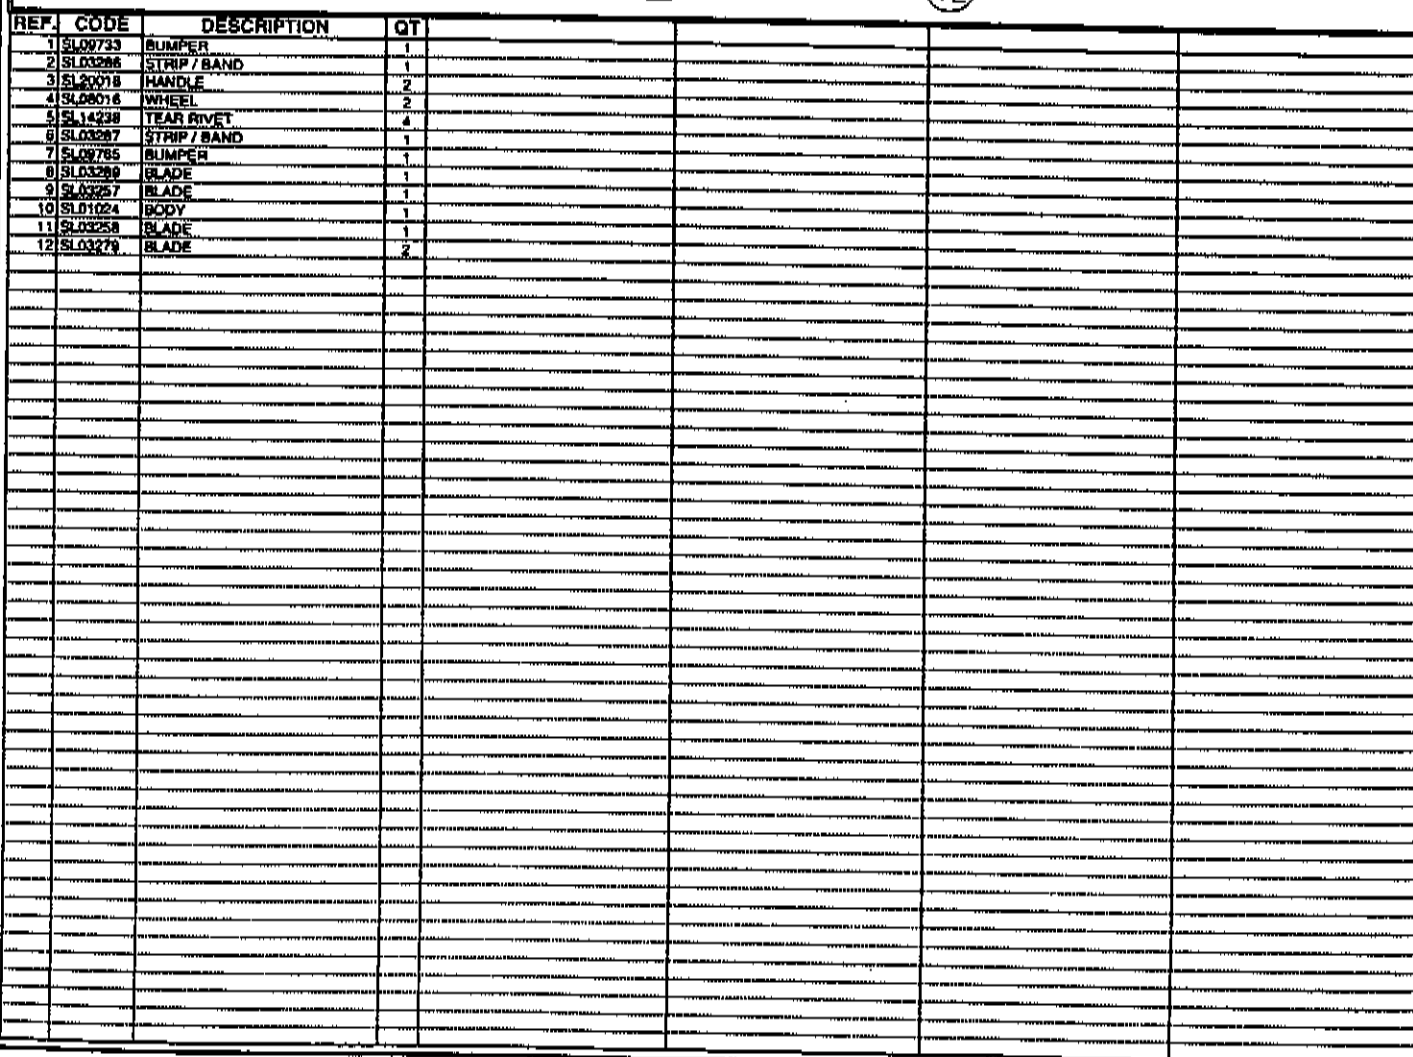SOUFÈGE 95


DESCRIPTION:	HEAD 78: FLAP AND BOX
--------------	-----------------------

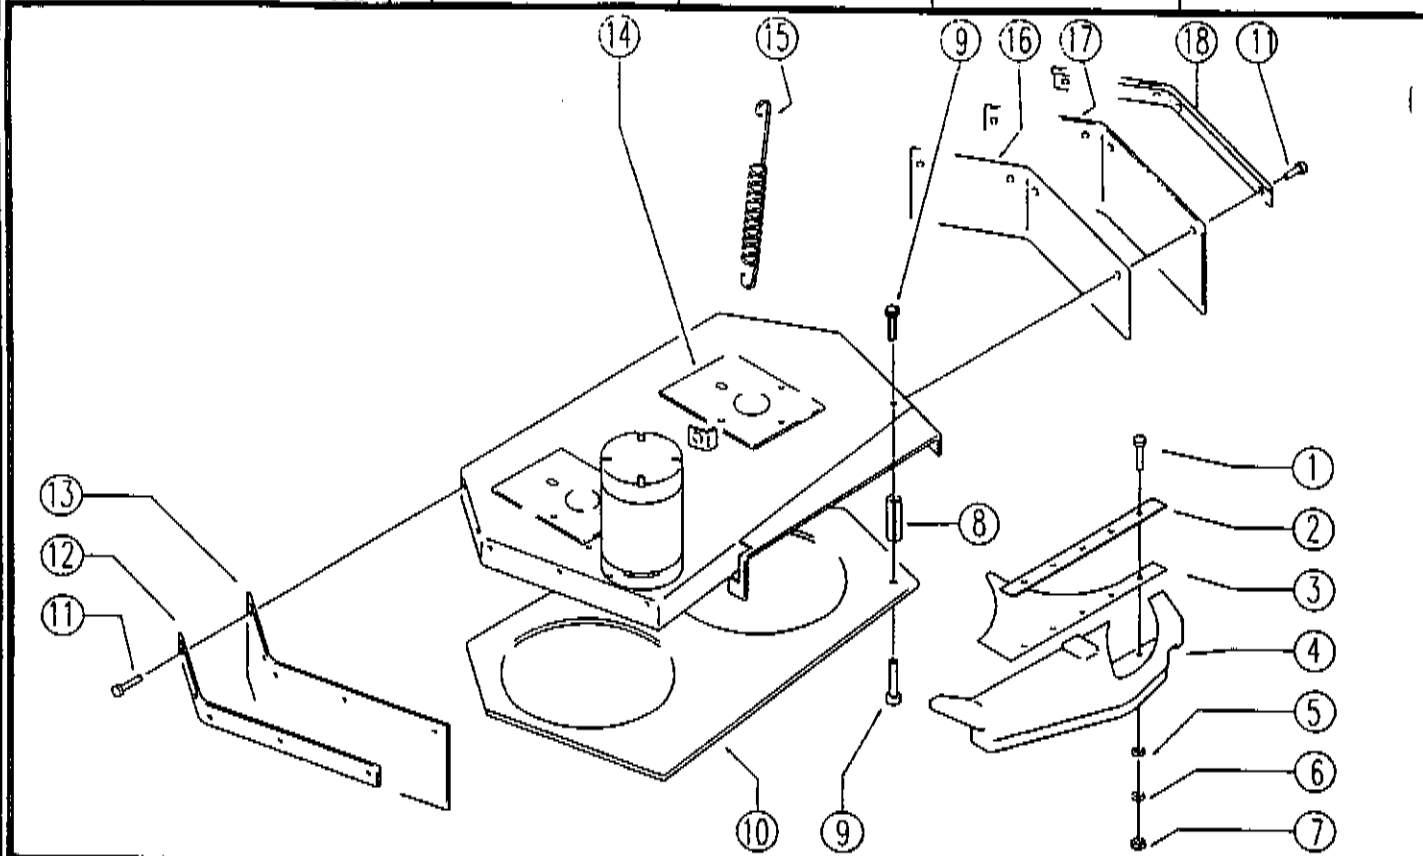

REF.	CODE	DESCRIPTION	QT
1	SL04032	SCREW	6
2	SL11133	LAMINATION	1
3	SL17370	DUSTPAN	1
4	SL17390	CASE	1
5	SL08032	WASHER	8
6	SL08033	WASHER	5
7	SL05044	NUT	5
8	SL14205	SPACER	7
9	SL04006	SCREW	14
10	SL03245	GUARD	1
11	SLD4059	SCREW	9
12	SL17390	STRIP / BAND	1
13	SL03254	FLAP	1
14	SL03291	GASKET	2
15	SL13084	SPRING	1
16	SL17397	REINFORCEMENT	1
17	SL03253	FLAP	1
18	SL17391	STRIP / BAND	1

pl1072 aa SN from 98L000


CODE:		pl1072 aa SN from 98L000
DESCRIPTION:	HEAD TRIBBLE LCM AXLE	

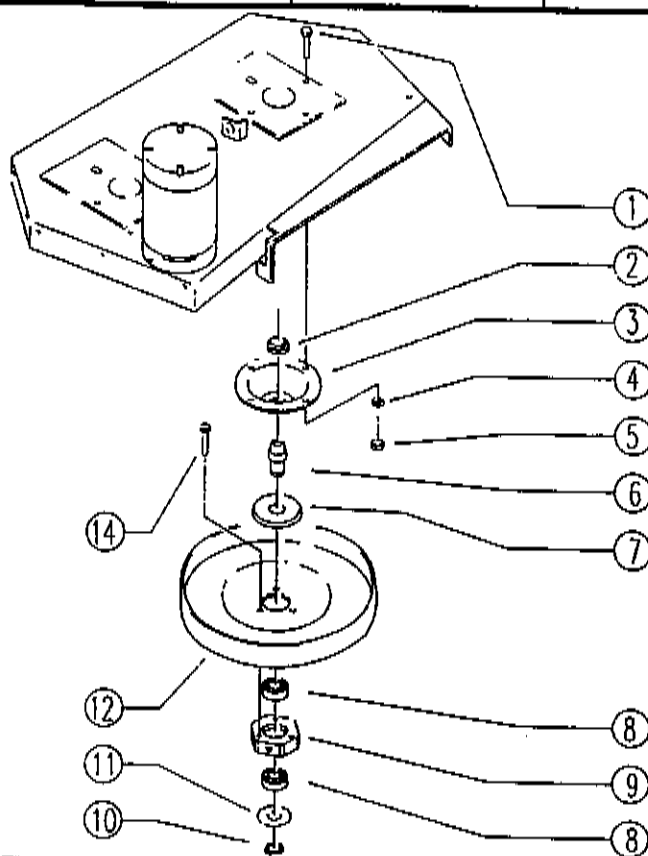

REF.	CODE	DESCRIPTION	QT
1	SL04971	SCREW	8
2	SL06049	NUT	2
3	SL15023	FLANGE	2
4	SL06003	WASHER	8
5	SL05001	NUT	8
6	SL07276	PIN	2
7	SL03269	GUARD	2
8	SL12025	BEARING	4
9	SL14204	HEXAGON	2
10	SL11096	RING	2
11	SL03247	GUARD	2
12	SL10053	PULLEY	2
14	SL04100	SCREW	6

pl1073 aa SN from 98L000

DESCRIPTION:	HEAD 78
--------------	---------

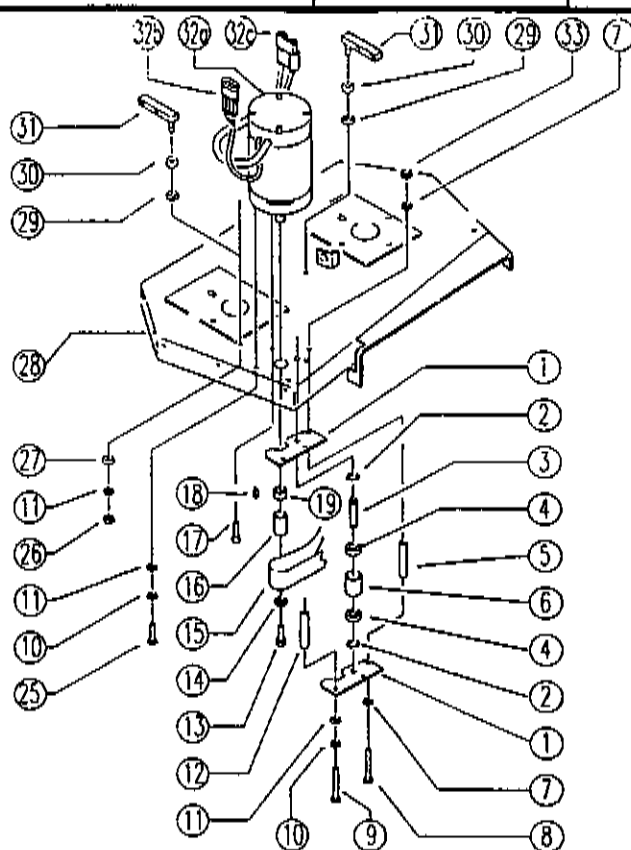

REF.	CODE	DESCRIPTION	QT
1	SL09622	PLATE	2
2	SL11086	RING	2
3	SL11041	PIN	1
4	SL12003	BEARING	2
5	SL07143	SPACER	1
6	SL10044	PULLEY	1
7	SL08004	WASHER	2
8	SL04324	SCREW	1
9	SL04049	SCREW	2
10	SL08002	WASHER	3
11	SL08003	WASHER	5
12	SL07234	SPACER	2
13	SL04086	SCREW	1
14	SL07186	WASHER	1
15	SL18024	BELT	1
16	SL07222	PULLEY	1
17	SL04283	SCREW	1
18	SL11010	TONGUE	1
19	SL10054	SPACER	1
23	SL04083	SCREW	1
26	SL05001	NUT	2
27	SL06064	WASHER	2
28	SL09683	PLATE	1
29	SL06062	WASHER	2
30	SL03209	RUBBER	2
31	SL09629	BRACKET	2
33	SL05011	NUT	1
32a	SL02113	MOTOR	1
32b	SL23527	CONNECTOR	1
32c	SL23010	CONNECTOR	1
32d	SL02113-1	MOTOR COAL	4

CODE:


pl1235 aa SN from 98A100

DESCRIPTION:


BRUSHES a340

POLYPROPYLENE - NYLON - NYLON
NYLON - NYLON


①

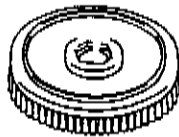POLYSHING - POLIERBURSTERN
SORGHO - FIBRA - BASSINA

②

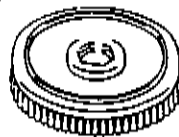TYNEX - TYNEX - TYNEX
TYNEX - TYNEX


③

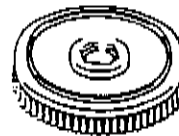

④

BLACK - SCHWARZ - NOIR
PAD - NERO


⑤

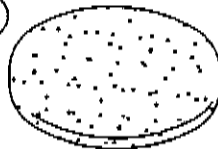GREEN - GRUEN - VERT
VERDE - VERDE

⑥

YELLOW - GELB - JEUNE
AMARILLO - GIALLO

⑦

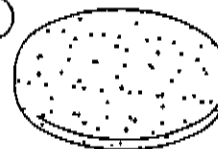

REF.	CODE	DESCRIPTION	QT
1	AL02903	POLYPROPYLENE BRUSH	
2	AL02911	POLYSHING BRUSH	
3	AL02904	TYNEX BRUSHES	
4	AL02905	PAD DRIVER	
5	AL02908	STRIPPING PAD (BLACK)	
6	AL02910	STRIPPING PAD (GREEN)	
7	AL02909	STRIPPING PAD (YELLOW)	

pl1276BC aa SN from 98L000

This diagram shows an exploded view of a mechanical assembly. The main body is a rectangular housing with a large circular opening on the front. A handle with a circular grip is attached to the side. A vertical rod with a threaded section and a circular disc at the bottom is shown in the foreground. A separate rectangular plate is shown at the top right. The assembly is mounted on a base with two large gears. The numbered callouts are: 1 (rectangular plate), 2 (top of housing), 3 (circular disc), 4 (side of housing), 5 (base), 6 (gear), 7 (rod), 8 (disc), 9 (base), 10 (rod), 11 (disc), 12 (rod), 13 (disc), 14 (rod), 15 (base), 16 (gear), and 17 (rod).


REF.	CODE	DESCRIPTION	QT
1	SL17365F	LID	1
2	ALM714BC	DIAPHRAGM / MEMBRANE	1
4	SL17340BC	TANK	1
5	SL25187	LABEL	1
8	SL17342BC	TANK / BOX	1
7	SL06852F	HANDLE	1
8	SL06878F	FRAME	1
9	SL25359	LABEL	1
10	SL06866F	STEERING COLUMN	1
11	SL06897F	STEERING COLUMN	1
12	SL25177	LABEL	1
13	SL25053	ADESIVE LABEL	1
14	SL25362	ADESIVE LABEL	1
15	SL17337BC	CASE	1
16	SL25911	LABEL	1
17	SL25912	LABEL	1


wd2/126-1 aa SN from 98t-217

DESCRIPTION:		CODE:	wd2/126-1 aa SN from 98F217	
REF.	CODE	DESCRIPTION	QT	
di		DIODE		
A		MOTOR		
AA		WARNING HORN		
ALT		ACTUATOR		
AN#		CONNECTOR		
AST		ACTUATOR		
C		CAPACITOR		
CF#		CONNECTOR		
CM#		CONNECTOR		
CPDS		GEARCASE / BOARD		
CT		GEARCASE / BOARD		
F#		FUSE		
FCH		PUSHLOCK		
H		TIME COUNTER (OPTIONAL)		
IAC		SWITCH		
IA		SWITCH		
IB		SWITCH		
L		FLASHING LIGHT		
LE		PROBE		
MCB		MICROSWITCH		
MFM		MICROSWITCH		
MS		MOTOR		
MT		MOTOR		
PP		POTENTIOMETER		
PSD		PUMP		
PT		POTENTIOMETER		
R		RESISTANCE		
R1		RESISTANCE		
R2		RESISTANCE		
R3		RESISTANCE		
R4		RESISTANCE		
R7		TRIMMER		
SB		PILOT LIGHT		
SHUNT		SHUNT		
SPJ		SENSOR		
T		SENSOR		
TS		TELESWITCH		
CPA		GEARCASE / BOARD		
CA		GEARCASE / BOARD		
D		DIODE		
IT		PUSH-BUTTON		
IUL		PUSH-BUTTON		
PAA		PUSH-BUTTON		
PMB		PUSH-BUTTON		
MB		MICROSWITCH		
MA		MICROSWITCH		
MSP		MICROSWITCH		
TM		THERMOSTAT		
SSB		SENSOR		


CODE:**DESCRIPTION:**

WIPIING DIAGRAM

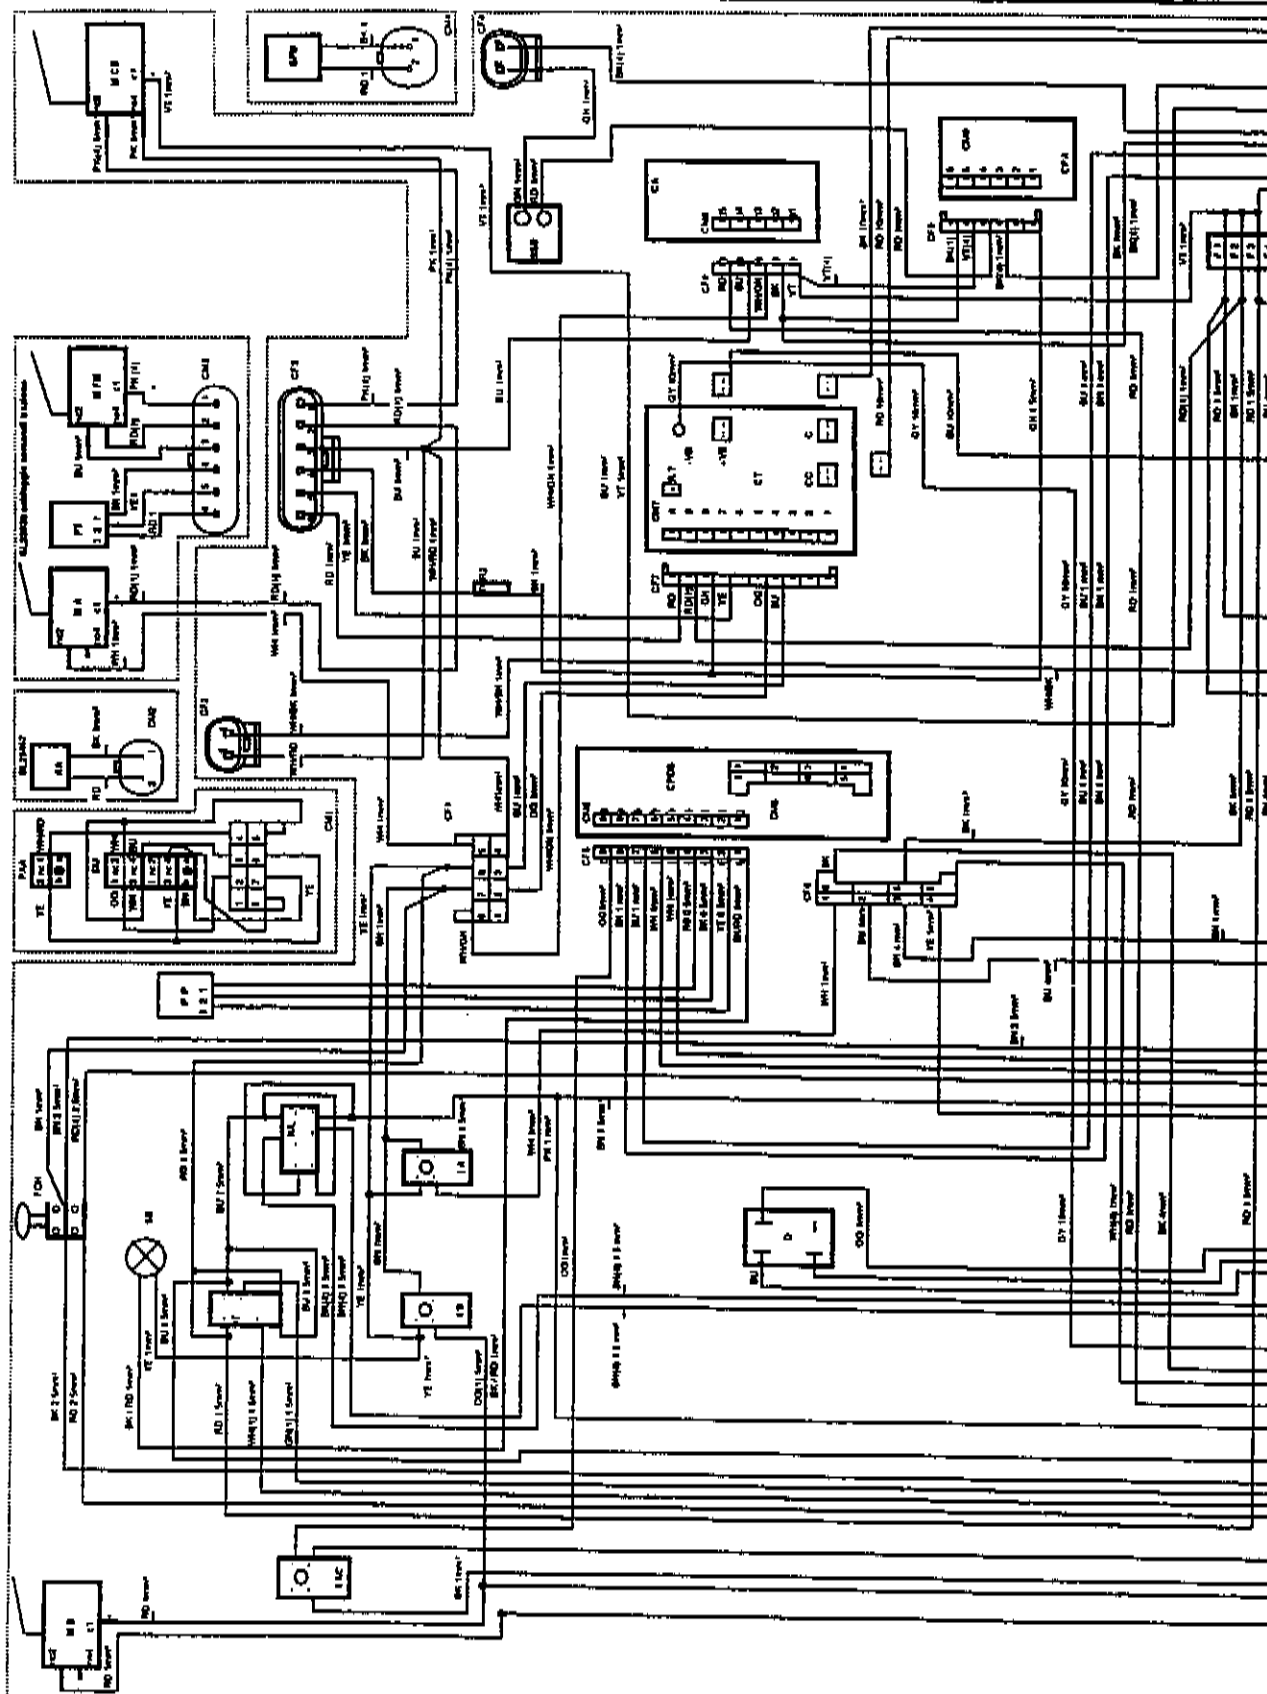

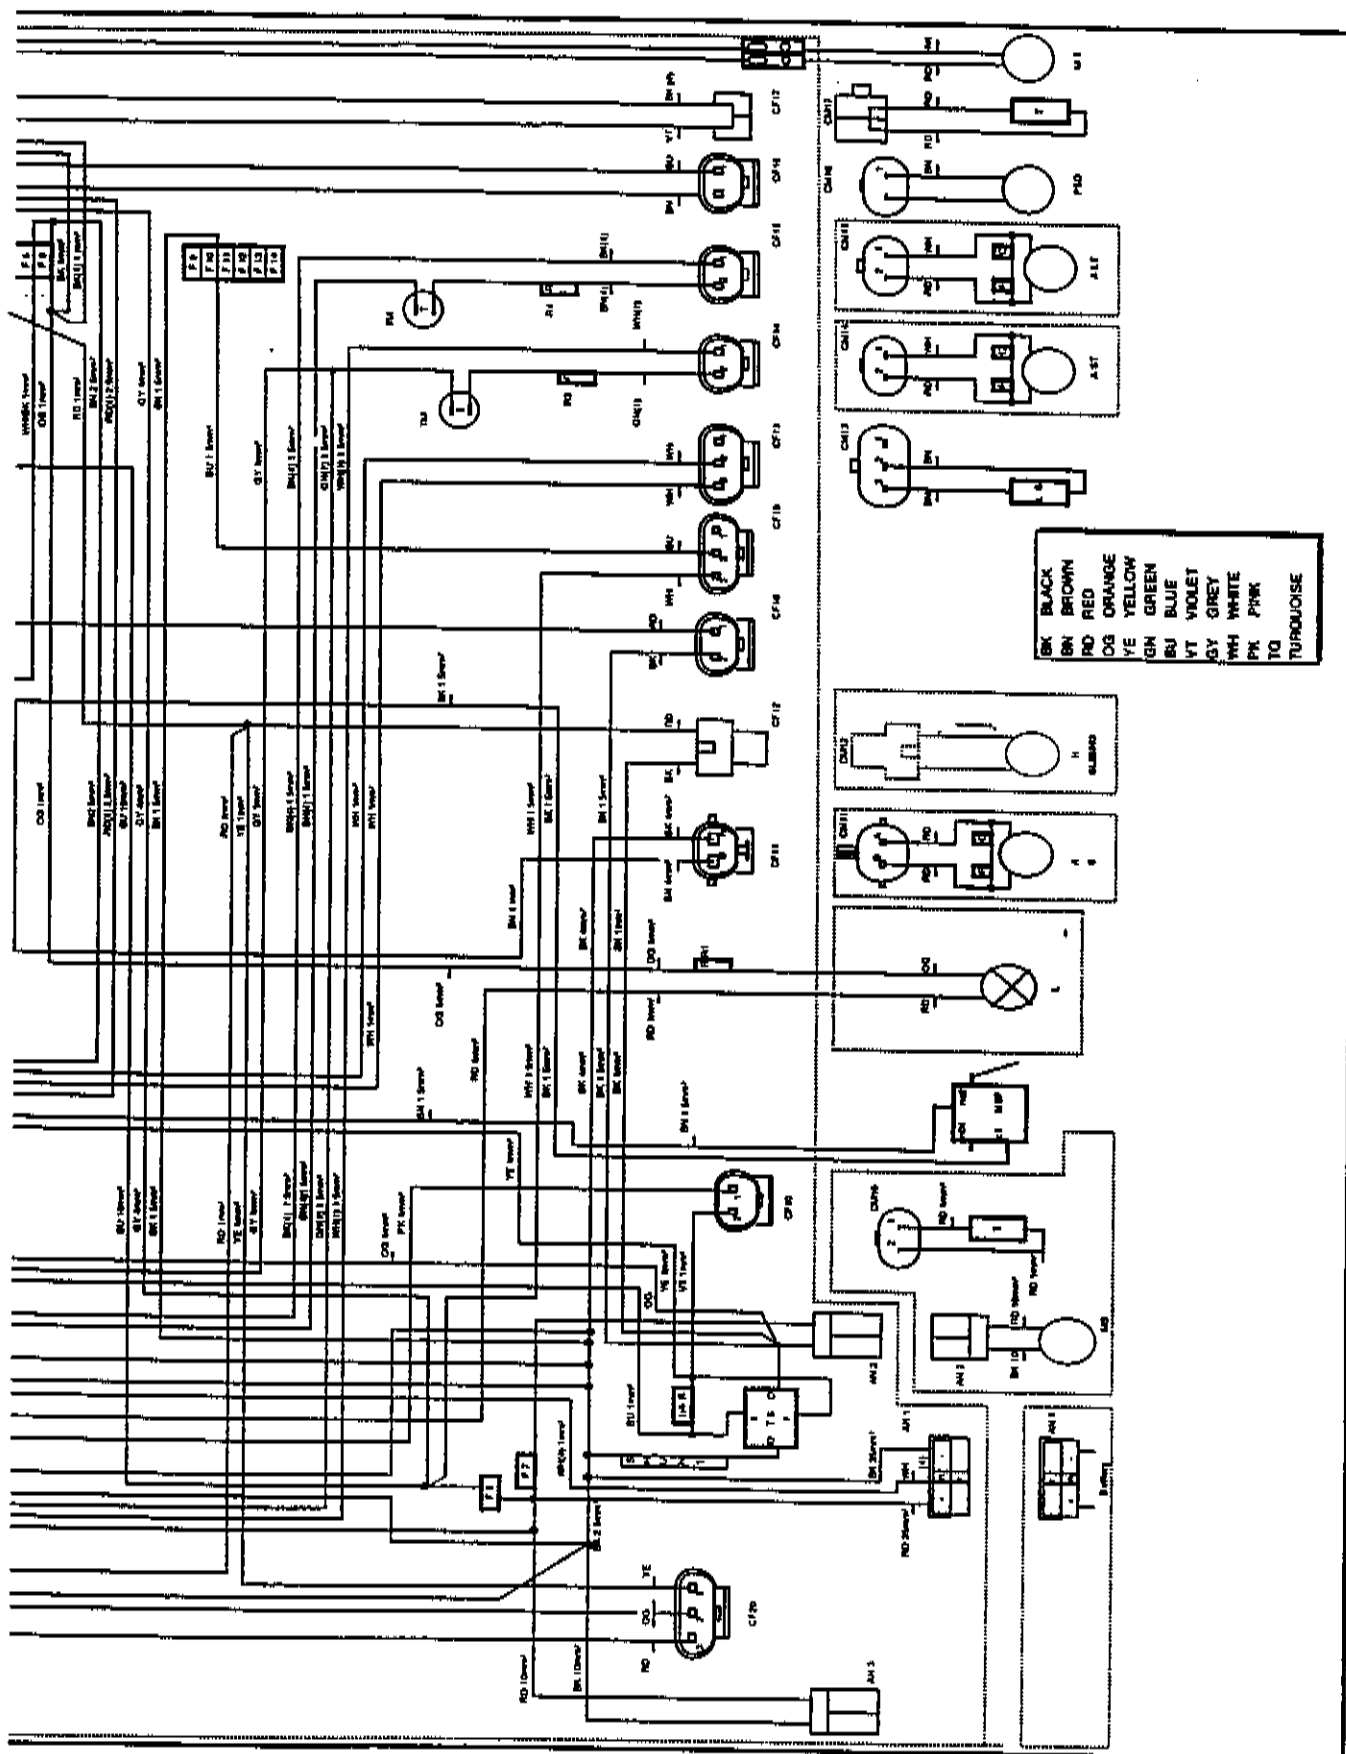

DRIVE

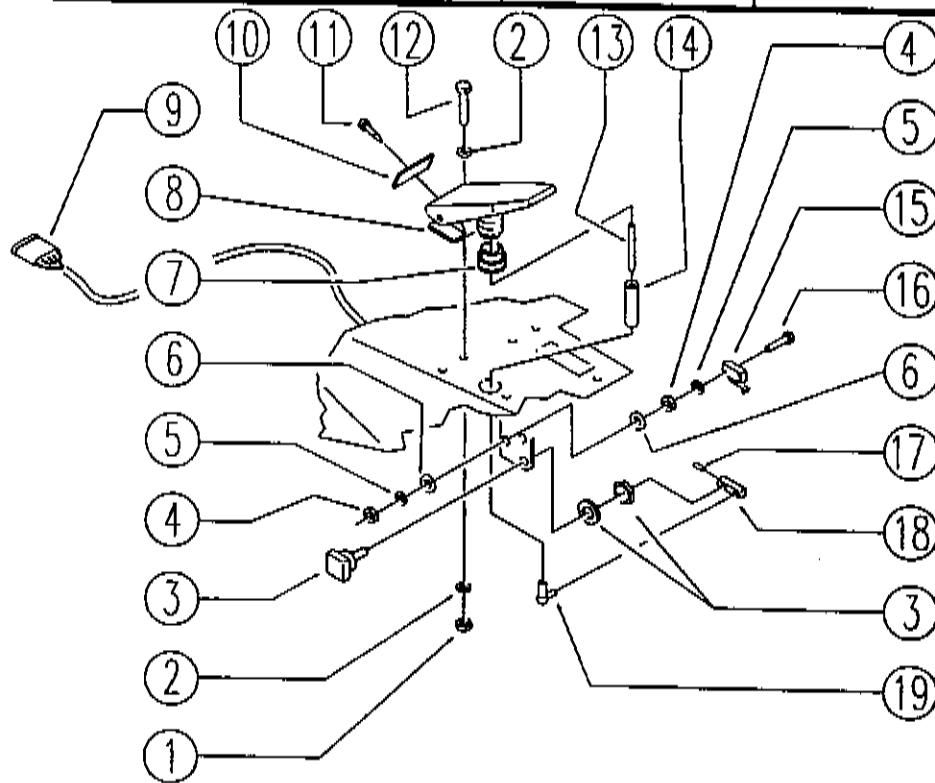


REF.	CODE	DESCRIPTION	QT
1	SL05011	NUT	2
2	SLD6004	WASHER	4
3	BL23124	POTENTIOMETER	1
4	SL05009	NUT	4
5	SLD6024	WASHER	4
6	SLD6019	WASHER	4
7	SL07289	BUSHING	1
8	SL22012	TREADLE	1
9	SL22028	WIRING	1
10	SL17483	SPACER	1
11	SLD4173	SCREW	1
12	SLD4048	SCREW	2
13	SLD4250	BAR	1
14	SL07334	SPACER	1
15	SL23021	MICROSWITCH	1
16	SLD4018	SCREW	2
17	SL11623	SPLIT PIN	1
18	SL09505	LEVER	1
19	SL22005	ARTICULATION	1

CODE:

pi1052 aa SN from 96D673

DESCRIPTION:

BRAKE

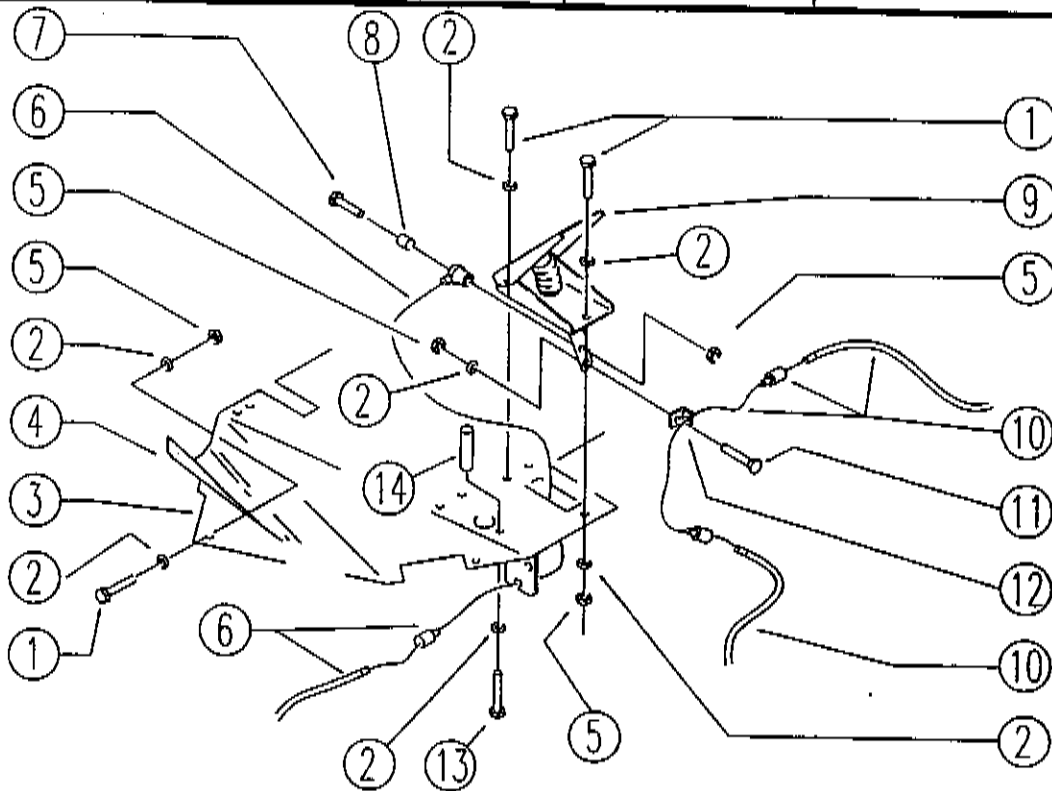

REF.	CODE	DESCRIPTION	QT
1	SL04048	SCREW	10
2	SL06004	WASHER	22
3	SL06688	FOOTBOARD	1
4	SL03842	COVERING / COATING	1
5	SL08011	NUT	12
6	SL14210	CABLE	1
7	SL04190	SCREW	1
8	SL07318	BUSHING	1
9	SL22011	THREAD	1
10	SL14216	CABLE	1
11	SL04259	SCREW	1
12	SL08723	BLOCK / LOCK	1
13	SL04190	SCREW	1
14	SL07333	SPACER	1

WE RESERVE THE RIGHT TO MODIFY SPECIFICATIONS WITHOUT NOTICE OR OBLIGATION



BETCO
1001 Brown Avenue - Toledo, Ohio 43607 - 1-800-777-9343